





















BUTTONS AND LIGHTS

BUTTONS AND DIALS			
	"On-off" button		Navigation button
	Favourite button		To adjust selected settings
	Steam button		Start or stop button
	Maintenance and settings button		Coffee grind setting dial.

SYMBOLS	CONSTANT	FLASHING	MEANING
	•		The coffee grounds collector is missing or positioned incorrectly.
		•	Empty the coffee grounds collector + empty the drip tray
		•	Refill the water tank / The water tank is positioned incorrectly.
		•	Place a container (600ml minimum) under the steam and coffee outlets
	•		Maintenance cycle in progress
		•	Malfunction: unplug the machine for ten seconds then plug it back in
	•		Install water filter cartridge
	•		Rinsing cycle in progress
	•	•	Clean machine with KRUPS cleaning tablet
		•	Cleaning cycle interrupted
	•	•	Descale machine with KRUPS descaling sachet
		•	Descaling cycle interrupted
	•		Adjust the water hardness
	•		Enable automatic rinsing of the coffee circuit when the machine starts.
	•		Program auto-off settings
	•	•	Adjust the coffee temperature/Pre-heating indicator
	•		Favourite A or B - 2 drinks can be saved in memory
		•	Registering favourite A or B
	•	•	Preparation progress indicator
PRESS START	•		Press the START-STOP button
[000]	•		Coffee strength indicator
[888]			Volume or time indicator
[LP 1]	•		Number of cups (1 or 2)
			Active use indicator
			Maintenance or settings selection

MACHINE TOP TIPS

1 Light-medium roasts are the best to start with if you are new to the own ground coffee experience, this will help you find the best flavour and aroma of coffee for you.

2 Use your machine on a regular basis once or twice a day, leaving your machine for longer periods of inactivity can be bad for the quality of the output. If you are leaving your machine for longer periods (eg to go on holiday) empty the water tank and remove the beans (store in an airtight container in a cool, dry place). Ensure you clean your machine before first use upon return by running a full coffee through to clean the system.

3 Do a quick rinse when you use the steam arm to remove milk residue. A quick clean after every use can increase the longevity of your machine. Just rinse off and wipe the arm before going to enjoy your fresh coffee.


4 When using a new bean roast, start at the most coarse grind setting, and adjust to taste. Be careful of flavoured beans or extra dark roast coffee as some beans become oily in the roasting process and can cause blockages in the grinders. The finer the grind setting the slower the flow of coffee to your cup. Always make a long coffee using a coarse grind.

5 Good Crema indicates all is well; if you have a good crema on the espresso you've made, it's a good indication that the brewing cycle and machines are well maintained. Follow the machine's cleaning cycle indicators, as they are defined based on the water quality and heat preferences you have selected when installing the machine. Ensure you check your water quality every season (Spring, Summer, etc) as it can change through the year depending on your water provider.




To purchase accessories and key maintenance products for your product go to:
www.krups.co.uk/accessories-store/home
www.krups.co.uk

KRUPS
DELIGHT IN THE DETAILS

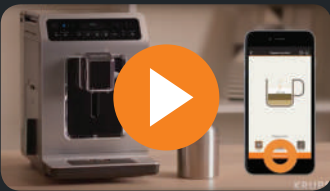

 For instructional videos on how to setup your machine and maintenance, please visit the KRUPS Youtube Channel (you can find this by searching "krups uk" on YouTube.com) or Download the KRUPS Espresso Application



For any help or support, please call our KRUPS in house customer service team on:
0345 330 6460 (UK) or 01 677 4003 (ROI)




**QUICK START GUIDE
& MAINTENANCE**

KRUPS
DELIGHT IN THE DETAILS



KEEP THIS GUIDE SOMEWHERE SAFE SO YOU HAVE IT AT HAND WHEN CLEANING YOUR KRUPS MACHINE

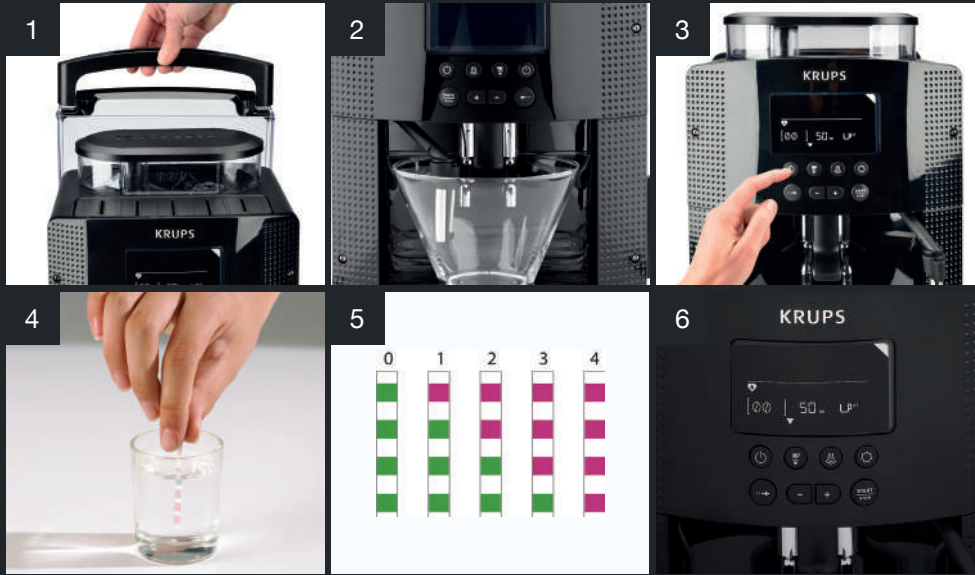

MACHINE START UP

Congratulations on purchasing your new KRUPS Arabica bean to cup machine! We recommend you follow the steps below to get your machine up and running as soon as possible.

SWITCHING ON THE MACHINE

- 1 Fill the water tank.
- 2 Place a 600ml container under the steam and coffee outlets.
- 3 Press the button once to switch on the machine and follow the instructions on the screen.

CHECKING YOUR WATER HARDNESS

- 4 Fill a glass of water and insert the water hardness test strip. You can find the test strip in your KRUPS welcome pack.

- 5 After 1 minute read the level of water hardness.

Degree of water hardness	Appliance setting
Soft	0
Slightly Hard	1
Moderately Hard	2
Hard	3
Very Hard	4

SETTING YOUR WATER HARDNESS

- 6 To access machine maintenance and settings press the button.

You can move through the settings using the button until you reach the icon.

You can set your water hardness between 0 and 4 by pressing the + or – buttons according to your water hardness test results.

To leave the settings mode press .

For access and information for all machine settings see the full user manual.

INSTALLING THE WATER FILTER

Remove the water tank from the back of the machine.

- 7 Set the month when the cartridge is fitted (*left side of the cartridge*) by turning the grey ring located on the upper end of the filter. The month when the cartridge should be replaced is indicated on the right side of the cartridge or indicated by your machine.

- 8 Screw the filter cartridge into the bottom of the water tank using the accessory supplied with the cartridge.

Fill and replace the water tank.

Enter the machines settings via the button. Click the navigation button until you select the filter cartridge installation symbol . Place a 600ml container under the steam nozzle and press . Once the cycle is finished the screen will return to the coffee menu.

We recommend your machine is always fitted with a water filter, which is replaced every 3 months or when prompted by your machine.

PREPARING A DRINK

Now that you have set up your Arabica machine, it's time to prepare your drink. Simply follow the instructions below.

ENJOY A BLACK COFFEE

- 9 Remove the lid of the coffee bean container and add coffee beans (*max. 250 g*).
- 10 Place the cup(s) under the coffee nozzles. You can lower or raise the coffee outlet according to the size of your cup or glass.

Select the coffee strength with the + button to increase or the - button to decrease.

Press the navigation button to set the volume: select the volume of water displayed on the screen using the + or – buttons.

Press the button to start your drink.

ENJOY TWO COFFEES AT ONCE

Follow the steps above to set your coffee strength and volume.

Press the navigation button to set the number of cups: select 1 or 2 cups using the + or – buttons.

Press the button to start your drinks.

ENJOY FROTHY MILK

- 11 Press the button. The machine will launch a pre-heating stage. Once this is complete **'PRESS START'** will appear on the screen.

- 12 Pour the milk into your milk jug and immerse the nozzle in the milk. Only fill the jug half way to leave room for the milk to froth.

- 13 Press the button to begin frothing the milk. Gradually lower the milk jug as the froth accumulates.

Once the milk is frothy enough, press the icon to stop the steam.

We recommend cleaning the steam nozzle once you are ready to switch off your machine and after preparing a milk based drink. See *"Cleaning your steam nozzle"* for further instructions.

SAVE YOUR FAVOURITE DRINK

Press on the to select the or favourite icon.

Select the coffee strength, volume and quantity as instructed in the ***"preparing drink section"*** above.

Hold down on button until the or icons flash. The icon will stop flashing after the drink favourite has been registered.

To access your favourite drink Press on the to select your or favourite.

MACHINE MAINTENANCE

To ensure that your machine is running smoothly for years to come, we recommend you follow the maintenance steps below.

CLEANING YOUR STEAM NOZZLE

We recommend cleaning the milk nozzle once you are ready to switch off your machine or after preparing a milk based drink.

To remove milk residue from the steam nozzle. Place a container under the steam nozzle and press the .

button followed by . Allow the steam to run for 10 seconds and to stop.

- 14 After use, remove and rinse the steam nozzle. Wash it with water and washing up liquid using a small non-abrasive brush to remove the milk residue.

- 15 Ensure that the air holes are not blocked by any milk residue. If necessary, unblock them using the needle supplied with the machine.

DESCALING YOUR MACHINE

We recommend descaling your machine when the alert appears on the display. The frequency of descaling is dependent on your machine usage.

The icon will appear when the machine needs to be descaled. To begin the descaling program enter the machines settings via the button. Click the navigation button until you select symbol .

- 16 Fill the water tank up to the **'CALC'** line, dissolve one sachet of KRUPS descaling powder (*40g*) into the tank and replace onto the machine. Remove, empty and replace the drip tray and place a 600ml container under the steam nozzle. Once complete press the to continue with the descaling program.

The first phase (8 minutes) of the program will begin. At the end of this stage the and symbol will flash. Empty and return the 600ml container under the steam nozzle. Empty, rinse, refill and replace the water tank. Once complete press the to continue with the descaling program.

The second phase (6 minutes) will begin. At the end of this stage the symbol will appear. Empty and return the drip tray and 600ml container under the steam nozzle. Once complete press the to continue with the descaling program.

The final phase (6 minutes) will begin and perform a full rinse of the machine.

We recommend installing a water filter to protect your machine against the build up of scale, see *"Installing the water filter"* section under *"Machine Start up"*.

CLEANING YOUR MACHINE

We recommend running a cleaning program when prompted by your machine or following a long period of inactivity.

The icon will appear when the machine needs to run the cleaning program. To begin the cleaning program enter the machine's settings via the button. Click the navigation button until you select symbol.

Remove, empty and replace the coffee ground collector, drip tray and 600ml container. Fill up the water tank.

- 17 To access the maintenance hatch remove the cup tray located at the top of your machine. To do this, press down on the back corners of the cup tray to release the cover.

- 18 Insert a KRUPS Cleaning tablet into the cleaning tablet funnel. Once complete press the to continue with the cleaning program.

The first phase (10 minutes) of the program will complete. At the end of this stage the machine will beep for 10 seconds. Empty and return the 600ml container and the drip tray. Once complete press the to continue with the cleaning program.

The final phase (3 minutes) will begin and perform a full rinse of the machine. Once the cleaning cycle is finished, the coffee menu will appear.

EMPTYING YOUR COFFEE GROUNDS

- 19 & 20 When the light flashes you must remove, empty and clean both the coffee grounds collector and the drip tray.