 


Tefal®

 
VERSALIO

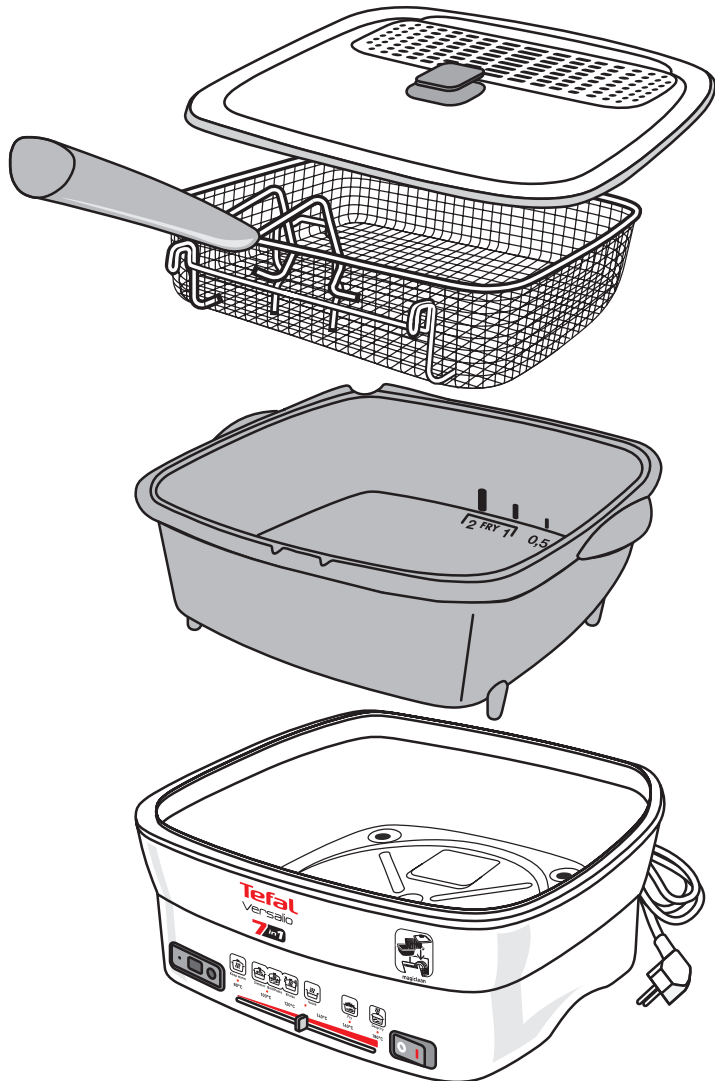




⚠ WARNING



- This product contains a coin battery.
- The battery is hazardous and is to be kept away from children (whether the battery is new or used).
- The battery can cause serious injuries if it is swallowed or placed inside any part of the body.
- **Seek immediate medical attention** if it is suspected the battery has been swallowed or placed inside any part of the body.
- Dispose of used battery immediately.
- Contact Australian Poison Hotline 131126 or for New Zealand 0800 764 766.

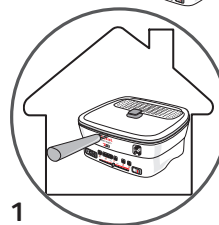

1

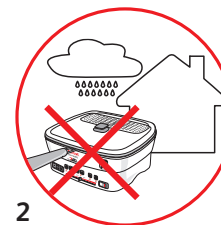 


2

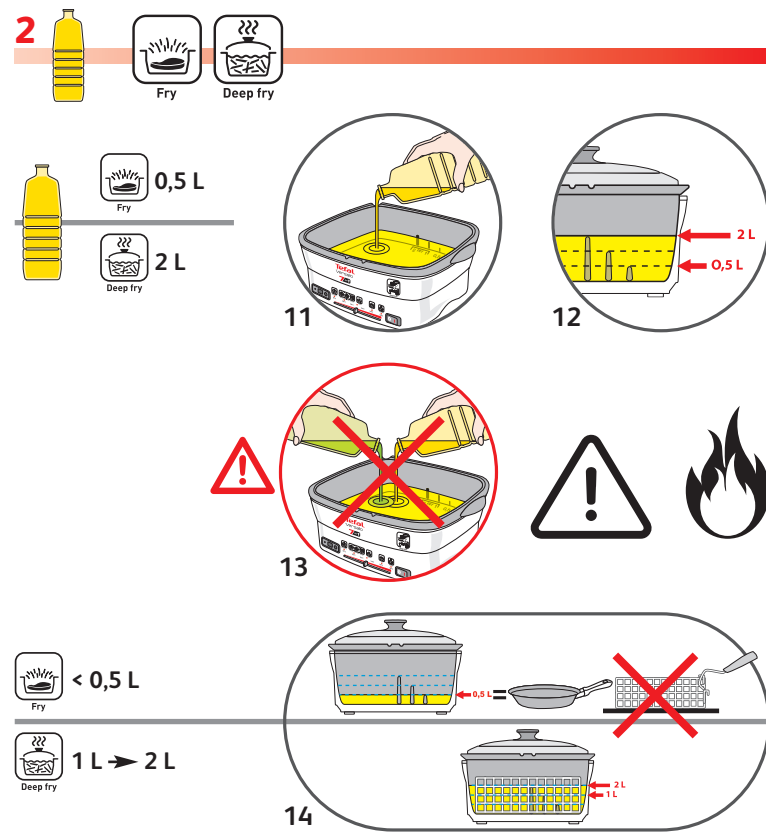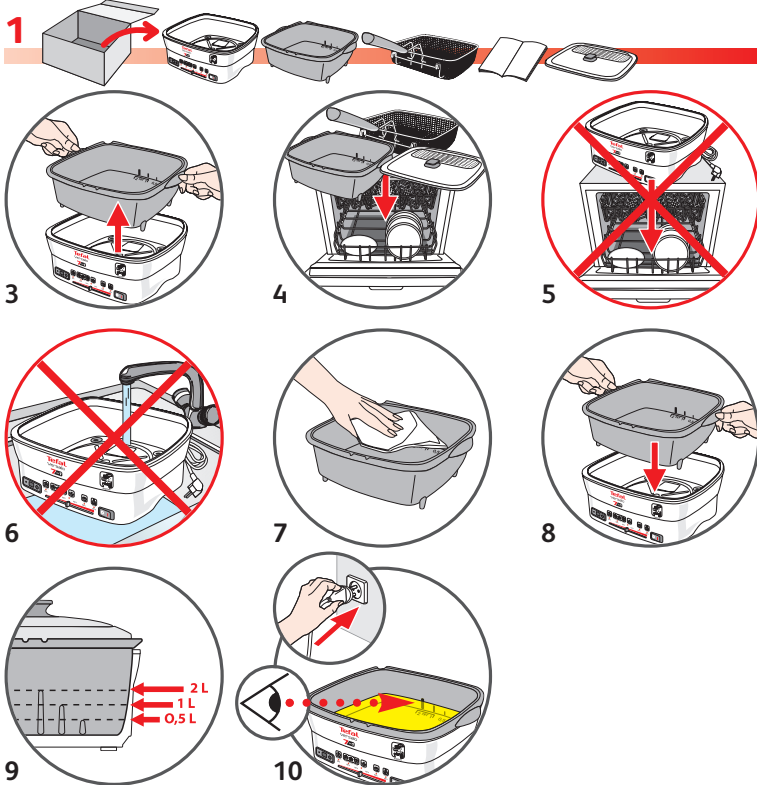  


3



 Deep fry



Max 1000 g

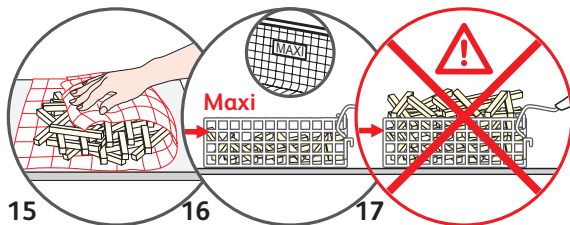 


15

16

17



 
Max 750 g

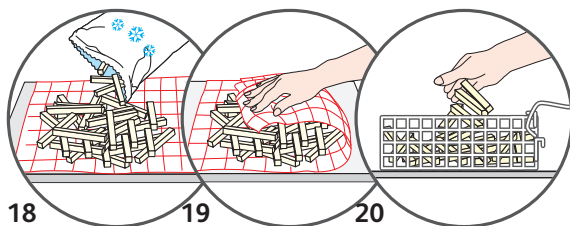

18

19

 20

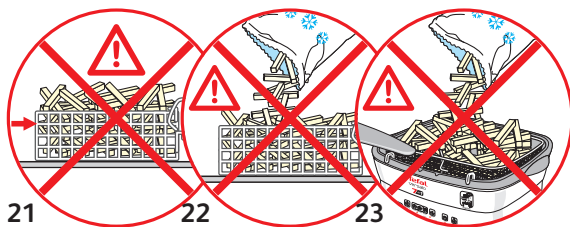


21

22

23



 Deep fry

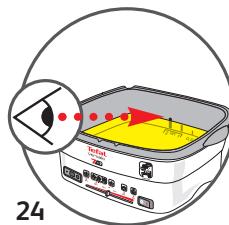


24




25



 
26

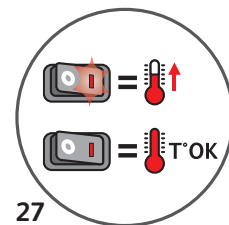


27

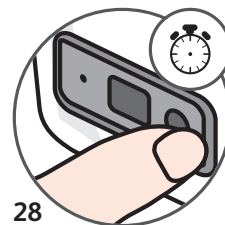 


28

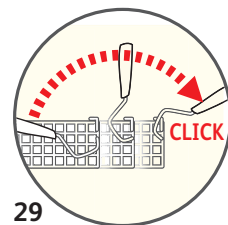 


29

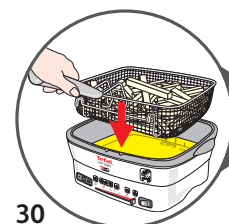 

30

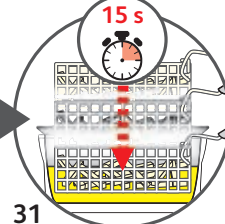 

31

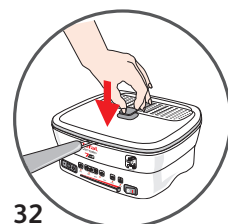 




32



33



   34

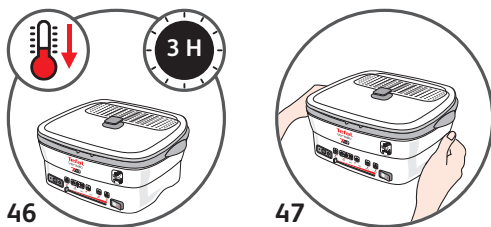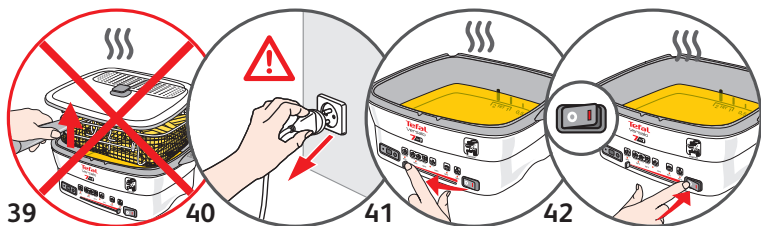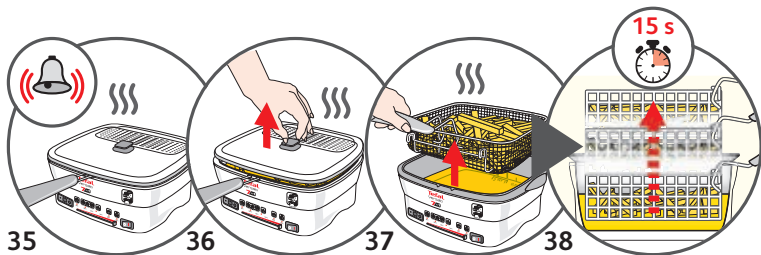

Deep fry

Deep fry / 170 °C

	2 L maxi			
	1000 g	16-17 min	4	
	550 g	11-12 min		
	750 g	15-16 min		
	400 g	8-9 min		



Fry

Fry / 160 °C

	0,5 L maxi		
	15 min	4	
	30 min	6	



7



Sauté

Sauté / 130 °C

x1	10 min	4




9



Boil/Pasta

Boil/Pasta

30 min	4

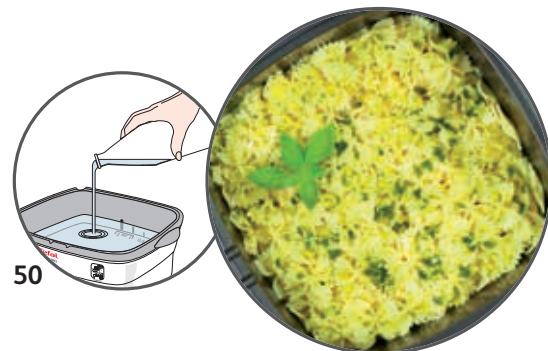 


8



Simmer

Simmer / 100 °C

30 min	4

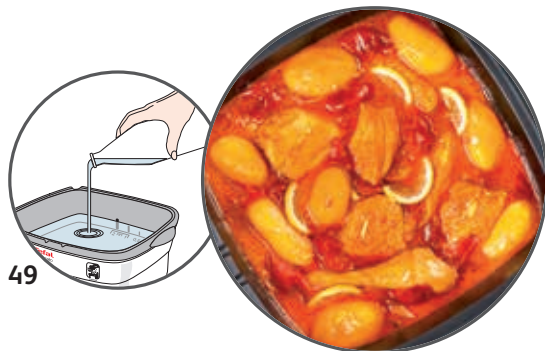 

10





Braise

Braise


40 min	4



  
11

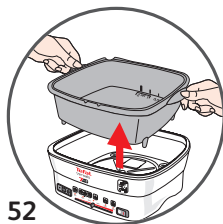

52

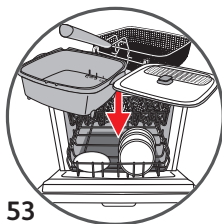 


53

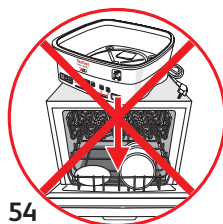 

54



 55

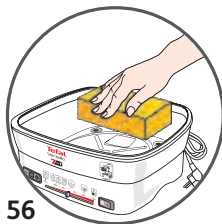

56



57

 
 


58

12



59

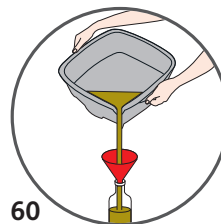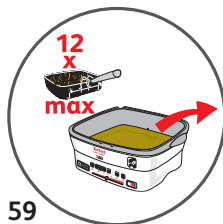

60



61

 
 


62




63


13

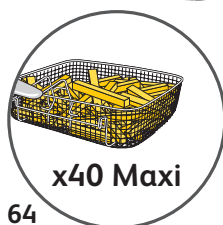


64

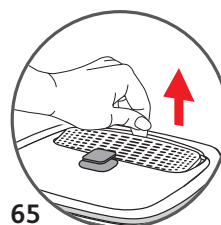 

65

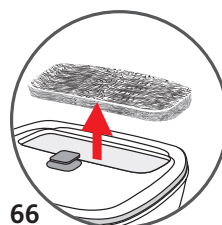 

66

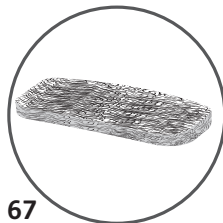 

67



68

