


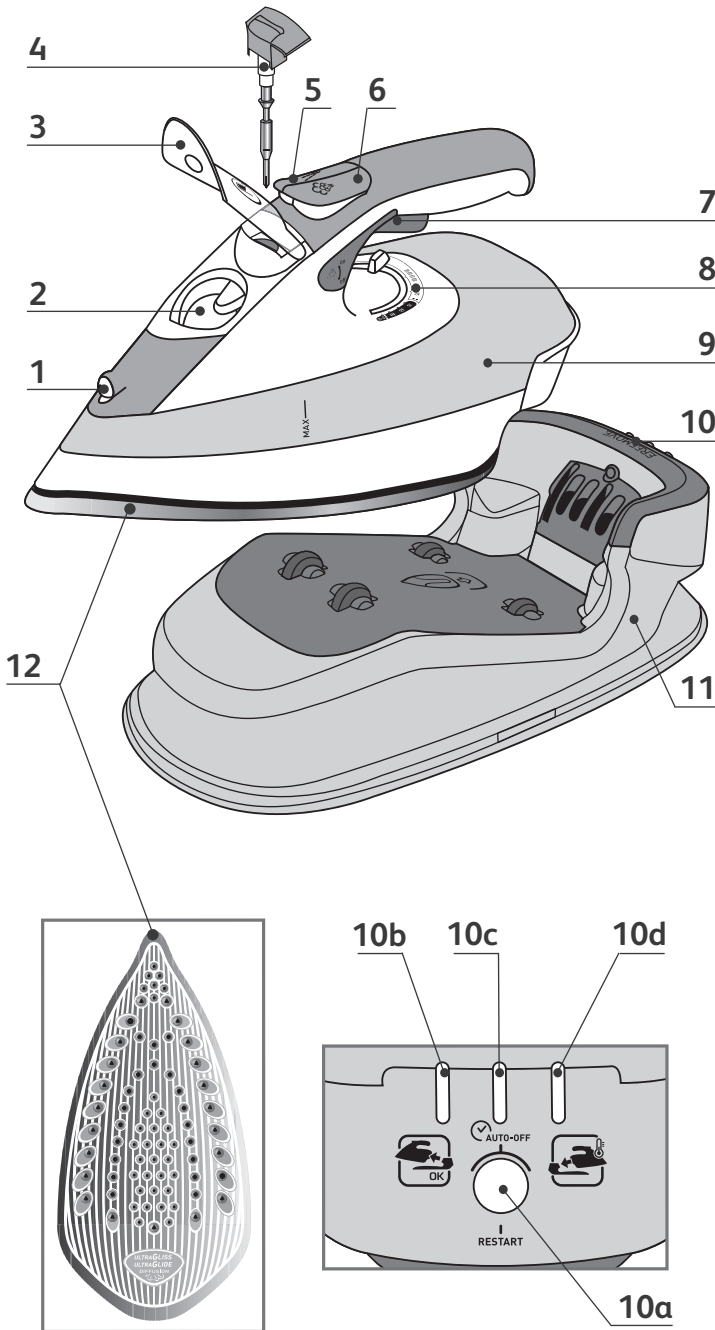

www.tefal.com



Preparation A 다림질 전 준비하기

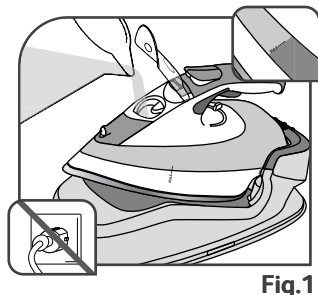


Fig.1

Using the appliance B 사용 방법

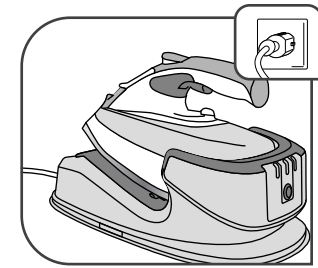


Fig.2

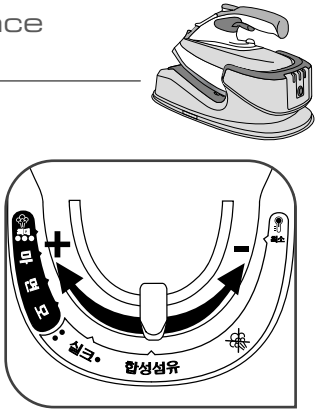


Fig.3

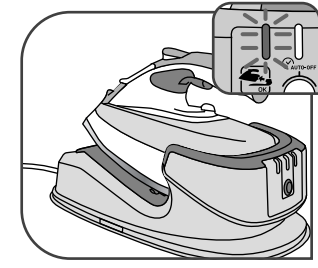


Fig.4

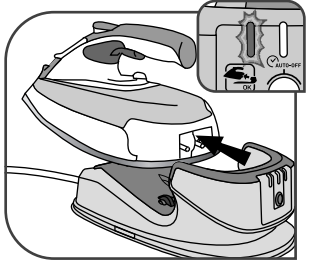


Fig.5

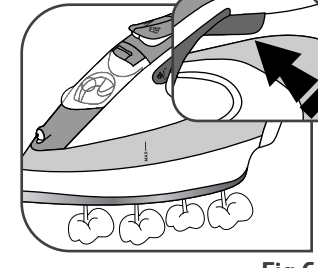


Fig.6

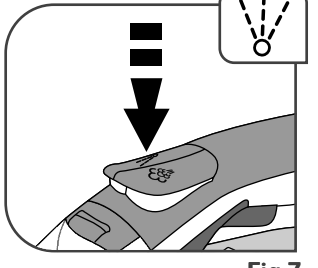


Fig.7

Cleaning and maintenance C 다리미 관리요령

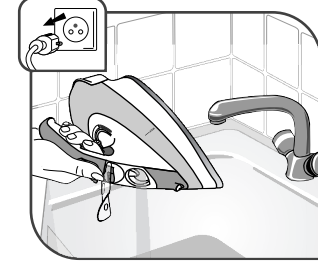


Fig.8

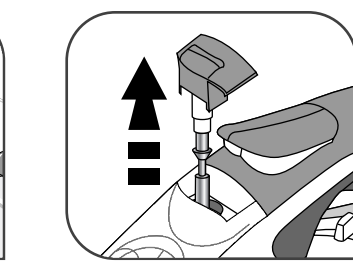


Fig.9

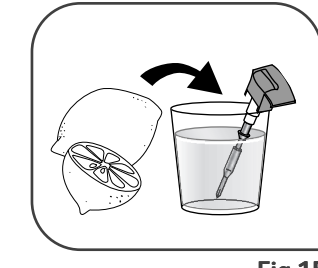


Fig.10

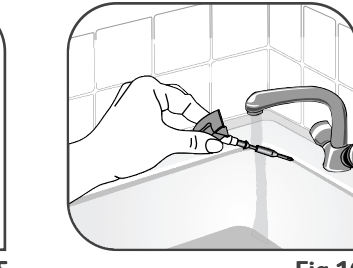


Fig.11

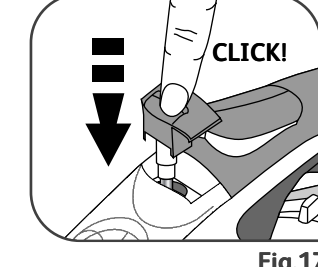


Fig.12

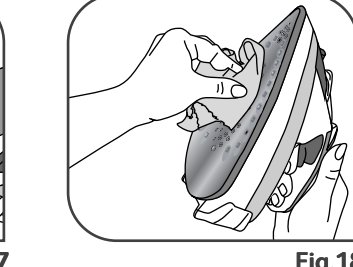


Fig.13

Storing the appliance D 다리미 보관하기

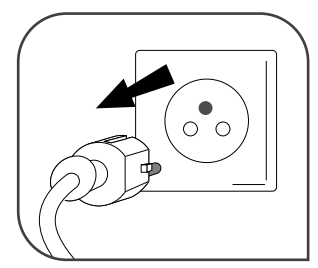


Fig.14

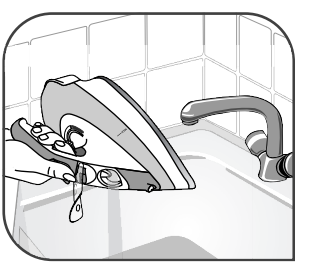


Fig.15

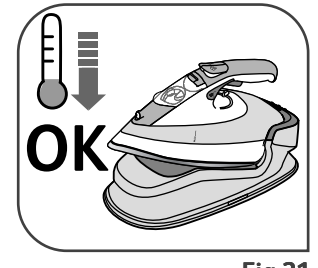


Fig.16

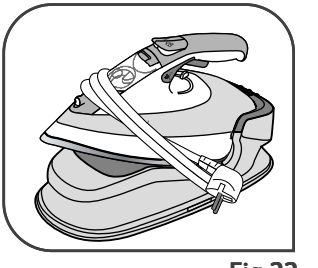


Fig.17

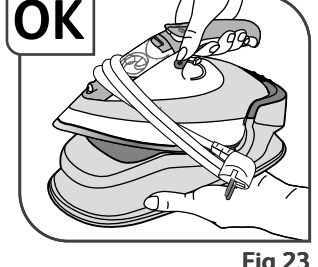


Fig.18

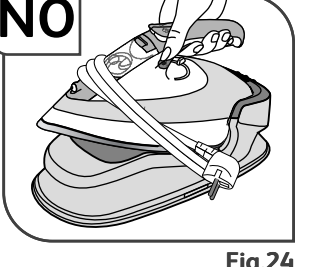


Fig.19

For your safety

- Read the instructions carefully before using your appliance for the first time and retain for future reference.
- This appliance complies with the technical rules and standards for safety currently in force (Electromagnetic Compatibility, Low Voltage, environment).
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Warning! The voltage of your electrical installation must correspond to that of the iron (220V). Connecting to the wrong voltage may cause irreversible damage to the iron and will invalidate the guarantee.
- This appliance must always be plugged into an earthed socket. If using a mains extension lead, ensure that it is correctly rated (16A), with an earth.
- If the electrical cord becomes damaged, it must be immediately replaced by an Approved Service Centre to avoid any danger.
- The appliance should not be used if it has fallen, if it has obvious damage, if it leaks or does not operate correctly. Never dismantle your appliance: have it inspected by an Approved Service Centre, so as to avoid any danger.
- Never immerse the appliance in water!
- Do not unplug your appliance by pulling on the cord. Always unplug your appliance: before filling or rinsing the water tank, before cleaning it, after each use.
- Never leave the appliance unattended when it is connected to a power source; if it has not cooled down for approximately 1 hour.
- The sole plate of your iron and the base plate can become very hot and may cause burns: do not touch them. Never allow the electrical cord to come into contact with the soleplate of the iron, and always wait for your appliance to cool down completely before putting it away. Your appliance gives off steam, which may cause burns, especially when you are ironing on a corner or edge of the ironing board. Never direct the steam towards people or animals.
- Your iron and its base must be used and placed on a stable surface. When you place the iron on its base, ensure that the surface on which the base is placed is stable.
- This product has been designed for domestic use only. Any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and the guarantee will not apply.

Environment protection first!

- Your appliance contains valuable materials which can be recovered or recycled.
- Leave it at a local civic waste collection point.

Description

- Spray nozzle
- Tank filling inlet
- Water tank filling flap
- Anti-scale valve
- Spray Button
- Turbo Button
- Variable steam trigger
- Thermostat control
- Water tank
- Display panel
- Auto-off restart button
- Green light "Iron ready"
- Orange light "Auto-off on"
- Red light "Recharge iron"
- Base
- Ultraglide® Diffusion soleplate

Before first use

- Please read these instructions carefully. Remove any labels from the appliance before first use.
- Before using your iron's steam functions for the first time, we recommend that you activate the steam function in a horizontal position for a few moments away from your laundry. Switch the thermostat control to "MAX" or "•••••" and hold down the variable steam trigger. Under the same conditions, press the Turbo button several times.
- There may be a release of smoke, a harmless odour and a light spray of particles when you use your appliance for the first time. This has no effect on the use of the iron and will disappear quickly.

Preparation

What water to use?

- Your appliance has been designed to operate using untreated tap water. However, it is necessary to operate the Self-Clean function regularly in order to eliminate hard water deposits from the steam chamber.
- Heat concentrates the elements contained in water during evaporation. The types of water listed below may contain organic waste, mineral or chemical elements that can cause spitting, brown staining or premature wear of the appliance: water from clothes dryers, scented or softened water, water from refrigerators, batteries, air conditioners, rain water, boiled, filtered or bottled water. These types of water should not be used in your iron. Also only use distilled or demineralised water as advised below.
- If your water is very hard, it is possible to mix untreated tap water with store-bought distilled or demineralised water in the following proportions : 50 % tap water, 50 % distilled or demineralised water.

Filling the water tank

- Fill the tank up to the "MAX". Never fill the appliance by holding it directly under the tap. Do not remove the anti-scale valve to fill the water tank.
- Unplug the base from the socket.
- Place the iron on the base.
- Open the tank filling flap and fill the tank up to "MAX" – fig.1.
- Close the tank filling flap.

Using the appliance

Turning on

- Connect the base to a 220V socket – fig.2.
- Adjust the temperature – fig.3. Your iron has the Autosteam Control function. Your iron automatically and accurately determines the exact temperature and steam flow that are suitable, for each selected fabric, in order to guarantee the best results.
- The flashing green light – fig.4 located on the display panel on the back of the base indicates that the iron is heating up. When the light stops flashing – fig.5, the iron is ready to use.
- Do not place the iron on its heel during the resting period, but on its base – fig.9.

Operation of the display panel

- Flashing green light: iron is heating up – fig.4.
- Fixed green light: iron is ready – fig.5.
- The flashing red light after around 30s when the iron is not on its base: the iron must be replaced on the base for recharging – fig.10.
- Flashing orange light (according to model): Auto-Off function activated (see the section "Auto-Off safety") – fig.12.

RECOMMENDATIONS

- Your iron heats up quickly: start with fabrics that are ironed at a low temperature and finish with those that require a higher temperature.
- If you lower the thermostat temperature, place the iron on its base and wait (around 10 minutes) until the temperature drops to avoid burning the fabric.
- If you are ironing a fabric with a mixture of fibres: adjust the ironing temperature to the most delicate fibre. For delicate fabrics we recommend testing the fabric first on an inconspicuous place (eg. Inside the hem).

Steam / Dry Ironing

- Check if there is water in the tank before using the variable steam trigger or the TURBO and SPRAY functions.
- During your ironing session, hold down the trigger located under the handle (at least 5s at a time) to obtain a constant flow of steam and guarantee the best results – fig.6. When the trigger is released, the steam stops.

Using the TURBO and SPRAY function

- For the TURBO function, set the thermostat control to "MAX" or "•••••". Press the TURBO button from time to time – fig.8.
- When you dry or steam iron, press the SPRAY button several times to wet the fabric and remove resistant creases – fig.7.

Vertical steam ironing

- Hold the iron a few centimetres from the fabric to avoid burning delicate fabrics. Every five pulses return the iron to a horizontal position.
- Hang the garment on a hanger and hold the fabric slightly taut with one hand. The steam is very hot, so you should always do this with the garment on a hanger – never iron clothes which someone is wearing – fig.11.
- Set the thermostat control to "MAX".
- Press the turbo button in pulses – fig.8 and move the iron from the top to the bottom – fig.11.

Additional functions

Auto-Off safety

- During normal use, the Auto-off light is off!
- The electronic system cuts the base power supply and the orange light located on the display panel flashes if the iron remains still for more than eight minutes on the base.
- To restart the iron, simply press the RESTART button on the display panel – fig.12.

Maintenance and cleaning

Cleaning the anti-scale valve (once a month)

- Be careful! Never touch the end of the rod. The iron will not function without the anti-scale valve.
- Disconnect the base and empty the tank – fig.13.
- To remove the anti-scale rod, set the thermostat at "MAX", press the valve extraction button and pull gently upwards – fig.14.
- Let the rod soak for four hours in a glass of white vinegar or natural lemon juice – fig.15.
- Rinse the rod under tap water – fig.16.
- Reposition the anti-scale rod; push the valve until it clicks – fig.17.

Self-cleaning

- Self-cleaning delays scaling on the iron. To prolong the life of the iron, perform a self-clean once a month.
- Plug in the base and reconnect your iron.
- Allow the iron to heat up on the base, with the tank full and the thermostat set to maximum.
- When the green light on the display panel stops flashing, take the iron and place it over a sink. Remove the anti-scale valve (see previous chapter).
- Hold down the variable steam button and shake the iron gently and in a horizontal position, over the sink, until some of the water (and the impurities) have drained through the soleplate.
- At the end of this operation, put the anti-scale valve back in place; push down until it clicks – fig.17.
- Place the iron back on the base to dry the soleplate.

Cleaning the soleplate

Your steam iron is fitted with an Ultraglide soleplate:

- Never use aggressive or abrasive products.
- When the soleplate is still warm, wipe with a damp cloth – fig.18.

Storing your iron

- Set the thermostat control to "MIN". Disconnect the base and empty the tank – fig.19 and 20.
- Wait for the soleplate to cool – fig.21. Wind the cord around the iron and its base – fig.22.
- Carry the iron and the base with two hands – fig.23 and 24.

If there is a problem

PROBLEM	CAUSES POSSIBLES	SOLUTIONS
Brown streaks come through the holes in the soleplate and stain the linen.	You are using chemical descaling agents.	Do not add any descaling agents to the water in the water tank.
	You are not using the right type of water.	Perform a self-cleaning operation and consult the section "What water to use?"
	Fabric fibres have accumulated in the soleplate and are burning.	Perform the self-cleaning operation and clean the soleplate with a damp sponge. Vacuum the holes of the soleplate from time to time.
The soleplate is dirty or brown and can stain the linen.	You are ironing with an inappropriate setting (temperature too high).	Clean the soleplate as indicated above. Select the appropriate setting.
	Your linen has not been rinsed sufficiently or you are using starch.	Clean the soleplate as indicated above. Always spray starch onto the reverse side of the fabric to be ironed.
Your iron is releasing little or no variable/TURBO steam.	The water tank is empty.	Fill the water tank.
	The anti-scale valve is dirty.	Clean the anti-scale valve.
	Your iron has a build-up of scale.	Clean the anti-scale valve and carry out a self-clean.
	Your iron has been used dry for too long.	Carry out a self-clean.
	Your iron needs recharging.	For optimum efficiency, place the iron on its base to be recharged at each resting period.
The red light on the display panel flashes when the iron is on the base.	You are not using the variable steam trigger.	Hold the variable steam trigger down while you iron to obtain a constant flow of steam.
	The variable steam has not been activated.	Gently shake the iron in a horizontal position, while holding down the steam trigger until the steam output begins.
The soleplate is scratched or damaged.	You have placed your iron flat on a metallic rest-plate or ironed over a zip.	Always set your iron on its base. Try to avoid ironing over zips. Refer to the chapter "Clean the soleplate".
Your soleplate is releasing particles.	Scale is building up on the soleplate.	Carry out a self-clean operation.
Water is running out of the water tank flap.	You have not closed the water tank flap properly.	Check that the water tank flap is locked properly.
Water drips from the holes in the soleplate.	You have stored the iron horizontally, without emptying it and without setting it to MIN.	See the section "Storing your iron".
The red light on the display panel flashes when the iron is on the base.	Connection problem between the iron and the base.	Check that the iron is pushed back completely and connected to the base.
The spray does not spray.	There is not enough water in the water tank.	Fill up the water tank.
Your iron is cooling down.	You are not placing it on its base regularly.	Place the iron on the base during each resting period while you change your item of clothing.

For any other problems please contact your local after sales services.

KO

* TEFAL household appliances appear under the T-FAL brand in some territories like America and Japan. TEFAL/T-FAL are registered trademarks of Groupe SEB.

제품 사용시 문의사항은 당사 소비자 상담실 혹은 서비스 센터에 문의하십시오.
 ■ A/S 문의: 동부대우전자서비스 1588-1588 ■ 제품문의: 080-733-7878

물을 최대 물높이인("MAX")까지 채우십시오. 물탱크에서 물을 채울 때 절대 디리미틀 수도꼭지 아래에 직접 가져다 대지 마십시오. 물을 채울 때 물방울지열브를 분리하지 마십시오.

반침대 전원코드를 콘센트에서 빼십시오.

디리미틀 반침대에 올려놓으십시오.

물탱크의 뚜껑을 열고 물 주입구에 최대 물높이인("MAX")까지 물을 채우십시오. ~fig.1.

물탱크 뚜껑을 닫으십시오.

06/2014

• 어느 정도의 물이 스팀 구멍으로 빠져나오면 물때 방지 밸브를 살짝 소리가 날 때까지 밀어넣어 체 자리에 원위치 시키십시오. -fig. 17

 : www.tetal.com