

Gebruiksaanwijzing

This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This appliance is intended to be used in household only. It is not intended to be used in the following applications, and the guarantee will not apply for:

-staff kitchen areas in shops, offices and other working environments;
-farm houses;
-by clients in hotels, motels and other residential type environments;
-bed and breakfast type environments.

Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

Children shall not play with the appliance.

This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.

Clean all of the accessories that have been in contact with food, in hot soapy water immediately after use.

Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
PLEASE RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

Please read these Instructions carefully before use. The appliance is designed for domestic use only. The manufacturer shall not accept any liability and reserves the right to cancel the guarantee in the event of commercial or inappropriate use or failure to follow the instructions.
For your safety, this appliance is compliant with applicable standards and regulations:

- Low Voltage Directive
- Electromagnetic Compatibility Directive
Regulations governing materials in contact with food
Check that the supply voltage shown on the rating plate of the appliance matches that of your electrical system. Any connection error will invalidate the guarantee.
Do not immerse the motor in water or submerge it or place it in an open flame (gas cookers).
Given the diverse standards in effect, if the appliance is used in a country other than that in which it is purchased, have it checked by an Approved Service Centre.
Do not use the motor unit in wet or any other liquid.
Do not leave the power cord close to or in contact with sources of heat or sharp edges.
Do not use the power cord as a support for hanging or placing the appliance or as a means of hanging it.
Do not use any long hot, scores, knives, to hang over the appliance or attachments when in use.
Wait for at least 30 seconds to stop before opening the appliance.
Use this appliance on an stable, steady working, away from water splashes. Do not turn it over.
Any intention other than normal cleaning and maintenance by the customer must be carried out by an approved service centre.
Never unplug the appliance by pulling on the cord.
Do not use an extension lead. If you accept liability for doing so, you are an extension lead used in a good condition, has a plug with an earth connection and is suited to the power rating of the appliance.
Do not use the appliance if it does not operate correctly. If it has been damaged or if the power cord or plug is damaged, To maintain safety, these parts must be replaced by an Approved Service Centre.
The product has been designed for domestic use only. The manufacturer accepts no responsibility, and the guarantee will not apply, for any commercial use, inappropriate use or failure to comply with the instructions. Always unplug the appliance from the mains after use.
Do not exceed the maximum capacities or operating periods specified.
Clean the grid regularly during use so that the juice can flow freely.
Only use original accessories and attachments. We cannot accept any responsibility if this is not the case.

Environment protection label
- Your appliance contains valuable materials that can be recovered or recycled.
- Leave it at a local waste collection point.

FR CONSIGNES DE SÉCURITÉ

Cet appareil n'est pas prévu pour être utilisé par des personnes dont les capacités physiques, sensorielles ou mentales sont réduites, ou des personnes dénuées d'expérience ou de connaissance, sauf si elles ont pu bénéficier, par l'intermédiaire d'une personne responsable de leur sécurité, d'une surveillance ou d'Instructions préalables concernant l'utilisation de l'appareil. Il convient de surveiller les enfants pour s'assurer qu'ils ne jouent pas avec l'appareil.

