 
 
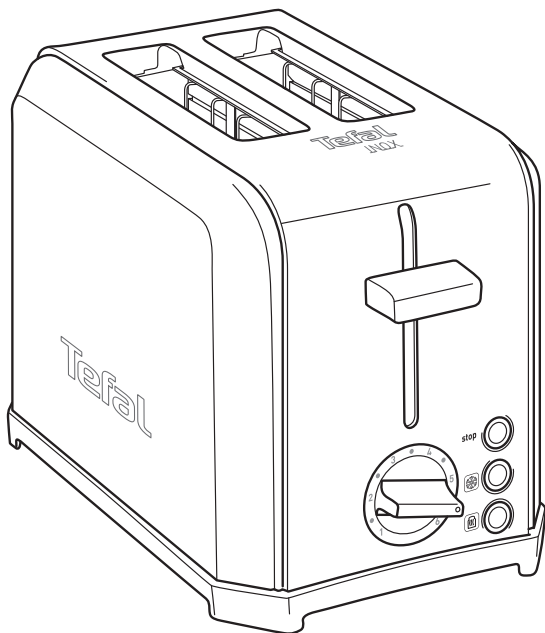 
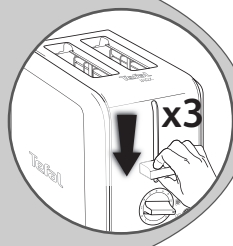 
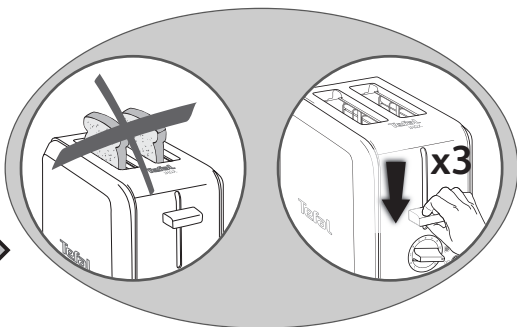 
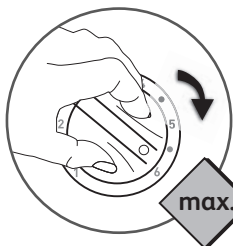 


Tefal

 
 
 
 
 
INOX

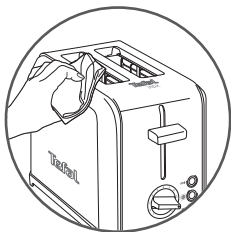



1. FIRST USE

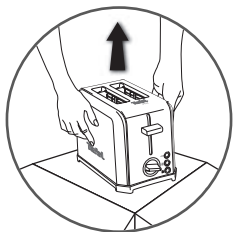

2. TOASTING

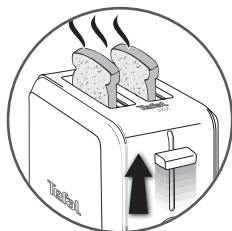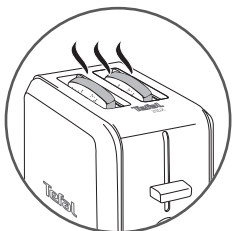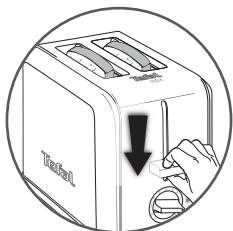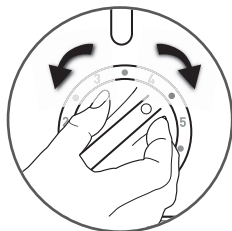
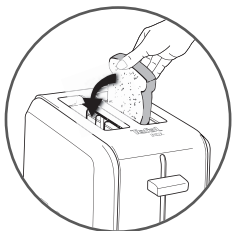


  3. HIGH-LIFT




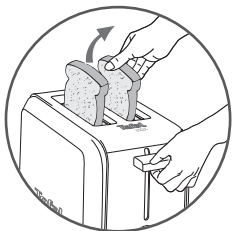
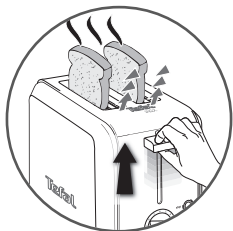


4. STOP/EJECT




 
 
stop/eject

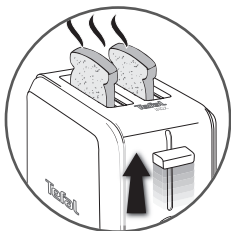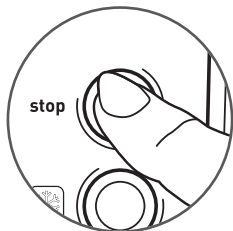



 
 
 
 
 
5. REHEAT

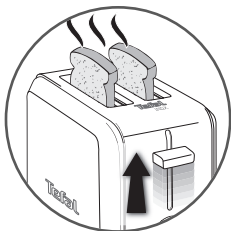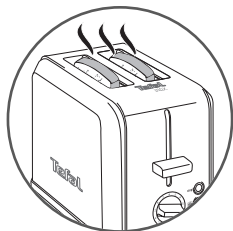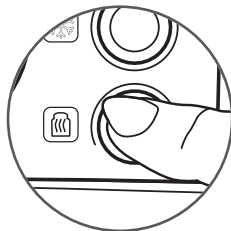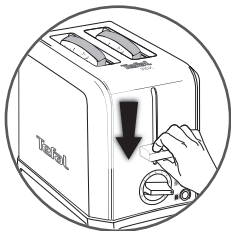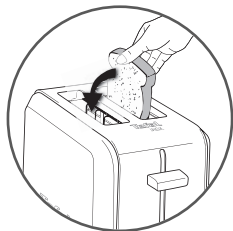

     6. DEFROST

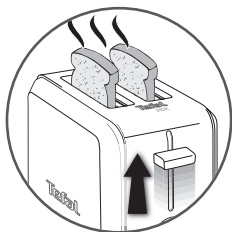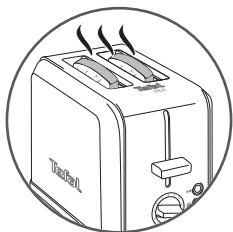
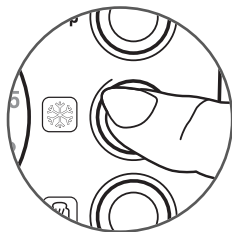
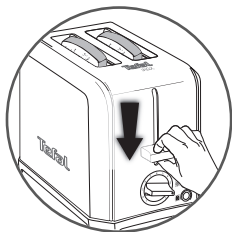
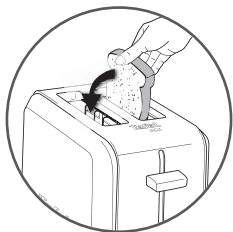


       7. BUN WARMER *

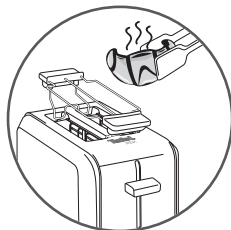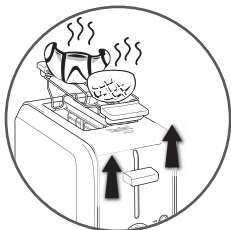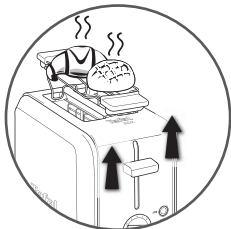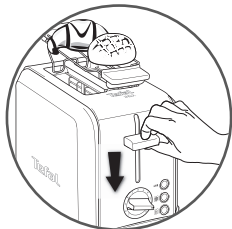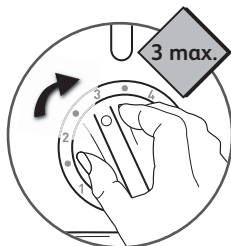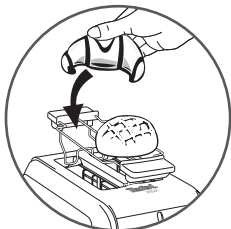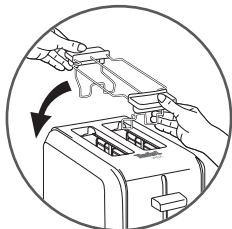

* Depending on model

    8. CLEANING

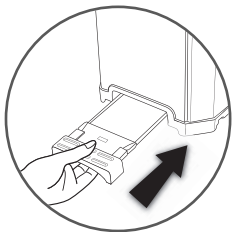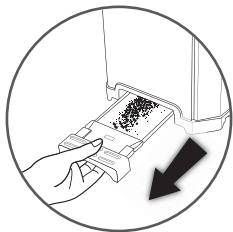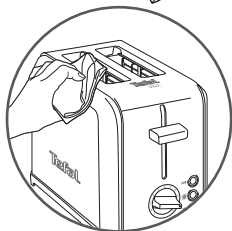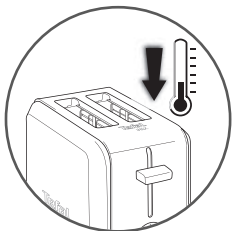

9. DO NOT

