

## Safety Instructions

Take the time to read all the following instructions carefully.  
• Read the instructions for use carefully before using your appliance for the first time; use which does not conform to the instructions will release the manufacturer from all responsibility and the guarantee will be deemed null and void.

• This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

• Children should be supervised to ensure that they do not play with the appliance.

• If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

• This appliance is intended for household use only. It is not intended to be used in the following applications, and the guarantee will not apply for:

- staff kitchen areas in shops, offices and other working environments;

- farm houses;

- by clients in hotels, motels and other residential type environments;

- bed and breakfast type environments.

• For Food Processor or Blender be careful if hot liquid is poured into the food processor or blender as it can be ejected out of the appliance due to a sudden steaming.

• Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning. For appliances with accessories with dough hooks (food mixers) or blender shaft or mincers or blender or shredder (depending on model); this appliance shall not be used by children. Keep the appliance and its cord out of reach of children.

• For appliances with accessories with egg beater or cream whippers or multi-blade whisk or graters (depending on model); this appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.

• Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

• Children shall not play with the appliance.

• Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.

• Clean all of the accessories that have been in contact with food, in soapy water immediately after use.

• Improper use of the appliance and its accessories may damage the appliance and cause injury.

• Some accessories have some sharp blades (depending on model), take care when handling the sharp cutting blades, emptying the bowl and during cleaning.

• To avoid all accidents and damage the appliance, follow operating times and speed settings for accessories specified in the manual.

• Please check that the supply voltage of your appliance corresponds to your electrical installation before plugging it in. You may damage the appliance or cause injury to yourself if this is not the case.

• To avoid electric shocks, never use the appliance with wet hands or on a damp or wet surface. Avoid wetting the appliance's electrical components. Never place the appliance, the power cord or the plug in water or any other liquid.

• Do not use your appliance if it is not working properly or if it has been damaged. Please contact your approved service centre.

• Any maintenance other than routine cleaning and upkeep by customers must be carried out by an approved service centre.

• The power cord must not be placed near or come into contact with the hot parts of the appliance, sources of heat or sharp corners.

• Do not move or plug the appliance by pulling on the cord.

• For your own safety, only use accessories and spare parts which are suitable for your appliance.

• To avoid electric shocks, ensure that your fingers do not come into contact with the plug pins when you plug in or unplug the appliance.

• Do not plug any other appliances into the same plug hole using adaptors. Electric overload is likely to damage the appliance or cause an accident. Only use an extension lead after having checked that it is in perfect working order.

• For your safety, this appliance complies with the applicable standards and regulations - Low voltage directive - Electromagnetic compatibility - The environment - Materials in contact with food.

• Do not touch the whisks, the multi-blade mixer (depending on model) or the blender base when the appliance is in operation. Keep long hair and scarves etc. away from the accessories when in operation.

• Do not touch the beaters or mixers and do not insert any object (knife, fork, spoon, etc.) to avoid hurting yourself and causing an accident to others or damaging the appliance. You may use a spoon once the product is not in operation.

• To avoid all accidents, make sure that your hair, clothes and other objects do not get caught in the moveable parts of the appliance.

• Do not use any different accessories at the same time.

• Always use the accessoires with the mix position on a flat, clean and dry surface before connect the appliance.

• Always check that the speed selector is at "0" before turning the appliance on.

• To avoid damage to the appliance, never place the appliance or its accessories in the freezer, oven or microwave.

• The appliance and its accessories have been designed for preparing food products. They must not be used for mixing other products.

• Environment protection first!

• Your appliance contains valuable materials which can be recovered or recycled.

• Leave a local civic waste collection point.

• 某些配件帶有鋒利的刀片（視乎型號而定）。在處理刀片的切割刀片、將碗清空及清潔期間，請確保小心處理。

• 為避免所有意外及令電器損壞，請遵從說明書中指定的配件操作時間和速度設定。

• 在處理刀片的切割刀片時，請檢查確認機械的供應量能夠與電力營合。否則可能會令電器損壞或導致人身傷害。

• 切勿觸電，切勿以濕手使用本電器，或是在潮濕或濕潤的表面上使用本電器。應避免弄濕本電器的電力插頭。切勿使用本電器，電線或插頭在水中任何情況下被浸沒之中。

• 假如電器無法正常運作，請停止使用。請聯絡你的認可服務中心。

• 除緊急停電及維護之外，任何保養及維護請向認可服務中心進行。

• 電源不得倒置。勿將電器的電源部分倒置，熱源或尖端朝角落位置。

• 請勿拉扯電線的方式移動或拆除電線。

• 為你自己的安全，只可使本適用於電器的配件及後備零件。

• 為免電擊，請確保持握，或拔掉電線後，你的手指不可接觸到插頭上的插腳。

• 使用电源轉換器時，請勿使用任何其他電線。請聯絡你的認可服務中心。

• 本電器為工作電器，請勿接觸其底部。

• 本電器為工作電器，請勿接觸其底部。

• 請勿觸摸電器的底部。

• 本電器為工作電器，請勿接觸其底部。

• 本電器為工作電器，請勿接觸其底部。