

**1. SAFETY INSTRUCTIONS**  
 For your safety, this appliance complies with the applicable standards and regulations (Low Voltage Directive, Electromagnetic Compatibility, Environmental...).  
 • The appliance's accessories become very hot during use. Avoid contact with the skin. Make sure that the supply cord never comes into contact with the skin.  
 • Check that the voltage of your electricity supply matches the voltage of your appliance. Any error when connecting the appliance can cause irreparable harm, not covered by the guarantee.

• As an additional safety measure, we recommend the installation of a residual current circuit breaker (RCD) in the electrical circuit supplying the bathroom, acting at no more than 30 mA. Ask your installer for advice.

• The installation of the appliance and its use must however comply with the standards in force in your country.

**CAUTION:** Never use your appliance with wet hands or near water contained in bathtubs, showers, sinks or other containers.

• When using the appliance in the bathroom, unplug it after use as the presence of water nearby may pose a danger even when the appliance is turned off.

• This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

• If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

• Stop using your appliance and contact an Authorised Service Centre if: - your appliance has fallen.

- the plug has been damaged.

• The appliances must be unplugged:

- before cleaning and maintenance procedures.

- if it is not working correctly.

- if you leave the room, even momentarily.

- Do not immerse or put under running water, even for cleaning purposes.

- Do not pull the plug by the casing, which is hot, but by the handle.

- Do not use an electrical extension lead.

- Do not clean with abrasive or corrosive products.

• Do not use at temperatures below 0°C and above 35°C.

**GARANTIE:**

Your appliance is designed for use in the home only. It should not be used for professional purposes. The guarantee becomes null and void in these cases of use.

## 2. RECOMMENDATIONS

Your hair must be untangled, clean and DRY (in order not to damage your hair).

1. Put your curling tong on a flat surface, balanced on its safety stand.

2. Plug in the appliance. Select the right temperature to suit your hair with efficiency and optimum care:

- 1: fine hair, thick or difficult to curl hair

Wait for 10 minutes until the appliance reaches the right temperature. Hold the hair station in this position for approximately 20 seconds to finish less than 20 seconds if you wish to have softer curls.

## 3. CLEANING

Unplug the appliance and let it get cold on its stand.

Clean it when it's perfectly cold. Wipe the handle with a damp soft duster. Never use water or any other liquid inside the handle.

## 4. ENVIRONMENT PROTECTION FIRST!

① Your appliance contains valuable materials which can be recovered or recycled.

Leave it at a local civic waste collection point.

②

③

④

⑤

⑥

⑦

⑧

⑨

⑩

⑪

⑫

⑬

⑭

⑮

⑯

⑰

⑱

⑲

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

⑳

