


# Tefal®

## ELIRA ONE

EN



### User Guide

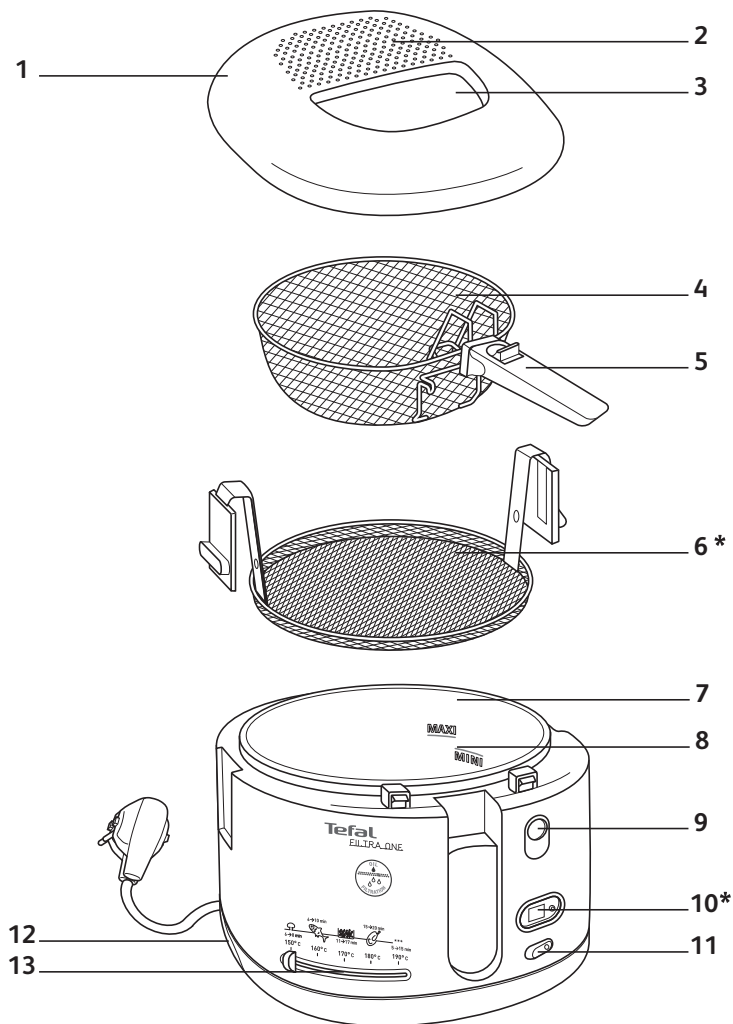

\* Depending on model.

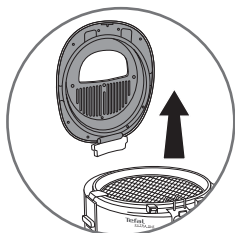


fig 1

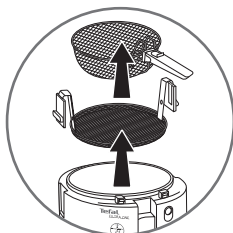


fig 2

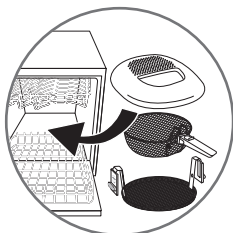


fig 3



fig 4



fig 5

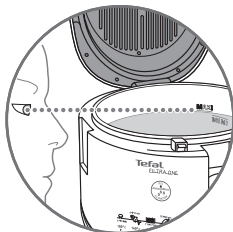


fig 6



fig 7

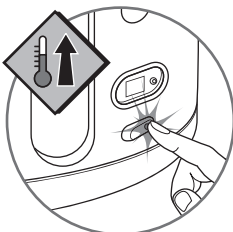


fig 8

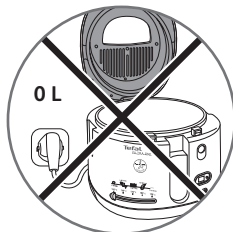


fig 9

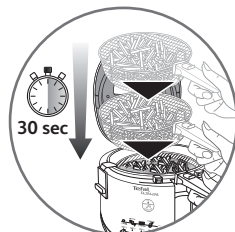


fig 10

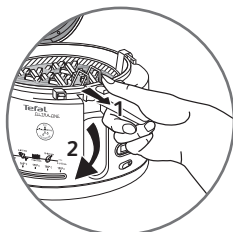


fig 11

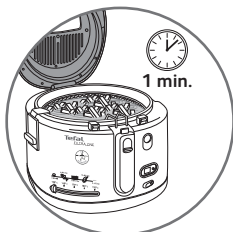


fig 12



fig 12a



fig 13

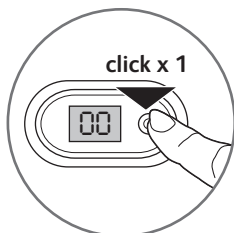


fig 14

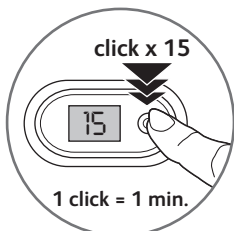


fig 15

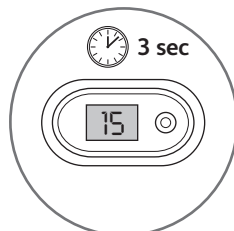


fig 16

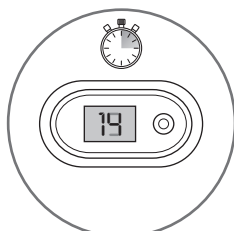


fig 17

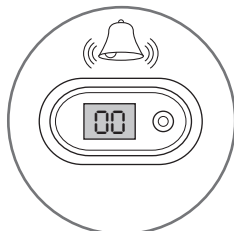


fig 18

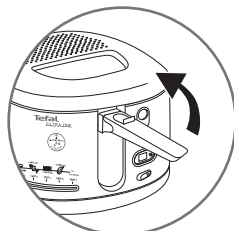


fig 19



fig 20



fig 21

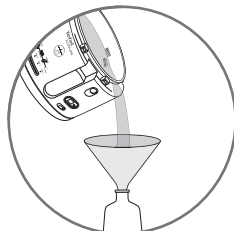


fig 22

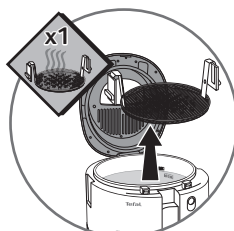


fig 23

# Safety instructions

## General instructions

Read and follow the instructions for use. Keep them safe.

This appliance is not intended to be operated using an external timer or separate remote control system.

For your safety, this appliance complies with the safety regulations and directives in effect at the time of manufacture (Low-voltage Directive, Electromagnetic Compatibility, Food Contact Materials Regulations, Environment...).

Check that the power supply voltage corresponds to that shown on the appliance (alternating current).

Given the diverse standards in effect, if the appliance is used in a country other than that in which it is purchased, have it checked by a Tefal Approved Service Centre.

This appliance is designed for indoor domestic household use only.

In case of professional use, inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and the guarantee does not apply.

Remove all packaging materials and any promotional labels or stickers from your deep fryer before use.

Do not use the appliance if the appliance or the cord is damaged, if the appliance has fallen or shows visible damage or does not work properly. In the event of the above, the appliance must be sent to a Tefal Approved Service Centre. Do not take the appliance apart yourself.

For your own safety, use only accessories and spare parts which are suitable for your appliance.

## Connecting to the power supply

Always plug the appliance into a power socket outlet with an earth connection.

Do not use an extension lead. If you accept liability for doing so, only use an extension lead which is in good condition, has a plug with an earth connection and is suited to the power of the appliance.

If the power supply cord is damaged, it must be replaced by the manufacturer or a Tefal Approved Service Centre in order to avoid any danger.

Do not leave the cord hanging. The power cord must never be in close proximity to or in contact with the hot parts of your appliance, close to a source of heat or rest on sharp edges.

Do not unplug the appliance by pulling on the cord.

Always unplug the appliance: immediately after use, when moving it, prior to any cleaning or maintenance.

## Using

This appliance is not designed to be used by people (including children) with a physical, sensory or mental impairment, or people without knowledge or experience, unless they are supervised or given prior instructions concerning the use of the appliance by someone responsible for their safety.

Children must be supervised to ensure that they do not play with the appliance.

Use a flat, stable, heat-resistant surface, away from any water splashes.

Never leave the appliance unattended when in use.

This electrical equipment operates at high temperatures which may cause burns. Do not touch the hot parts of the appliance (filter, window, metal walls (depending on model), other apparent metal parts...). Be careful of hot steam and never put your hands above the filtration zone.

Do not switch on the appliance near to flammable materials (blinds, curtains....) or close to an external heat source (gas stove, hot plate etc.).

In the event of fire, never try to extinguish the flames with water. Close the lid. Unplug the appliance.

Smother the flames with a damp cloth.

Do not move the appliance when it is full of liquids or hot food.

Never immerse the appliance or the electrical control unit in water !

Before throwing away your appliance, the timer battery must be removed by a Tefal Service Centre (depending on model).

Do not store your deep fryer outside. Store it in a dry and well ventilated area.

It is essential that you wait until the oil has cooled down before storing the fryer.

## Cooking

Never plug in the deep fryer without oil or fat inside.

The oil level must always be between the min and max markers.

If you use solid vegetable fat, cut it into pieces and melt it over a slow heat (max 150°C) in a separate pan beforehand, then slowly pour it into the deep fryer bowl. Never put solid fat directly into the deep fryer bowl or fryer basket as this will lead to deterioration of the appliance.

Do not mix different types of oil. Never add water to the oil or fat.

Do not overfill the basket, never exceed the maximum capacity.

Oils to use: For best results we recommend using a good quality blended vegetable oil. If using Sunflower oil ensure the oil is changed after every 5 uses.

Oils which should NOT be used under any circumstances and may cause overflowing/smoking/risk of fire are: ground nut oil, soya oil, olive oil, lard or dripping.

If you have a removable anti-odour filter, change it after every 10 - 15 uses (foam filter) or after 30 - 40 uses (cartridge with saturation indicator), or 80 uses (carbon

filter).

Some models are equipped with a permanent metallic filter, which does not need to be changed.

No matter what the recipe, whether preparing fresh or frozen food, it must be perfectly dry. Dry the food thoroughly with paper kitchen towel or a clean tea towel before frying. This will prevent the oil from splattering and/or overflowing, will extend the life of the oil and give crispier results.

## Recommendations

Limit the cooking temperature to 190°C, especially for potatoes.

Use the basket for chips.

Control the cooking: Do not eat burnt food.

Clean your oil after every use to avoid burnt crumbs and change it after every 8 to 10 uses (after every 5 uses if using Sunflower oil). Do not pour used oil/fat into the sink.

Leave it to cool and throw it away with household waste - according to the local community regulations.

Store your fresh potatoes in a room above 8°C.

For best results and fast cooking, we recommend

that you limit the quantity of chips to 1/2 basket per frying.

For larger quantities of food or potatoes the temperature of the oil drops very fast just after having lowered the basket. This lowers the oil temperature considerably and it is normal for the temperature to take a while to return to 190°C.

- Take great care when handling the food and use tongs.

Gradually place the food in the hot oil, submerging it an inch at a time to prevent it from sinking straightaway and any oil overflowing. Always fry fresh made chips twice: A first fry at 160°C and a second fry at 190°C.



### Environment protection first!

- ① Your appliance contains valuable materials which can be recycled.
- ➡ When you decide to replace your appliance, leave at a local civic waste collection point.

### HELPLINE:

If you have any product problems or queries, please contact our Customer Relations Team first for expert help and advice:

0845 602 1454 – UK

(01) 677 4003 – Ireland

# Description

1. Lid
2. Filter system
3. Viewing window
4. Basket
5. Basket handle
6. Detachable filter screen (depending on model)
7. Fryer bowl
8. Min. and Max. filling levels
9. Lid open button
10. Timer (depending on model)
11. On/Off switch with light
12. Carry handles
13. Adjustable thermostat

## Preparation

### Before first use

- Press the button to unlock the lid and the lid will open.
  - Remove the lid from the fryer - **fig 1**, the basket and the filter screen (depending on model) - **fig 2**.
  - Wash the lid, basket and filter screen (depending on model) in the dishwasher - **fig 3** or with a sponge and soapy water.
  - Wash the bowl with a sponge and soapy water.
  - Carefully rinse and dry all items.
  - Replace the filter screen (depending on model), the basket and the fryer lid.
- Never immerse this appliance in water - fig 4.**  
**Never put the appliance body in the dishwasher - fig 5.**  
**Your fryer should always be used indoors.**

**Never mix different types of oil or fat because this could cause the fryer to overflow.**

**The oil/fat level should always be between the Min. and Max. levels shown inside the bowl. – fig. 6.**

**Check this before each use and add the same type of oil/fat as required.**

- Fill the bowl with oil.
- Never fill the bowl above the maximum level shown on the bowl - **fig 6**.

	Oil	Solid vegetable fat
Max.	2.1 L	1910 g
Min.	1.9 L	1660 g

- Use an oil recommend for frying: sunflower, blended vegetable, etc. If using sunflower oil ensure the oil is changed after every 5 uses. Oil which should not be used under any circumstances and may cause overflowing/smoking/risk of fire are: ground nut oil, soya oil, olive oil, lard or dripping.

## Filling the bowl



- If you use solid fat, chop it into pieces and then melt it in a separate pan before pouring it into the bowl (never melt solid fat in the basket or in the bowl).
- Never exceed 150°C to melt the fat that has solidified in the bowl. For the cooking temperature follow the instructions (see cooking charts **p.10**).
- NEVER use animal fat such as lard or dripping as this could cause overflow, smoke or a fire hazard.

## Pre-heating

---

- After filling the bowl with the fat, close the lid and plug in your fryer without the basket
- Adjust the thermostat - **fig 7** depending on the food to be fried (see cooking charts **p. 10**).
- Press the On/Off switch. The indicator will light up - **fig 8**.
- When the temperature indicator switches off, press the lid unlock button to open the lid and allow the steam to escape.

### Place the fryer:

- on a secure surface
- out of the reach of children
- away from any sources of spatter or heat.

Never plug the fryer in when it is empty (without any oil or fat) - **fig 9**.

---

## Loading the basket

Never exceed the maximum safety limit – fresh products 1200 g, frozen 900 g. To avoid overflow and extend the life of the oil, wipe the food carefully before cooking it.

- Dry the food to remove any excess water or ice.
- Fill the basket before placing it in the fryer.
- Do not overfill the basket.
- Reduce quantities for frozen food.
- Tip: Cut food to the same size so that it cooks evenly. Avoid pieces that are too thick.

## Cooking

### Lowering the basket

---

- After the temperature indicator light goes out place the basket in the bowl.
- Lower the bowl gently into the oil - **fig 10**. Lowering it too quickly could cause the fryer to overflow.

- Pull down the handle - **fig 11**, wait for one minute - **fig 12** then close the lid - **fig 12a**.
- Set the cooking timer (depending on model): for models with timer, press the button to adjust the time minute by minute. The selected time is displayed and the countdown begins - **fig 14 to fig 18**.
- During cooking, it is normal for the temperature light to switch on and off.

**Do not place your hand above the filter system – fig. 13, or over the viewing window. The steam and the glass will be hot. Do not touch the fryer walls which may also be hot.**

## At the end of cooking

**The timer (depending on model) signals the end of the cooking time, but does not stop the appliance.**

**For crispy fried food, open the lid as soon as you have finished cooking to prevent steam from softening the food.**

- The timer emits a sound (depending on model), indicating that the programmed cooking time has ended. To stop the timer alarm, press the button.
- Set the thermostat to the minimum position.
- Press the On/Off button.
- Raise the handle - **fig 19**, then press the lid unlock button to open and allow the steam to escape for around 15 seconds - **fig 20**. Open the lid.
- Drain your food.
- Remove the basket and serve.
- Close the lid when the fryer is not in use.
- To cook more food, add oil/fat as required, set the thermostat to the required temperature, press the On/Off switch and then wait until the temperature light comes on before placing the new food in the oil.

## Table of cooking times

- The cooking times are a guide only; they may vary depending on the size of the food and the amount of food and individual preferences. Thicker food may require turning halfway through frying to ensure even cooking on both sides.
- Cooking tips: For best results, use the traditional French method of frying homemade chips:
  - first frying at 170 °C
  - second frying at 190 °C
- When cooking battered food and doughnuts, remove the wire basket to prevent food sticking to it and use

**When cooking battered food and doughnuts, take great care when handling the food and use tongs. Gradually place the food into the hot oil, submerging it an inch at a time to prevent it from sinking immediately.**

tongs to slowly lower the food into the hot oil.

FRESH FOOD	Number of serving	Quantity	Temperature	Cooking time
Chips		350/400 g	190° C	6 - 8 minutes
		600 g	190° C	9 - 11 minutes
		1000 g	190° C	15 - 17 minutes
		1200 g (maximum quantity)	1) 170° C	12 - 14 minutes
			2) 190° C	5 - 7 minutes
Fried chicken	8		180° C	14 - 16 minutes
Breaded fish fillets	3		170° C	6 - 7 minutes
Fried whole mushrooms		200 g	150° C	8 - 10 minutes
Vegetable fritters	7-8		180° C	11 - 13 minutes
Apple fritters	6		180° C	6 - 8 minutes

FROZEN FOOD	Number of serving	Quantity	Temperature	Cooking time
Chips		450 g (quantity recommended for best results)	190° C	7 - 9 minutes
		750 g (maximum quantity)	190° C	10 - 12 minutes
Breaded fish fillets	10		190° C	6 - 8 minutes
Chicken nuggets		900 g	190° C	7 - 9 minutes
Fried onion rings		300 g	190° C	5 - 6 minutes

## SWITCHING OFF THE FRYER

When you have finished frying, press the ON/OFF switch.

Unplug the fryer.

Leave the fryer and the oil/fat inside to cool completely (approx 2 hours).

# Cleaning

## Filtering the oil

- You may store the oil in the fryer, or in a separate airtight container.
- Do not pour used oil/fat into the sink. Leave it to cool, and throw it away with household waste-according to the local community regulations.
- If you use solid vegetable fat, we advise you to store it separately from the fryer - **fig 22**.
- Crumbs that break away from foods tend to burn and alter the quality of the oil more rapidly. Over time, this increases the risk of catching fire. For this reason, filter the oil regularly.

**Leave the fryer with the oil in the bowl to cool completely before filtering the oil (2 hours). We recommend changing the oil/fat after a maximum of 10 to 12 uses. – fig.21.**  
**If using sunflower oil, ensure the oil is changed after every 5 uses.**

## Cleaning the fryer

**You cannot remove the metallic filter located in the lid when washing the lid.**

**Never immerse your appliance in water and never wash it under running water.**

**Never wash the appliance body in the dishwasher.**

**Do not use aggressive or abrasive cleaning products.**

**Do not store your deep fryer outside, store it in a dry and well-ventilated area.**

- Always unplug your fryer and leave it to cool completely before cleaning it (approx. 2 hours).
- Remove the lid and the basket.
- Next remove the filter screen (depending on model), and dispose of any residue – **fig.23**.
- Put the lid, basket and filter screen in the dishwasher or wash them with a sponge and soapy water.
- Dry all items carefully before replacing them.
- Put the lid back on the fryer for storage.
- If you do not keep the oil in your fryer, you can store the filter screen (depending on model) and the basket inside the fryer.
- The lid is fitted with a permanent metallic filter, you don't need to change it.

# Problems and solutions

Problems and possible causes	Solutions
<b>The deep fryer does not work.</b>	
The appliance is not plugged in.	Plug in the appliance.
<b>Unpleasant odours.</b>	
The oil/fat has deteriorated.	Replace the frying oil/fat (after 12 uses max.), or more frequently depending on the type of oil/fat used.
The oil/fat is unsuitable.	Use a good quality blended vegetable oil/fat. (see p.8).
<b>Steam escapes from around the lid.</b>	
The lid is not closed properly.	Check that the lid is properly locked closed.
Food is wet or contains too much water (frozen food).	Remove any ice and dry the food thoroughly. Lower the basket slowly (see p.9).
Different types of oil have been mixed.	Empty and clean the bowl. Refill the bowl with one type of oil.
<b>Vision through the viewing window is not clear.</b>	
Not cleaning the window often enough or using an inappropriate cleaning method.	To ensure good visibility, clean the viewing window by wiping it with a sponge and lemon juice. Allow the window to dry at room temperature or dry with a clean cotton cloth.

Problems and possible causes	Solutions
<b>The frying oil overflows.</b>	
The Max. marker for filling the bowl has been exceeded.	Check the level (Max.) and remove the excess of oil after the fryer is cool.
The frying basket has been overfilled with food.	Check that the basket is not too full.
Food is wet or contains too much water (i.e. frozen food).	Remove any ice and dry the food thoroughly before frying.
Wrong oil or different types of oil/fat have been mixed.	Empty and clean the bowl. Refill the bowl with one type of oil/fat.
Unsuitable oil/fat has been used.	Use a good quality blended vegetable oil/fat (see p. 8).
<b>Food does not become golden and remains soft.</b>	
Pieces are too thick and contain too much water.	Experiment by lengthening the cooking time or by cutting food smaller and thinner.
Too much food is being cooked at the same time and the cooking oil/fat is no longer at the right temperature.	Respect the recommended quantities of food (see table of cooking p.11).
The temperature of the frying oil/fat may not be high enough: the temperature is set incorrectly.	Set the thermostat selector to the recommended temperature.
<b>Chips stick together.</b>	
Potatoes have not been washed before immersed in hot oil/fat.	Cut the potatoes and wash them well to remove starch and then dry them thoroughly.
Too much food is being cooked at the same time.	Respect the recommended quantities of food (see table of cooking p.11).
<b>The timer no longer works (depending on model)</b>	
The battery is low.	Have it replaced by an approved Service Centre.

## GUARANTEE

Ημερομηνία αγοράς / Πωλητήριον / วันที่ซื้อ / 購買日期 / 購入日 / 구입일자 / تاريخ الشراء / تاريخ خري

مرجع كامل محصول / مرجع المنتج الكامل

نام درس خرده فروش / واسم بائع التجزئة و عنوانه / 주소/소매점 이름과 주소/ 址/販売店の名前、住所

ตราประทับของห้าง/ร้านที่ซื้อ / 零售商的蓋印 / 販売店印 / 소매점 직인 / مهر خرده فرو / ختم بائع التجزئة

# INTERNATIONAL GUARANTEE : COUNTRY LIST

			
الجزائر <b>ALGERIA</b>	CIJA 9 rue Puvis de Chavannes Saint Euquene Oran	1 an 1 year	(0)41 28 18 53
<b>ARGENTINA</b>	GRUPE SEB ARGENTINA S.A. Billinghurst 1833 3° C1425DTK Capital Federal Buenos Aires	2 años 2 years	0800-122-2732
ՀԱՅԱՍՏԱՆ <b>ARMENIA</b>	ՓԲԸ "Գրուպալա ՄԵԲ", 125171, Մոսկվա, Լենինգրադյան խճուղի, 16A, շին.3	2 տարի 2 years	(010) 55-76-07
<b>AUSTRALIA</b>	GRUPE SEB AUSTRALIA PO Box 7535, Silverwater NSW 2128	1 year	02 97487944
ÖSTERREICH <b>AUSTRIA</b>	SEB ÖSTERREICH HmbH Campus 21 - Businesspark Wien Süd Liebermannstr. A02 702 2345 Brunn am Gebirge	2 Jahre 2 years	01 866 70 299 00
<b>BELGIQUE BELGIE</b> <b>BELGIUM</b>	GRUPE SEB BELGIUM SA NV 25 avenue de l'Espérance - ZI 6220 Fleurus	2 ans 2 years	070 23 31 59
БЕЛАРУСЬ <b>BELARUS</b>	ЗАО «Группа СЕБ-Восток», 125171, Москва, Ленинградское шоссе, д. 16А, стр. 3	2 года 2 years	017 2239290
<b>BOSNA I</b> <b>HERCEGOVINA</b>	SEB Développement Predstavništvo u BiH Vrazova 8/II 71000 Sarajevo	2 godine 2 years	Info-linija za potrošače 033 551 220
<b>BRASIL</b> <b>BRAZIL</b>	SEB DO BRASIL PRODUTOS DOMÉSTICOS LTDA Avenida Arno, 146 Mooca 03108-900 São Paulo SP	1 ano 1 year	0800-119933
БЪЛГАРИЯ <b>BULGARIA</b>	ГРУП СЕБ БЪЛГАРИЯ ЕООД Ул. Борово 52 Г, ет. 1, офис 1, 1680 София	2 години 2 years	0700 10 330
<b>CANADA</b>	GRUPE SEB CANADA 345 Passmore Avenue Toronto, ON M1V 3N8	1 an 1 year	800-418-3325
<b>CHILE</b>	GRUPE SEB CHILE Comercial Ltda Av. Providencia, 2331, piso 5, oficina 501 Santiago	2 años 2 years	12300 209207



<b>COLOMBIA</b>	GROUPE SEB COLOMBIA Apartado Aereo 172, Kilometro 1 Via Zipaquira Cajica Cundinamarca	2 años 2 years	<b>18000919288</b>
<b>HRVATSKA CROATIA</b>	SEB Développement S.A.S. Vodnjanska 26 10000 Zagreb	2 godine 2 years	<b>01 30 15 294</b>
<b>ČESKÁ REPUBLIK CZECH REPUBLIC</b>	GROUPE SEB ČR spol. s r .o. Jankovcova 1569/2c 170 00 Praha 7	2 roky 2 years	<b>731 010 111</b>
<b>DANMARK DENMARK</b>	GROUPE SEB NORDIC AS Tempovej 27 2750 Ballerup	2 år 2 years	<b>44 663 155</b>
<b>DEUTSCHLAND GERMANY</b>	GROUPE SEB DEUTSCHLAND GmbH / KRUPS GmbH Herrnrainweg 5 63067 Offenbach	2 Jahre 2 years	<b>0212 387 400</b>
<b>EESTI ESTONIA</b>	GROUPE SEB POLSKA Sp. z o.o. ul. Bukowińska 22b 02-703 Warszawa	2 aastat 2 years	<b>5 800 3777</b>
<b>SUOMI FINLAND</b>	Groupe SEB Finland Kutojantie 7 02630 Espoo	2 Vuotta 2 years	<b>09 622 94 20</b>
<b>FRANCE</b> Incluant uniquement Guadeloupe, Martinique, Réunion, Saint-Martin	GROUPE SEB FRANCE Service Consommateur Tefal BP 15 69131 ECULLY CEDEX	1 an 1 year	<b>09 74 50 47 74</b>
<b>ΕΛΛΑΔΑ GREECE</b>	SEB GROUPE ΕΛΛΑΔΟΣ Α.Ε. Οδός Καβαλιεράτου 7 Τ.Κ. 145 64 Ν. Κηφισιά	2 χρόνια 2 years	<b>2106371251</b>
<b>香港 HONG KONG</b>	SEB ASIA Ltd. Room 903, 9/F, South Block, Skyway House 3 Sham Mong Road, Tai Kok Tsui, Kowloon Hong-Kong	1 year	<b>852 8130 8998</b>
<b>MAGYARORSZÁG HUNGARY</b>	GROUPE SEB CENTRAL-EUROPE Kft. Táviró köz 4 2040 Budaörs	2 év 2 years	<b>06 1 801 8434</b>
<b>INDONESIA</b>	GROUPE SEB INDONESIA (Representative office) Sudirman Plaza, Plaza Marein 8th Floor JL Jendral Sudirman Kav 76-78, Jakarta 12910, Indonesia	1 year	<b>+62 21 5793 6881</b>
<b>ITALIA ITALY</b>	GROUPE SEB ITALIA S.p.A. Via Montefeltro, 4 20156 Milano	2 anni 2 years	<b>199207354</b>
<b>JAPAN</b>	GROUPE SEB JAPAN Co. Ltd. 1F Takanawa Muse Building, 3-14-13, Higashi Gotanda, Shinagawa-Ku, Tokyo 141-0022	1 year	<b>0570-077772</b>

<b>ҚАЗАҚСТАН KAZAKHSTAN</b>	ЖАҚ «Группа СЕБ- Восток» 125171, Мәскеу, Ленинградское шоссесі, 16А, 3 үйі	2 жыл 2 years	<b>727 378 39 39</b>
<b>한국어 KOREA</b>	(유)그룹 세브 코리아 서울시 종로구 서린동 88 서린빌딩 3 층 110-790	1 year	<b>1588-1588</b>
<b>LATVJA LATVIA</b>	GROUPE SEB POLSKA Sp. z o.o. ul. Bukowińska 22b 02-703 Warszawa	2 gadi 2 years	<b>6 716 2007</b>
<b>LIETUVA LITHUANIA</b>	GROUPE SEB POLSKA Sp. z o.o. ul. Bukowińska 22b 02-703 Warszawa	2 metai 2 years	<b>6 470 8888</b>
<b>LUXEMBOURG</b>	GROUPE SEB BELGIUM SA NV 25 avenue de l'Espérance - ZI 6220 Fleurus	2 ans 2 years	<b>0032 70 23 31 59</b>
<b>MACEDONIA</b>	Groupe SEB Bulgaria EOOD Office 1, floor 1, 52G Borovo St., 1680 Sofia - Bulgaria ГРУП СЕБ БЪЛГАРИЯ ДООЕЛ Ул. Борово 52 Г, сп. 1, офис 1, 1680 София, България	2 години 2 years	<b>(0)2 20 50 022</b>
<b>MALAYSIA</b>	GROUPE SEB MALAYSIA SDN. BHD Lot No.C/3A/001 & 002, Block C, Kelana Square No.17, Jalan SS7/26, 47301 Kelana Jaya Petaling Jaya, Selangor	1 year	<b>65 6550 8900</b>
<b>MEXICO</b>	Groupe S.E.B. México, S.A. DE C.V. Goldsmith 38 Desp. 401, Col. Polanco Delegación Miguel Hidalgo 11 560 México D.F.	1 año 1 year	<b>(01800) 112 8325</b>
<b>MOLDOVA</b>	ТОВ «Груп СЕБ Україна» 02121, Харківське шосе, 201-203, 3 поверх, Київ, Україна	2 ani 2 years	<b>(22) 929249</b>
<b>NEDERLAND The Netherlands</b>	GROUPE SEB NEDERLAND BV Generatorstraat 6 3903 LJ Veenendaal	2 jaar 2 years	<b>0318 58 24 24</b>
<b>NEW ZEALAND</b>	GROUPE SEB NEW ZEALAND Unit E, Building 3, 195 Main Highway, Ellerslie, Auckland	1 year	<b>0800 700 711</b>
<b>NORGE NORWAY</b>	GROUPE SEB NORDIC AS Tempovej 27 2750 Ballerup DANMARK	2 år 2 years	<b>815 09 567</b>
<b>PERU</b>	Groupe SEB Perú Av. Camino Real N° 111 of. 805 B San Isidro - Lima – Perú	1 año 1 year	<b>441 4455</b>

<b>POLSKA POLAND</b>	GRUPE SEB POLSKA Sp. z o.o. ul. Bukowińska 22b 02-703 Warszawa	2 lata 2 years	<b>0801 300 421</b> koszt jak za połączenie lokalne
<b>PORTUGAL</b>	GRUPE SEB IBÉRICA SA Urb. da Matinha Rua Projectada à Rua 3 Bloco1 - 3° B/D 1950 - 327 Lisboa	2 anos 2 years	<b>808 284 735</b>
<b>REPUBLIC OF IRELAND</b>	GRUPE SEB IRELAND Unit B3 Aerodrome Business Park, College Road, Rathcoole, Co. Dublin	1 year	<b>01 677 4003</b>
<b>ROMÂNIA ROMANIA</b>	GRUPE SEB ROMÂNIA Str. Daniel Constantin nr. 8 010632 București	2 ani 2 years	<b>0 21 316 87 84</b>
<b>РОССИЯ RUSSIA</b>	ЗАО «Группа СЕБ-Восток», 125171, Москва, Ленинградское шоссе, д. 16А, стр. 3	2 года 2 years	<b>495 213 32 30</b>
<b>SRBIJA SERBIA</b>	SEB Development Đorđa Stanojevića 11b 11070 Novi Beograd	2 godine 2 years	<b>060 0 732 000</b>
<b>SINGAPORE</b>	GRUPE SEB SINGAPORE Pty Ltd. 59 Jalan Pemimpin, #04-01/02 L&Y Building Singapore 577218	1 year	<b>65 6550 8900</b>
<b>SLOVENSKO SLOVAKIA</b>	GRUPE SEB Slovensko, spol. s r.o. Rybničná 40 831 06 Bratislava	2 roky 2 years	<b>233 595 224</b>
<b>SLOVENIJA SLOVENIA</b>	SEB d.o.o Gregorčičeva ulica 6 2000 MARIBOR	2 leti 2 years	<b>02 234 94 90</b>
<b>ESPAÑA SPAIN</b>	GRUPE SEB IBÉRICA S.A. C/ Almogàvers, 119-123, Complejo Ecourban 08018 Barcelona	2 años 2 years	<b>902 31 24 00</b>
<b>SVERIGE SWEDEN</b>	TEFAL SVERIGE SUBSIDIARY OF GROUP SEB NORDIC Truckvägen 14 A, 194 52 Upplands Väsby	2 år 2 years	<b>08 594 213 30</b>
<b>SUISSE CHWEIZ SWITZERLAND</b>	GRUPE SEB SCHWEIZ GmbH Thurgauerstrasse 105 8152 Glattbrugg	2 ans 2 Jahre 2 years	<b>044 837 18 40</b>
<b>TAIWAN</b>	SEB ASIA Ltd. Taipei International Building, Suite B2, 6F-1, No. 216, Tun Hwa South Road, Sec. 2 Da-an District Taipei 106, R.O.C.	1 year	<b>886-2-27333716</b>
<b>THAILAND</b>	GRUPE SEB THAILAND 2034/66 Italthai Tower, 14th Floor, n° 14-02, New Phetchburi Road, Bangkapi, Huaykwang, Bangkok, 10320	2 years	<b>662 351 8911</b>

<b>TÜRKİYE TURKEY</b>	GROUPE SEB ISTANBUL AS Beybi Giz Plaza Dereboyu Cad. Meydan Sok. No: 28 K.12 Maslak	2 YIL 2 years	<b>216 444 40 50</b>
<b>U.S.A.</b>	GROUPE SEB USA 2121 Eden Road Millville, NJ 08332	1 year	<b>800-395-8325</b>
<b>Україна UKRAINE</b>	ТОВ «Груп СЕБ Україна» 02121, Харківське шосе, 201-203, 3 поверх, Київ, Україна	2 роки 2 years	<b>044 492 06 59</b>
<b>UNITED KINGDOM</b>	GROUPE SEB UK LTD Riverside House Riverside Walk Windsor Berkshire, SL4 1NA	1 year	<b>0845 602 1454</b>
<b>VENEZUELA</b>	GROUPE SEB VENEZUELA Av Eugenio Mendoza, Centro Letonia, Torre ING Bank, Piso 15, Ofc 155 Urb. La Castellana, Caracas	2 años 2 years	<b>0800-7268724</b>
<b>VIETNAM</b>	GROUPE SEB VIETNAM (Representative office) 127-129 Nguyen Hue Street District 1, Ho Chi Minh City, Vietnam	1 year	<b>+84-8 3821 6395</b>

 : **[www.tefal.com](http://www.tefal.com)**

