



- High quality, heavy gauge polished stainless steel construction
- Easy to clean stainless steel will not react with food
- Integrated, large loop handles for easy and secure use
- Dishwasher Safe
- Induction Capable
- Lifetime Warranty

From date of purchase, All-Clad guarantees to repair or replace any item found defective in material, construction or workmanship under normal use and following care instructions. This excludes damage from misuse or abuse. Minor imperfections and slight color variations are normal. Plastic components are not covered under warranty.

All-Clad will not be responsible for any indirect, incidental, special, punitive, or consequential damages related to the All-Clad products. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Should your All-Clad cookware require repair or replacement, please contact our Consumer Service Department by phone at 1-800-ALL-CLAD or email us at info@allclad.com for return procedures and a return authorization number. If All-Clad confirms and approves your claim, All-Clad will elect to repair or replace the item without charge. If the replacement product is no longer in production, one of equal or greater retail value will be given.

424 Morganza Road, Canonsburg, PA 15317

1-800-ALL-CLAD

www.all-clad.com • info@all-clad.com

GOURMET
ACCESSORIES

GOURMET ACCESSORIES

- **ALWAYS WEAR OVEN MITTS** when handling lid and pot.

Care and Cleaning:

Before the first use, wash in hot soapy water with a sponge or dishcloth. Rinse in hot water and dry thoroughly.

Cleaning the Stainless Steel Interior:

Immerse in warm water. Use a fine powder cleanser with water to form a paste. Apply paste using a soft cloth. Rub in a circular motion from the center outward. Wash in hot soapy water, dry immediately. **DO NOT USE** oven cleaners or cleansers with chlorine bleach. **DO NOT USE** steel wool.

Cleaning the Stainless Exterior:

The polished stainless steel exterior of All-Clad Gourmet Accessories requires very little care. It may be polished with one of the available commercial stainless steel cleaners, rubbing in a circular motion. Rinse in lukewarm water. We do not recommend using steel wool, steel scouring pads or harsh detergents. Nylon scrubbing pads are safe to use. You may wash in the dishwasher.

Cleaning the Perforated Stainless Steel Insert:

The perforated steel pasta and steamer inserts are dishwasher safe. For best results, hand wash immediately after use. Rinse with warm water, then immerse in warm, soapy water and clean with a stiff brush. Rinse with hot water and dry immediately.