

# Tefal®


NOVEO

EN

KO




1a

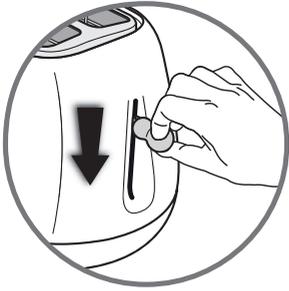


1b




2

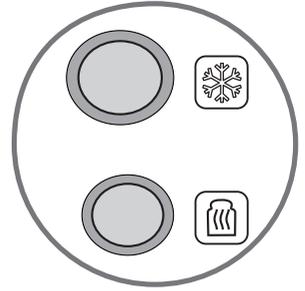


3

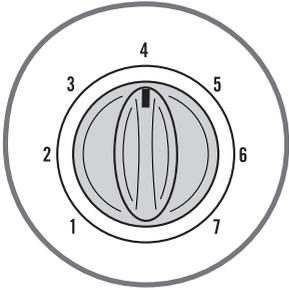


4

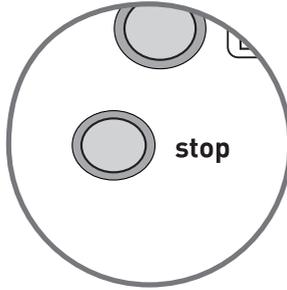

5

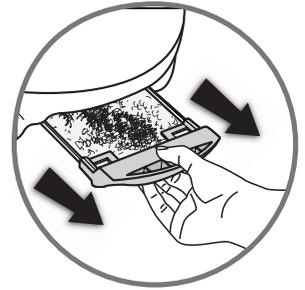

6

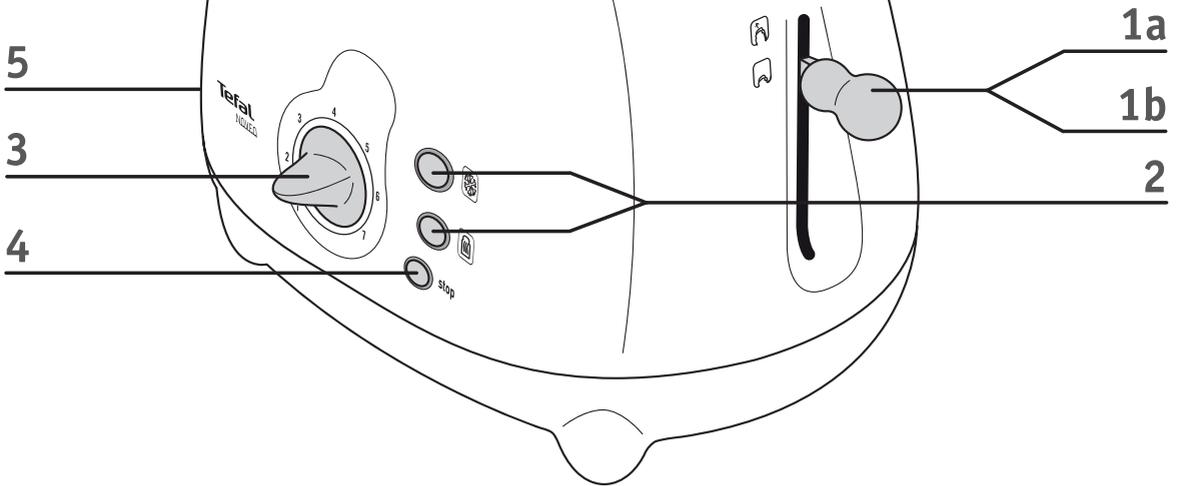

# English

## SAFELY INSTRUCTIONS

### IMPORTANT SAFEGUARDS:

- This appliance is not intended to be operate using an external timer or separate remote, control system.
-  • **For your safety, this appliance conforms, with applicable standards and regulations (Directives on low voltage, electromagnetic compatibility, materials in contact with foodstuffs, environment, etc.).**
-  • **In accordance with the CSC notice of 2/12/04, this product features a mechanical design allowing the bread ejection mechanism to be detached from the power cut-off element.**
- Check that the electricity supply voltage corresponds to the voltage indicated on the appliance (ac current only).
- Given the many standards in effect, if this toaster is used in a country other than the country where it was purchased, have it checked by an approved service centre (see enclosed after sales service information).
- Check that the electricity installation is sufficient to supply the power required by this appliance.
- Always plug the toaster into an earthed socket.
- Use extension leads which are in good condition, with an earthed connection, and with a minimum rating of 10A.
-  • **This appliance is intended to be used in household only. It is not intended to be used in following applications, and the guarantee will not apply for:**
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments.

### TO PREVENT ANY ACCIDENTS

When using electrical appliances, basic safety precautions should always be followed:

#### DO:

- Carefully read and follow all the instructions for use.

- Close supervision is necessary when the toaster is used by or near children or certain disabled persons who are not familiar with these instructions and should only use this toaster under surveillance of a responsible adult.
- The toaster must always be used in the upright position, never on its side or tilted forwards or backwards.
-  • **Before each use make sure that the crumb tray is fitted correctly.**
- Regularly remove crumbs from the crumb tray.
- The bread control lever must be in the "Up" position before plugging in or unplugging the appliance.
- Unplug the appliance if it shows any working abnormalities.
- Unplug from the power socket when not in use during and before cleaning. Allow to cool down before cleaning or storing.
- To unplug remove the plug from the wall socket (when the toasting cycle is finished).
- If the bread jams in the slots after toasting and the elements do not switch off, unplug the plug immediately and wait for the appliance to cool before attempting to remove the bread.
- Bread can burn; Therefore do not use this appliance near any flammable materials such as curtains, under shelving or under wall cupboards.
- Use on a flat, stable heat-resistant work surface, away from any contact with water and never use underneath a built in kitchen alcove.

#### DO NOT:

- Do not let the toaster operate unattended, particularly when toasting for the first time or when settings have been changed.
- Do not store the cord or the plug between the slots in the appliance.
- Do not unplug the appliance by pulling on the cord.
- Do not move or carry the appliance during use.
-  • **This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.**

 • **Children must be supervised to ensure that they do not play with the appliance.**

- Do not leave the appliance within the reach of children.
- Do not use outdoors. Avoid humid environments.
- Do not use the appliance for any other use other than that for which it was designed.
- Do not touch the metal parts or hot surfaces of the appliance when it is working.
- Oversized foods, metal foil packages, or utensils (spoon, knife, etc.) must not be inserted into a toaster as they may cause an electric shock or fire.
- Do not use accessory attachments that are not recommended by the manufacturer as this may be dangerous.
- To protect yourself against an electrical shock do not immerse the cord, plugs, or appliance in water or other liquids.

 • **Do not place any sugar coated type of bread in the toaster or anything that may melt or drop into the toaster, do not toast small pieces of bread or croutons as this may cause damage to the toaster or a risk a fire.**

 • **Do not try to toast very thick slices of bread that could become stuck in the toasting slots.**

- Do not use this appliance if:
  - it has a damaged cord,
  - the appliance has been dropped and has visible damage or does not operate properly.In any of these instances, the appliance must be sent to your local approved after-sales service centre to avoid any risk of danger. Refer to the guarantee enclosed.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not let the cord hang over the edge of the worktop or come into contact with hot surfaces.
- Do not place on or near a gas burner, electric ring/hob, or near a heated oven.
- Do not cover this appliance while in use.

 • **Bread can burn, therefore the appliance must not be used near or below curtains and other combustible materials such as curtains, drapes or wood (shelving, cupboards...) it should be attended when in use.**

• Do not put paper towels, cardboard or plastic in, on or under the toaster.

 • **If flames were to arise from parts of the toaster, never attempt to extinguish them with water. Unplug the appliance and smother the flames with a damp cloth.**

- Do not attempt to dislodge food once the toasting cycle is engaged.
- Do not use this appliance as a source of heating or drying.
- Do not use the toaster for cooking, grilling or defrosting frozen food other than bread products.
- Do not use the appliance to toast bread and warm croissants (or similar products) at the same time (depending on model).
- The metal frame can become very hot. Do not touch it! Use an oven glove or tongs (depending on model).
- Do not use any abrasive cleaning agents (no soda-based scouring products, no scouring pads...), no metallic utensils, metal scouring pads etc.
- For appliances with a metallic finish: Do not use any cleaning products designed for metals: use a soft cloth with a window or glass cleaner.

## SAVE THESE INSTRUCTIONS



**Environment protection first!**

- ① Your appliance contains valuable materials which can be recovered or recycled.
- ➔ Leave it at a local civic waste collection point.

If you have any product problems or queries please contact our Helpline:

0845 602 1454 - UK

(01) 677 4003 - ROI

or consult our website: [www.tefal.co.uk](http://www.tefal.co.uk)

# 한국어

## 안전상 주의사항

• 본 제품은 외부 타이머 또는 개별 리모콘으로 작동하도록 고안된 제품이 아닙니다.

 • 사용자의 안전을 위해서 본 가전제품은 적용 기준 및 규정을 준수합니다. (저전압, 전자석 호환성, 음식물 접촉물, 환경 등)

 • CSC고시 (2004. 2. 12)에 의거, 본 제품은 빵 방출 장치가 전력 차단 구성요소로 부터 분리 될 수 있습니다.

• 사용전압이 제품에 표기된 전압과 일치하는지 확인하십시오. (전원 기준에 따라 달라질 수 있음)

• 나라에 따라 해당기준이 다르므로 제품을 구입 한 나라가 아닌 곳에서 사용할 때에는 공인된 서비스 센터에 확인을 받으십시오. (A/S 정보는 동봉한 설명서를 참조하시기 바랍니다.)

• 본 제품을 사용하기 위한 전력이 충분히 공급 될 수 있는지 전기시설을 확인하십시오.

• 전원을 연결할 때에는 반드시 전지된 소켓에 하셔야합니다.

• 전원 연결장치를 사용하실 때에는 반드시 최소 10A의 접지된 것이어야 합니다.

 • 본 제품은 가정용으로 제조되었습니다. 다음과 같은 장소에서 사용 되었을 경우는, 품질 보증 혜택을 받으실 수 없습니다.

- 가게, 사무실 및 다른 영업적인 환경

- 농장 시설

- 음식점 및 레스토랑 (아침 및 저녁식사 형태 제공)

- 호텔, 모텔 및 기타 숙박시설 내에서 고객 접대용

## 사고를 예방하기 위해

전기제품을 사용할 때에는 다음의 기본적인 안전상 주의사항을 준수해 주십시오.

## 준수사항

• 사용설명서를 주의깊게 읽어주십시오.

• 토스터는 항상 똑바로 세워서 사용해 주십시오.

 • 제품 사용 전 빵부스러기받이를 비워주십시오.

• 정기적으로 빵 부스러기받이를 비워주십시오.

• 빵 올림, 내림 손잡이는 전원을 연결하거나 전원코드를 콘센트에서 빼기 전에 반드시 위로 향해있도록 하십시오.

• 제품을 사용한 후, 또는 세척 전에 반드시 전원 코드를 빼 주십시오. 세척이나 보관 전에는 제품을 완전히 식혀주십시오.

• 빵이 투입구에 걸려 나오지 않거나 열선이 꺼지지 않을경우, 즉시 전원코드를 빼고 제품이 완전히 식을 때까지 기다린 후에 빵을 꺼내십시오.

• 토스트 시간이 끝난 후에는 코드를 전원장치에서 빼 주십시오.

• 토스터는 안정되고 열에 강한 바닥위에 두고 사용하시고, 물이 튀지 않도록 주의하십시오. 화재의 위험이 있으므로 제품을 커튼이나 선반 밑과 같이 가연성이 있는 물체 옆에 두지 마십시오.

주의: 다음의 사항을 주의하여 주십시오.

• 전원코드와 전원 플러그를 제품의 빵 투입구에 넣지 마십시오.

• 전원코드를 잡아당겨 콘센트에서 빼지 마십시오. 전원플러그를 잡고 빼주십시오.

• 사용 중일 때에는 제품을 운반하지 마십시오.

! • 본 제품은 감각기관 또는 지적능력이 부족한 사람(아동포함) 또는 경험과 지식이 부족한 사람이 사용해서는 안됩니다. 단 보호자의 감독 또는 지도하에서 사용할 경우는 예외입니다. 어린이나 장애우가 사용 중일 때에는 반드시 주의 깊게 지켜봐 주십시오.

! • 어린이가 제품을 가지고 장난치지 않도록 주의 깊게 지켜봐 주십시오.

- 제품이 작동 중일 때, 특히 처음 사용하시거나 제품의 설정을 변경하셨을 경우에는 제품을 방치하지 마십시오.
- 빵을 굽는 이외의 용도로 사용하지 마십시오.
- 너무 두꺼운 빵, 금속 호일 등을 토스터에 넣지 마십시오. 전기쇼크 및 화재의 위험이 있습니다.
- 본 제품에 포함되지 않은 다른 제품용 부속품을 사용하지 마십시오.
- 전기 쇼크를 방지하기 위해서 코드, 플러그 또는 토스터를 물 또는 기타 액체에 담그지 마십시오.

! • 설탕이 입혀진 빵은 설탕이 녹아내릴 수 있으므로 토스트하지 마십시오. 매우 작은 조각의 빵이나 샐러드 장식용의 작은 빵은 제품의 기능을 손상시키거나 화재를 유발할 수 있으므로 토스트 하지 마십시오.

! • 너무 두꺼운 빵은 제품에 걸려 문제가 발생할 수 있습니다.

- 다음과 같은 경우에는 제철을 사용하지 마시고, 당사 서비스센터(1588-1588)에 의뢰하십시오.
  - 전원코드가 손상된 경우
  - 제품을 떨어뜨렸거나 손상되었거나 작동상에 문제가 있는 경우
- 전원코드가 손상되었을 경우 위험상황을 방지하기 위해 자사 서비스센터에 의뢰하여 주십시오.
- 제품의 전원코드를 늘어뜨려 놓거나, 제품의 뜨거운 부분에 닿지 않도록 주의하십시오.
- 실외에서 사용을 하지마시고, 습기찬 환경을 피해주십시오.

- 제품을 가스, 전기버너, 가열된 오븐 등 전열기 옆에 두지 마십시오.
- 먼지방지 뚜껑을 닫은 상태에서 제품을 동작시키지 마십시오.

! • 화재의 위험이 있으므로, 벽이나 선반아래 혹은 블라인드나 커튼과 같은 가연성이 있는 물체 근처에는 제품을 작동시키지 마십시오.

- 종이나 플라스틱을 토스터 안이나 위, 아래에 두지 마십시오.

! • 토스터에서 불이 날 경우 절대로 물로 끄려고 하지 마십시오, 젖은 헝겊으로 불꽃을 약하게 하십시오.

- 토스트 중일 때에는 빵을 꺼내지 마십시오.
- 본 제품을 전열기로 사용하지 마십시오.
- 냉동 식품의 가열, 그릴, 해동을 위해 제품을 사용하지 마십시오.
- 토스트 기능과 크로와상 데우기 기능을 동시에 사용하지 마십시오. (모델에 따라 다름)
- 제품의 금속 부분이 매우 뜨거울 수 있습니다. 손으로 만지지 말고, 집게나 장갑을 이용하십시오.
- 세척시에는 연마제, 철 수세미, 금속성 기구 등을 사용하지 마십시오.

본 사용설명서를 잘 보관하십시오.





### 환경보호






- ① 본 제품은 재활용이 가능한 부품들을 포함하고 있습니다.
- ➡ 환경을 보호를 위해 분리 수거해 주십시오.

만약 제품에 이상이 있거나 문의가 있으시면 대우 일렉서비스 센터(1588-1588)로 연락하십시오.



1

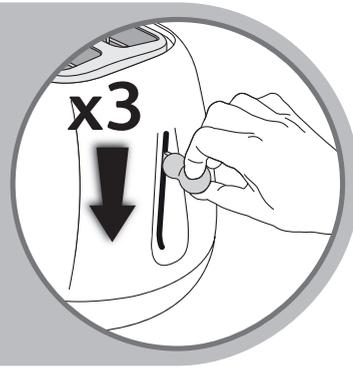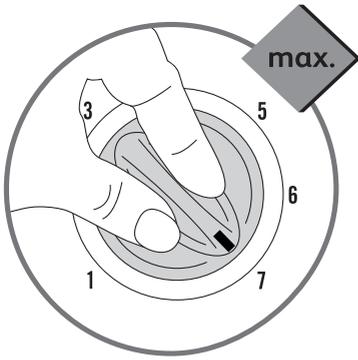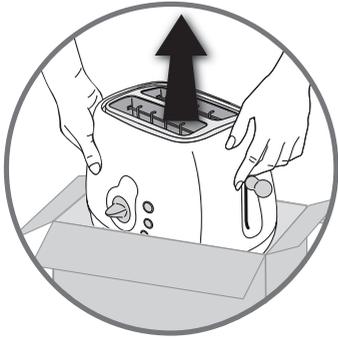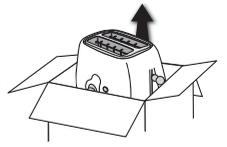




2

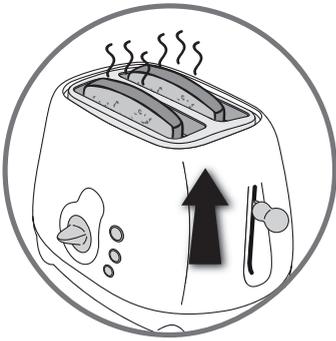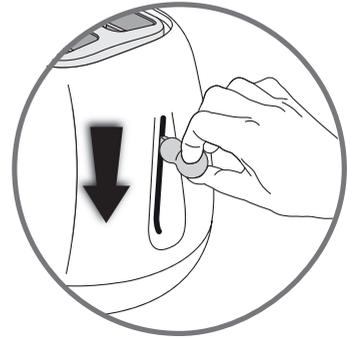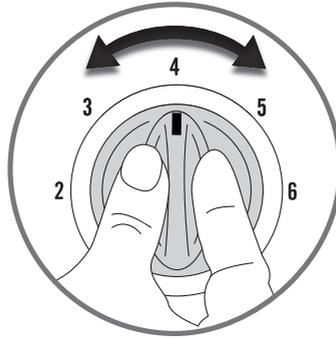



3

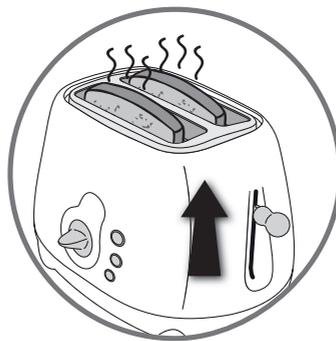
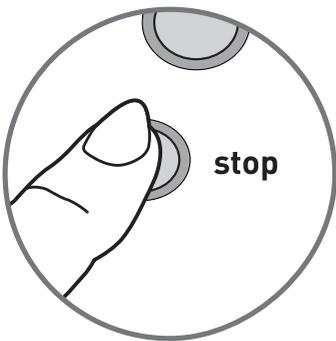







4






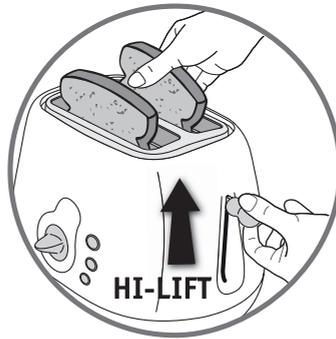
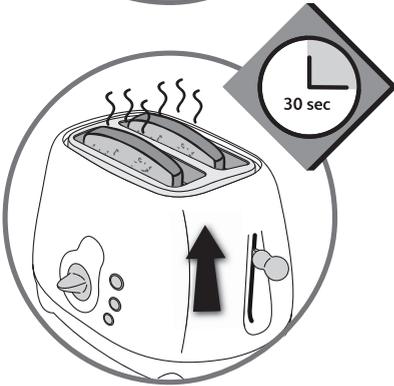
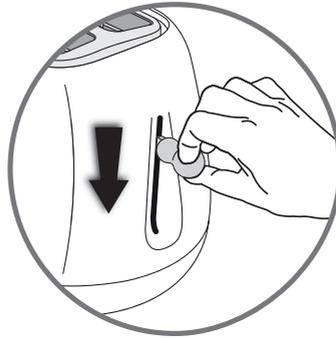


5

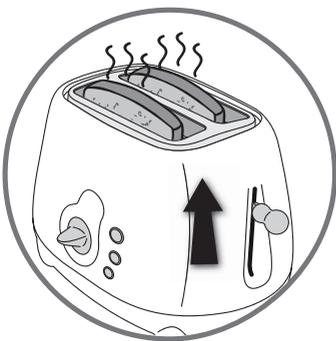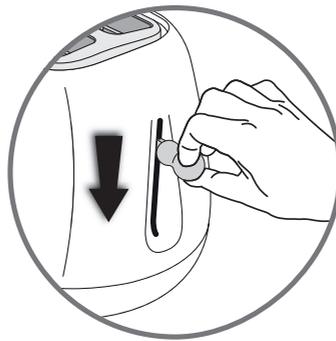

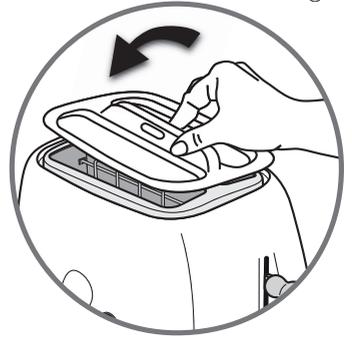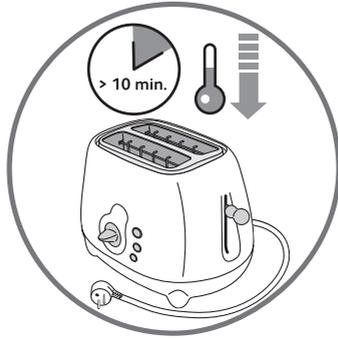

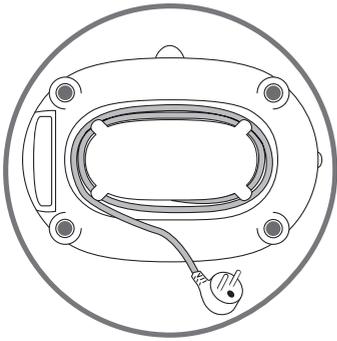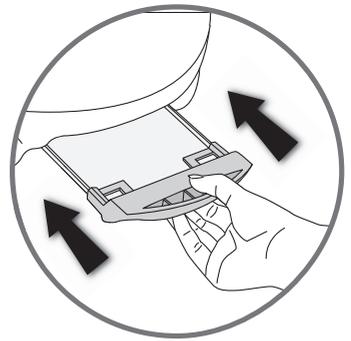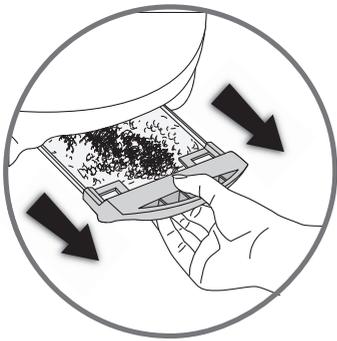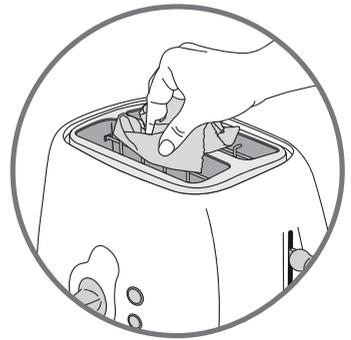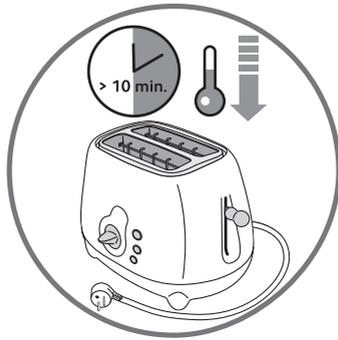

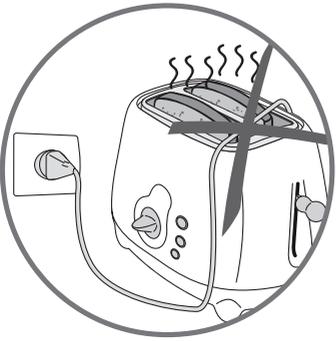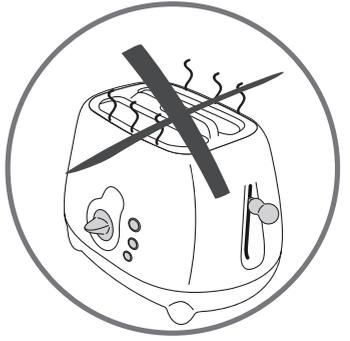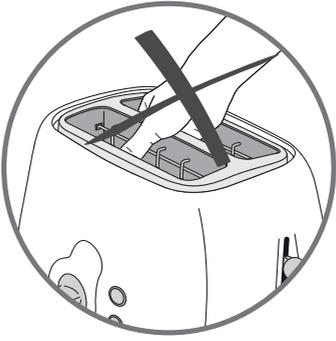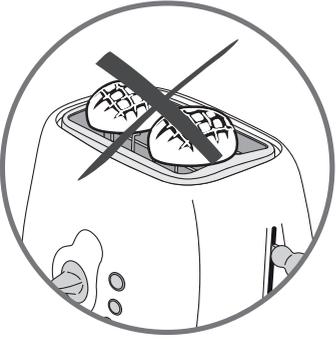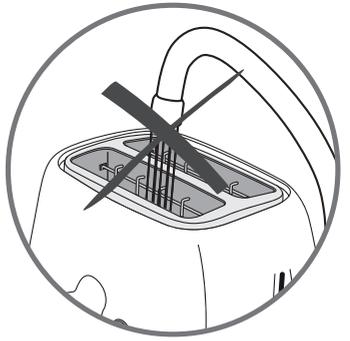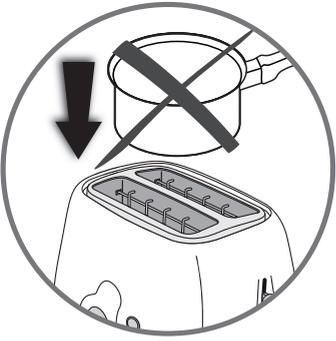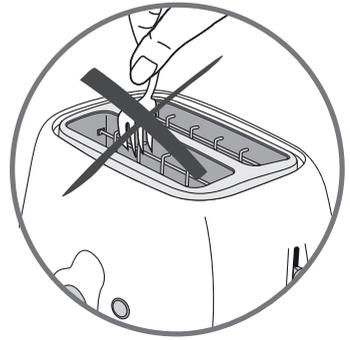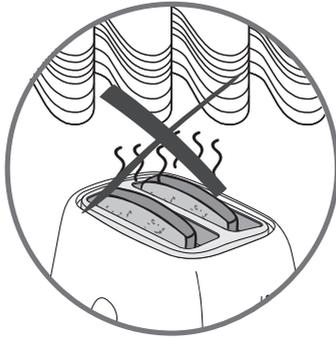

			
<b>ALGERIA</b>	GROUPE SEB EXPORT Chemin du Petit Bois, Les 4M 69130 ECULLY - FRANCE	<b>213-41 28 18 53</b>	1 year
<b>ARGENTINA</b>	GROUPE SEB ARGENTINA S.A. Billinghurst 1833 3° C1425DTK Capital Federal Buenos Aires	<b>0800-122-2732</b>	2 años
<b>ՀԱՅԱՍՏԱՆ ARMENIA</b>	«Գրուպպա ՄԵԲ-Վոստոկ»ՓԲԸ, 119180 Մոսկվա, Ռուսաստան Ստարոմոնետնի նրբ., տ.14, շ.2	<b>(010) 55-76-07</b>	2 տարի/ years
<b>AUSTRALIA</b>	GROUPE SEB AUSTRALIA PO Box 7535, Silverwater NSW 2128	<b>02 97487944</b>	1 year
<b>ÖSTERREICH</b>	SEB ÖSTERREICH HmbH Campus 21 - Businesspark Wien Süd Liebermannstr. A02 702 2345 Brunn am Gebirge	<b>01 866 70 299 00</b>	2 Jahre
<b>BELGIQUE / BELGIE</b>	GROUPE SEB BELGIUM SA NV 25 avenue de l'Espérance - ZI 6220 Fleurus	<b>32 70 23 31 59</b>	2 ans / years
<b>БЕЛАРУСЬ / BELARUS</b>	ЗАО «Группа СЕБ-Восток», 119180 Москва, Россия Старомонетный пер. д.14 стр.2	<b>017 2239290</b>	2 года/ years
<b>BOSNA I HERCEGOVINA</b>	SEB Développement Predstavništvo u BiH Vrazova 8/II 71000 Sarajevo	<b>Info-linija za potrošače 033 551 220</b>	2 godine
<b>BRASIL</b>	GRUPO SEB DO BRASIL PRODUTOS DOMESTICOS LTDA Avenida Arno, 146 Mooca 03108-900 São Paulo SP	<b>0800-119933</b>	1 ano
<b>БЪЛГАРИЯ/ BULGARIA</b>	ГРУП СЕБ БЪЛГАРИЯ ЕООД Ул. Борово 52 Г, ет. 1, офис 1, 1680 София	<b>0700 10 330</b>	2 години
<b>CANADA</b>	GROUPE SEB CANADA 345 Passmore Avenue Toronto, ON M1V 3N8	<b>1-800-418-3325</b>	1 year
<b>CHILE</b>	GROUPE SEB CHILE Comercial Ltda Avda. Nueva Los Leones 0252 Providencia, Santiago	<b>+56 2 232 77 22</b>	2 años
<b>COLOMBIA</b>	GROUPE SEB COLOMBIA Apartado Aereo 172, Kilometro 1 Via Zipaquira Cajica Cundinamarca	<b>18000919288</b>	2 años
<b>HRVATSKA Croatia</b>	SEB Développement S.A.S. Vodnjanska 26 10000 Zagreb	<b>01 30 15 294</b>	2 godine
<b>ČESKÁ REPUBLIK / CZECH REPUBLIC</b>	GROUPE SEB ČR spol. s r .o. Jankovcova 1569/2c 170 00 Praha 7	<b>731 010 111</b>	2 roky
<b>DANMARK</b>	GROUPE SEB NORDIC AS Tempovej 27 2750 Ballerup	<b>44 663 155</b>	2 år
<b>DEUTSCHLAND</b>	GROUPE SEB DEUTSCHLAND GmbH / KRUPS GmbH Herrnrainweg 5 63067 Offenbach	<b>0212 387 400</b>	2 Jahre

			
<b>EESTI/ ESTONIA</b>	GRUPE SEB POLSKA SP Z O.O. ul. Ostrobramska 79 04-175 Warszawa	<b>5 800 3777</b>	2 aastat
<b>SUOMI / FINLAND</b>	Groupe SEB Finland Kutojantie 7 02630 Espoo	<b>09 622 94 20</b>	2 Vuotta
<b>FRANCE</b> Inclus Martinique, Guadeloupe, Réunion & St. Martin	GRUPE SEB France SAS Place Ambroise Courtois 69355 Lyon Cedex 08	<b>09 74 50 47 74</b>	1 an
<b>GREECE / ΕΛΛΑΔΑ</b>	SEB GROUPE ΕΛΛΑΔΟΣ Α.Ε. Οδός Φραγκοκκλησιάς 7 Τ.Κ. 151 25 Παράδεισος Αμαρουσίου	<b>2106371251</b>	2 χρόνια
<b>HONG KONG</b>	SEB ASIA Ltd. Room 901, 9/F, North Block, Skyway House 3 Sham Mong Road, Tai Kok Tsui, Kowloon	<b>852 8130 8998</b>	1 year
<b>MAGYARORSZÁG/ Hungary</b>	GRUPE SEB CENTRAL-EUROPE Kft. Taviro koz 4 2040 Budaörs	<b>(1) 8018434</b>	2 év
<b>INDONESIA</b>	Groupe SEB Indonesia (Representative office) Sudirman Plaza, Plaza Marein 8th Floor JL Jendral Sudirman Kav 76-78, Jakarta 12910, Indonesia	<b>+62 21 5793 6881</b>	1 year
<b>ITALIA</b>	GRUPE SEB ITALIA S.p.A. Via Montefeltro, 4 20156 Milano	<b>199207354</b>	2 anni
<b>JAPAN</b>	GRUPE SEB JAPAN Co. Ltd. 1F Takanawa Muse Building, 3-14-13, Higashi Gotanda, Shinagawa-Ku, Tokyo 141-0022	<b>0570-077772</b>	1 year
<b>ҚАЗАҚСТАН KAZAKHSTAN</b>	«Группа СЕБ-Восток» ЖАҚ, 119180 Мәскеу, Ресей Старомонетный тұйық көш, 14-үй, 2-құрылыс	<b>727 378 39 39</b>	2 жыл / years
<b>KOREA</b>	(유)그룹 세브 코리아 서울시 종로구 서린동 88 서린빌딩 3층 110-790	<b>1588-1588</b>	1 year
<b>LATVJA / LATVIA</b>	GRUPE SEB POLSKA SP Z O.O. ul. Ostrobramska 79 04-175 Warszawa	<b>6 716 2007</b>	2 gadi
<b>LIETUVA/ LITHUANIA</b>	GRUPE SEB POLSKA SP Z O.O. ul. Ostrobramska 79 04-175 Warszawa	<b>6 470 8888</b>	2 metai
<b>MACEDONIA</b>	Groupe SEB Bulgaria EOOD Office 1, floor 1, 52G Borovo St., 1680 Sofia - Bulgaria ГРУП СЕБ БЪЛГАРИЯ ДООЕЛ Ул. Борово 52 Г, сп. 1, офис 1, 1680 София, България	<b>(0)2 20 50 022</b>	2 години / years
<b>MALAYSIA</b>	GRUPE SEB MALAYSIA SDN. BHD Lot No.C/3A/001 & 002, Block C, Kelana Sq. No.17, Jalan SS7/26, 47301 Kelana Jaya Petaling Jaya, Selangor	<b>65 6550 8900</b>	1 year
<b>MEXICO</b>	G.S.E.B. MEXICANA, S.A. de C.V. Goldsmith 38 Desp. 401, Col. Polanco Delegacion Miguel Hidalgo 11 560 Mexico D.F.	<b>(01800) 112 8325</b>	1 años

			
<b>MOLDOVA</b>	TOB «Груп СЕБ Україна» Вул. Драгоманова 31 Б, офіс 1 02068 Київ, Україна	<b>(22) 929249</b>	2 ani / years
<b>NEDERLAND</b>	GROUPE SEB NEDERLAND BV Generatorstraat 6 3903 LJ Veenendaal	<b>0318 58 24 24</b>	2 jaar
<b>NEW ZEALAND</b>	GROUPE SEB NEW ZEALAND Unit E, Building 3, 195 Main Highway, Ellerslie, Auckland	<b>0800 700 711</b>	1 year
<b>NORGE</b>	GROUPE SEB NORDIC AS Tempovej 27 2750 Ballerup DANMARK	<b>815 09 567</b>	2 år
<b>PERU</b>	GROUPE SEB COLOMBIA Av. Camino Real N° 111 of. 805 B San Isidro - Lima - Perú	<b>+511 441 4455</b>	1 años
<b>POLSKA/ POLAND</b>	GROUPE SEB POLSKA SP Z O.O. ul. Ostrobramska 79 04-175 Warszawa	<b>0801 300 422</b> koszt jak za połączenie lokalne	2 lata
<b>PORTUGAL</b>	GROUPE SEB IBÉRICA SA Urb. da Matinha Rua Projectada à Rua 3 Bloco1 - 3° B/D 1900 - 796 Lisboa	<b>808 284 735</b>	2 anos
<b>REPUBLIC OF IRELAND</b>	GROUPE SEB IRELAND Unit B3 Aerodrome Business Park, College Road, Rathcoole, Co. Dublin	<b>01 677 4003</b>	1 year
<b>ROMÂNIA/ ROMANIA</b>	GROUPE SEB ROMÂNIA Str. Daniel Constantin nr. 8 010632 București	<b>0 21 316 87 84</b>	2 ani
<b>РОССИЯ/ RUSSIA</b>	ЗАО «Группа СЕБ-Восток», 119180 Москва, Россия Старомонетный пер. д.14 стр.2	<b>495 213 32 37</b>	2 года/ years
<b>SRBIJA Serbia</b>	SEB Developpement Antifasisticke borbe 17/13 11070 Novi Beograd	<b>060 0 732 000</b>	2 godine
<b>SINGAPORE</b>	GROUPE SEB SINGAPORE Pty Ltd. 59 Jalan Pemipin, #04-01/02 L&Y Building Singapore 577218	<b>65 6550 8900</b>	1 year
<b>SLOVENSKO/ SLOVAKIA</b>	GROUPE SEB SLOVENSKO s.r.o. Rybničná 40 831 07 Bratislava	<b>233 595 224</b>	2 roky
<b>SLOVENIJA</b>	SEB d.o.o Gregorčičeva ulica 6 2000 MARIBOR	<b>02 234 94 90</b>	2 leti
<b>ESPAÑA</b>	GROUPE SEB IBÉRICA S.A. Almogàvers, 119-123, Complejo Ecurban 08018 Barcelona	<b>0902 31 25 00</b>	2 años
<b>SVERIGE</b>	TEFAL SVERIGE SUBSIDIARY OF GROUP SEB NORDIC Truckvägen 14 A, 194 52 Upplands Väsby	<b>08 594 213 30</b>	2 år
<b>SUISSE SCHWEIZ</b>	GROUPE SEB SCHWEIZ GmbH Thurgauerstrasse 105 8152 Glattbrugg	<b>044 837 18 40</b>	2 ans / Jahre
<b>TAIWAN</b>	SEB ASIA Ltd. Taipei International Building, Suite B2, 6F-1, No. 216, Tun Hwa South Road, Sec. 2 Da-an District Taipei 106, R.O.C.	<b>886-2-27333716</b>	1 year

			
<b>THAILAND</b>	GROUPE SEB THAILAND 2034/66 Italthai Tower, 14th Floor, n° 14-02, New Phetchburi Road, Bangkapi, Huaykwang, Bangkok, 10320	<b>02723 4488</b>	2 years
<b>TÜRKIYE</b>	GROUPE SEB ISTANBUL AS Beybi Giz Plaza Dereboyu Cad. Meydan Sok. No: 28 K.12 Maslak	<b>216 444 40 50</b>	2 YIL
<b>U.S.A.</b>	GROUPE SEB USA 2121 Eden Road Millville, NJ 08332	<b>800-769-3682</b>	1 year
<b>Україна/ UKRAINE</b>	ТОВ «Груп СЕБ Україна» Вул. Драгоманова 31 Б, офіс 1 02068 Київ, Україна	<b>044 492 06 59</b>	2 роки/ years
<b>UNITED KINGDOM</b>	GROUPE SEB UK Ltd. 11-49 Station Road Langley, Slough Berkshire SL3 8 DR	<b>0845 602 1454</b>	1 year
<b>VENEZUELA</b>	GROUPE SEB VENEZUELA Av Eugenio Mendoza, Centro Letonia, Torre ING Bank, Piso 15, Ofc 155 Urb. La Castellana, Caracas	<b>0800-7268724</b>	2 anno
<b>VIETNAM</b>	GROUPE SEB VIETNAM (Representative office) 127-129 Nguyen Hue Street District 1, Ho Chi Minh City, Vietnam	<b>+84-8 3821 6395</b>	1 year







