

1 - DESCRIPTION OF THE APPLIANCE

- 1. On/off switch (0-1)
- 2. Unplug button
- 3. Gumb za vključivanje/izključivanje (32 mm)
- 4. Recharging and storage base
- 5. Comb
- 6. Scissors
- 7. Comb
- 8. Cleaning brush
- 9. Redanger
- A. "Special" beard and moustache " guide : 7 positions, from 1.5mm to 14 mm

2 - SAFETY INSTRUCTIONS

- For your safety, this appliance complies with the applicable standards and regulations (Low Voltage Directive, Electromagnetic Compatibility, Environmental...).
- Check that the voltage of your electricity supply matches the voltage of your appliance. Any error in connecting the appliance can cause dangerous harm, not covered by the guarantee.
- The installation of the appliance and its use must however comply with the standards in force in your country.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- The appliance must be unplugged before carrying out maintenance procedures, if it is not working correctly, before cleaning it or before changing the cutting height.
- If your appliance does not work correctly:

 - Do not touch the plug or the cord, rather pull out by the plug.
 - Do not use an electrical extension lead.
 - Do not clean with abrasive or corrosive products.
 - Do not use at temperatures below 5°C and above 30°C.
 - Turn off the device and unplug it with the power pack supplied model 0094200020 - INPUT : 100-240V - 50/60 Hz - MAX. 2W; OUTPUT: 2.3V - 90 mA.

WARNING! The parts held in the hand must be unplugged before being cleaned with water. The water must not be hotter than 70°C. Suitable for a use in the bathtub or under the shower.

GUARANTEE! Your appliance is designed for use in the home only. It should not be used for professional purposes. The guarantee becomes null and void in the case of improper usage.

3 - USING FOR THE FIRST TIME

Before use, make sure your appliance is charged. This appliance does not work in AC mode.

Using in standalone mode (wireless):

- The device works with 1 battery.
- To maximize autonomy of the batteries:

 - Before using for the first time, charge the device up using the adapter for 14 hours. The first few times you use it, it is preferable to fully discharge your battery before recharging to maximize autonomy.
 - A full charge takes 2 hours.
 - After turning the transformer off, the device has about 45 minutes of autonomy.

Warning: to avoid deterioration of the batteries:

- Never exceed more than 20% of charge.
- Do not charge the batteries too prematurely; only recharge them when the power of the appliance has decreased significantly or if it has not been used for more than 6 months.

4 - CUTTING GUIDE

- 1 multi length cutting guide:
Special "beard and moustache" guide (A): 7 positions, from 1.5mm to 14 mm

Assembly of the cutting guide:

- To place the "special beard" cutting guide (A), clip it onto the body of the appliance. Then turn your cutting position by pressing the button on the back of the guide. The cutting height is displayed in the window at the back of the guide, according to the following principle:

Adjusting cutting guide A:

Setting	Length obtained (mm)
1	1.5mm
2	3.5mm
3	5.5mm
4	7.5mm
5	9.5mm
6	11.5mm
7	14mm

To change position: push the guide desired number of notches by pressing the button on the back. The cutting height is displayed in the window at the back of the guide.

5 - TIPS FOR USE

This trimmer can be safely used under the shower.

To trim the beard and moustache:

- Place the "beard" cutting guide (A) on the blade and slide it to the desired position. If you are using the clipper for the first time, begin with the highest height to get used to the device.
- Turn the device on.
- Move the clipper slowly in the opposite direction to the hair growth.
- Repeat as many times as necessary.

6 - LUBRIFICATION OF THE BLADE

To ensure your clipper always remains effective, it is essential that the cutting blades be lubricated before each use. Use the lubricant supplied or, failing this, with sewing machine oil.

• Before lubrication, unclip the appliance and remove any hairs that are stuck between the cutting blades of the clipper using the hair brush.

• Lubricate the blades where indicated: one drop per location is enough.

• Operate the clipper for a few seconds.

• Clean the excess oil with a rag.

7 - MAINTENANCE, CLEANING AND STORAGE

The clipper requires very little maintenance. You can clean it with a damp cloth.

Cleaning the cutting head:

- Place the on/off switch on stop.
- Then place the clipper and/or the head used under cold running water for a few seconds.
- Shake the clipper and/or head used vigorously, then leave to dry before being used again.

Storage: Store the device and accessory on their base.

ENVIRONMENT PROTECTION FIRST !

• Our appliance contains valuable materials which can be recovered or recycled.

• Leave it at a local civic waste collection point.

Recycling the batteries

Before removing the NiMH batteries, discharge them completely. Open the battery compartment using a tool, cut all the connections and then recycle the batteries in a safe manner.



