


For Kettle

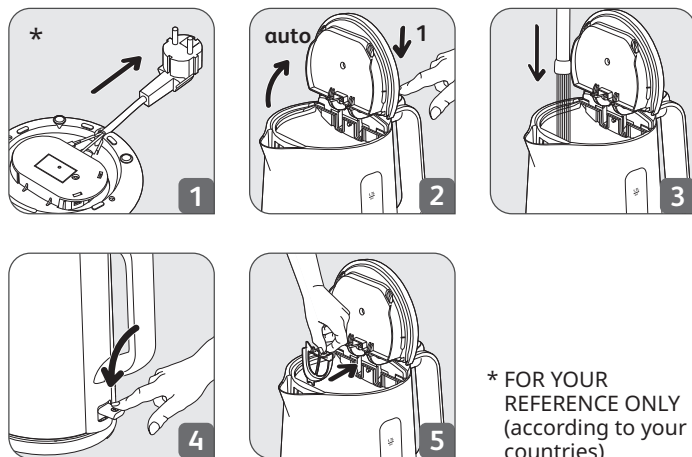

SAFETY INSTRUCTIONS

IMPORTANT SAFEGUARDS:

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **CAUTION:** Do not operate the kettle on an inclined plane. Do not operate the kettle unless the element is fully immersed. Do not move while the kettle is switched on.
- **CAUTION:** To prevent damage to the appliance do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.
- Keep the appliance and its cord out of reach of children aged less than 8 years.
- This appliance may be used by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, provided they are supervised or have received instruction to use the appliance safely and understand the dangers.
- Children should not use the appliance as a toy.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning

use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

- Your appliance was designed for domestic use only.
- It is not intended to be used in the following cases, which are not covered by the guarantee.
- In kitchens reserved for staff use in shops, offices and other professional environments;
- On farms;
- By hotel or motel clients, or on other residential premises;
- In bed and breakfast accommodation and other similar environments.
- Never fill the kettle past the maximum water level mark, nor below the minimum water level mark.
- If the kettle is too full, some water may spray out.
- **Warning:** Never open the lid when the water is boiling.
- Your kettle should only be used with its lid locked, with the base and the anti-scale filter supplied.
- Never immerse the kettle, its base or the power cord and plug in water or any other liquid.
- Never use the kettle if the power cord or the plug are damaged. Always have them replaced by the manufacturer, its after-sales service or similarly qualified persons in order to avoid danger.
- Children should be supervised to ensure that they do not play with the appliance.
- Children should not clean or perform maintenance procedures on the appliance unless they are supervised by a responsible adult.
- **WARNING:** Be careful to avoid any spillage on the connector during cleaning, filling or pouring.
- Always follow the cleaning instruction to clean your appliance;
- Unplug the appliance.
- Do not clean the appliance while hot.
- Clean with a damp cloth or sponge.

- Never immerse the appliance in water or put it under running water.
- **WARNING:** Risks of injuries if you do not use this appliance correctly.
- Only use your kettle for boiling drinking water.
- **WARNING:** The heating element surface is subjected to residual heat after use.
- Be sure to manipulate only the handle during heating until completely cool.
- Your appliance is intended for domestic use inside the home only at an altitude below 2000 m.

- For your safety, this appliance meets applicable standards and regulations (Directives on Low Voltage, Electromagnetic Compatibility, Materials in contact with food articles, Environment, etc.).
- Only plug the appliance into an earthed mains outlet. Check that the voltage indicated on the rating plate of the appliance corresponds to that of your electrical installation.
- Any connection error will invalidate your guarantee.
- The guarantee does not cover kettles that fail to operate or operate badly due to a failure to descale the appliance regularly.
- Do not let the power cord hang where children may reach it.
- Never disconnect the plug by pulling on the power cord.
- Any intervention other than normal cleaning and maintenance by the customer must be performed by an Approved Service Centre.
- All appliances are subject to strict quality control procedures. These include actual usage tests on randomly selected appliances, which would explain any traces of use.
- Never use scouring pads for cleaning purposes.
- To remove the scale filter, remove the kettle from its base and leave it to cool down. Do not remove the filter when the appliance is filled with hot water.*
- Do not use any method to descale the kettle other than that recommended.
- De-scale regularly, preferably at least once a month or more frequently if your water is very hard. Temperature detection in the kettle may be affected by limescale.
- To de-scale your kettle:
 - Using white vinegar which can be bought from hardware stores:
 - Fill the kettle with ½ litre of white vinegar,
 - Leave to stand for 1 hour without heating.
 - Using citric acid:
 - Boil ½ litre of water,
 - Add 25 g of citric acid and leave to stand for 15 min.
 - Empty your kettle and rinse 5 or 6 times. Repeat if necessary.
- Keep the kettle and its power cord away from any source of heat, from any wet or slippery surface and away from sharp edges.
- Never use the appliance in a bathroom or close to a water source.
- Never use the kettle when your hands or feet are wet.
- Always unplug the power cord immediately if you observe any anomaly during operation.
- Never pull on the power cord to remove it from the wall socket.
- Always remain vigilant when the appliance is on, and in particular be careful of the steam coming out of the spout which is very hot.
- Never leave the power cord hanging from a table top or kitchen counter to avoid any danger of it falling to the floor.
- Never touch the filter* or the lid when the water is boiling.
- Also be careful as the body of stainless steel kettles becomes very hot during operation. Only touch the handle of the kettle.
- Never move the kettle when it is in operation.
- Protect the appliance from damp and freezing conditions.
- Always use the filter* during heating cycles.
- Never heat the kettle when it is empty.
- Place the kettle and its power cord on a stable, heat proof and water resistant surface.
- The guarantee covers manufacturing defects and domestic use only. Any breakage or damage resulting from a failure to comply with these instructions for use is not covered by the guarantee.
- We recommend emptying the product, cleaning it well, rinsing it, and filling it to the required volume with safe drinking water right before each new use.

Environment protection first!

- Your appliance contains valuable materials which can be recovered or recycled.
- ➔ Leave it at a local civic waste collection point.

* Depending on model