


Mix&Move Blender



8020007609

EN : Read safety instructions and booklet carefully before using for the first time.



KO : 제품을 처음 사용하기에 앞서, 안전 지침과 서비스 안내 책자를 주의 깊게 읽으십시오.

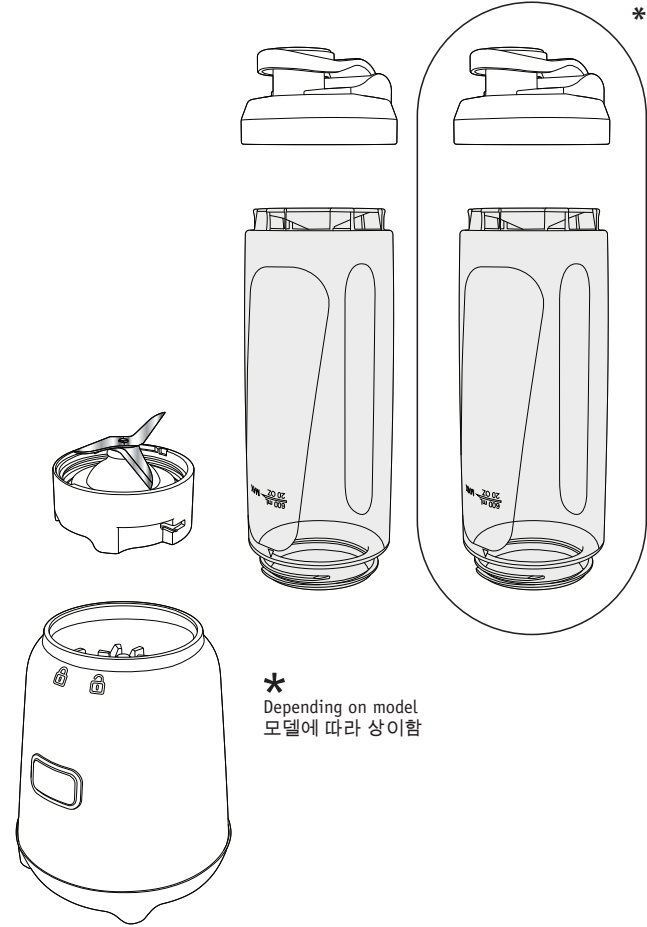






1

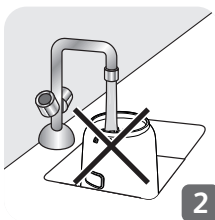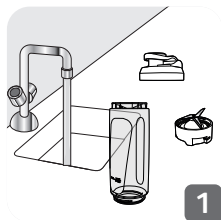



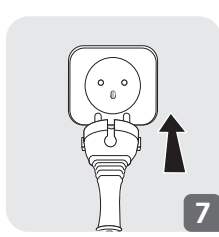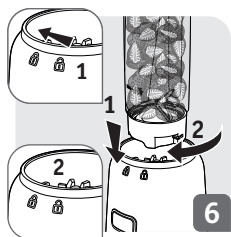

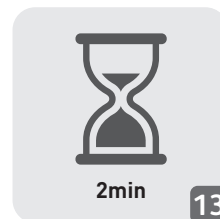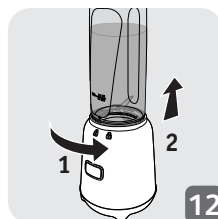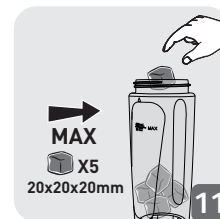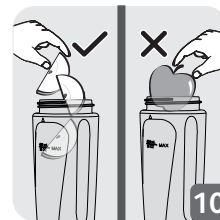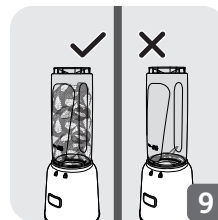

2




3



	 100g + 150g OF CARROTS OF WATER	30sec
	 90g of dried fig	15sec

			
	✗	✗	✓
	✓	✓	✓
	✓	✗	✗

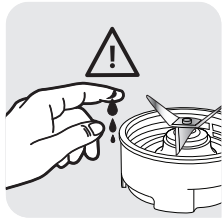

EN : Warning: Do not process hot liquids (over 60°C/140°F) in the on-the-go bottle.
 KO : 경고: 휴대용 텀블러 안에 뜨거운 액체(60°C/140°F 이상)를 넣지 마십시오.

EN : If your appliance does not work, check it is properly connected to the mains, the power cord is in good condition and the blade holder is assembled with the bottle. Apart from this, unplug and let the appliance cool down to room temperature when motor overheated and protected. Your appliance still does not work? Contact an approved service centre (see the service booklet).

ES : 제품이 작동하지 않으면 전원이 제대로 연결되어 있는지, 전원 코드가 양호한 상태인지, 칼날 홀더가 용기에 조립되어 있는지 확인하십시오. 이와는 별개로 모터가 과열되어 제품이 정지되면, 플러그를 뽑고 제품을 실온으로 식히십시오. 기기가 여전히 작동하지 않습니까? 이 경우 공식 서비스 센터에 문의 하십시오. (서비스 책자 참조)

