

Tefal[®]

EN




DT81XX
DT82XX

www.tefal.co.uk

PRODUCT DESCRIPTION



1. Control panel : On/off and steam level buttons
2. Heated soleplate
3. Water tank lock
4. Continuous steam lock switch
5. Steam trigger
6. Standing base
7. Removable water tank
8. Cord exit
- 9*. Fabric brush
- 10*. Steam bonnet
- 11*. Crease Attachment
- 12*. Door hook
- 13A*. Micro-fiber brush support
- 13B*. Micro-fiber
- 14*. Lint pad
- 15*. Travel bag

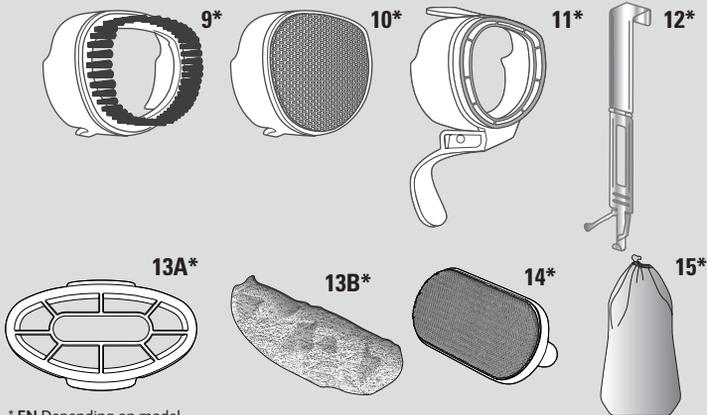

* EN Depending on model

* EN Depending on model

Important safety instructions

When using your appliance, basic precautions should always be followed, including the following:

- Read all instructions before using this product.
- This product has been designed for indoor, domestic use only. Any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and the guarantee will not apply.
- Always plug your appliance:
 - into a mains circuit with voltage between 220 V and 240 V.
 - into an earthed electrical socket.
 Connecting to the wrong voltage may cause irreparable damage to the appliance and will invalidate your guarantee.
- If an extension cord is absolutely necessary, ensure that it is correctly rated (16A) with an earth, and is fully extended. A cord rated for less amperage can result in a risk of fire or electric shock due to overheating. Care shall be taken to arrange the cord so that it cannot be pulled or be tripped over.
- Completely unwind the power cord before plugging into an earthed socket.
- Use appliance for its intended use only.
- The micro-fiber accessory must never be used to clean surfaces. This accessory is only made to remove impregnated dust from textile.
- To reduce the risk of contact with hot water emitting from steam vents, check appliance before each use by holding it away from body and operating steam button.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- The fabric steamer must not be left unattended while it is connected to the supply mains.
-  The surfaces which are marked with this sign, the soleplate and steam cord are very hot during the use of the appliance. Do not touch these surfaces before the appliance has completely cooled down.
- Never disconnect the appliance by pulling on the power cord; instead, grasp the plug and pull to remove from the socket outlet.
- Do not allow cord to touch hot surfaces or come into contact with rough or sharp edges. Let the appliance cool completely down before putting away. Loop cord loosely around appliance when storing.
- Always disconnect appliance from the electrical supply when filling with water or emptying when cleaning, when removing or refitting accessories and when not in use.
- Care should be taken when using the appliance due to the emission of steam.
- Do not operate appliance with a damaged cord or if appliance has been dropped or damaged. To avoid the risk of electric shock, do not disassemble or attempt to repair the appliance. Take it to the nearest approved service centre for examination and repair. Incorrect reassembly or repair could cause a risk of fire, electrical shock or injury to persons when the appliance is used.
- Close supervision is necessary for any appliance being used by or near children.
- Never leave the appliance unattended when it is connected to the mains. Before storing the appliance, once it is unplugged, please wait until it has cooled down (around 1 hour).
- Burns could occur from touching hot metal or plastic parts, hot water or steam. Use care when you empty a steam appliance. There may be hot water in the reservoir.
- Keep the fabric steamer and its cord out of reach of children less than 8 years of age when it is energized or cooling down.

- To protect against a risk of electric shock, do not immerse the appliance in water or other liquids.
- Do not direct steam at people, animals or clothes while they are being worn.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- The use of accessory attachments other than those provided by the manufacturer is not recommended and may result in fire, electric shock or personal injury.
- The appliance must be used and placed on a flat, stable, heat-resistant surface. When you place the iron on the iron rest, make sure that the surface on which you place it is stable.
- The appliance must not be used if it has been dropped, if it has any visible damage, if it leaks or if it functions abnormally in any way. Do not attempt to dismantle your appliance : have it examined at an approved service centre to avoid any danger.
- Check the electrical power cord for sign of wear or damage prior to use. If the electrical power cord is damaged, it must be replaced at an approved service centre to avoid any danger.
- Do not use other descaling products than the one cited in the IFU.
- To achieve optimal results in sanitizing , gently steam back and forth 3 times on the fabric.

Before first use

- When you first use the appliance, some smoke or a harmless odour may be produced or there may be a small discharge of particles. This will not affect the use of the appliance and will disappear quickly.

What water to use?

- Your appliance has been designed to use untreated tap water.
- Do not use pure demineralised or pure distilled water, water from clothes dryers, scented or softened water, rain water, filtered, bottled or boiled water, water from refrigerators, batteries or air conditioners as these may damage the appliance. These types of water contain organic waste, mineral elements that become concentrated when heated and cause spitting, brown staining, leaking or premature wear on your appliance. If your water is very hard, mix 50% untreated tap water with 50% distilled water (available in hardware stores). This water contains organic waste materials or minerals that concentrate under the effect of heat and cause spitting, brown colouring or premature ageing of your appliance.

SAVE THESE INSTRUCTIONS



Environment protection first !

- ① Your appliance contains valuable materials which can be recovered or recycled.
- ② Leave it at a local civic waste collection point.

Problems with your garment steamer?


PROBLEM	POSSIBLE CAUSES	SOLUTIONS
There is no steam.	The appliance is not plugged in, or not switched on.	Check that your appliance is correctly plugged in and switched on.
	The water level is too low.	Unplug your appliance and refill it.
	The steam pump has not been primed.	Press the steam trigger continuously for a few seconds to begin steaming.
	You are using the appliance for the first time.	Press the steam trigger continuously for a few seconds to begin steaming.
	The water tank is not fully in place.	Ensure that stopper is closed and that the water tank snaps when put into place.
	The appliance is on stand by mode* or auto-off*.	PLEASE REFER TO THE 'STANDBY/ AUTO-OFF' section.
The appliance does not heat.	It is not plugged in, or not switched on.	Plug in your appliance and switch on.
	The appliance is on stand by mode* or auto-off*.	PLEASE REFER TO THE 'STANDBY/ AUTO-OFF' section.
Water leaks.	The water tank is not fully in place or the stopper is not closed properly.	Ensure that stopper is closed and that the water tank snaps when put into place.
	Boost mode has been used too often (more than 3 times a minute)	Avoid using the boost more than 3 times a minute.
Steam rate decreases.	Scale has built up in the appliance	Refer to 'EASY DESCALING' section in instructions for use.
The steam leaves stains on the fabric or the appliance spits.	You are using water with additives.	Never add any additive in the water tank.
	The appliance has not been cleaned enough after the descaling operation.	Read carefully the 'EASY DESCALING' section in instructions for use.
	You are using other liquids than white vinegar to descale the product.	Use only white vinegar during 'EASY DESCALING' procedure.
Appliance steams continuously.	The steam trigger is on the lock position.	Unlock the steam trigger.
Micro-fiber brush* support is removed from the steam head. Micro-fiber* is removed from the micro-fiber brush* support.	You scrub too tightly the textile.	Scrub softly the textile to remove impregnated dust.

* EN Depending on model

1 BEFORE USE



EN Unlock and remove the water tank.

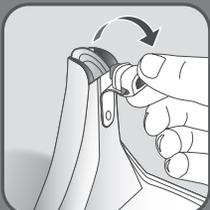

EN Remove the water inlet stopper.



EN Fill the water tank with untreated tap water.



EN Close the water inlet stopper.



EN Return the water tank to its place on the appliance. Make sure that the water tank is fully set in place and locked.



EN Hang your garment on a clothes hanger.

2 ACCESSORIES



EN Before removing or attaching accessories, unplug your appliance and allow it to cool down, for one hour.



EN

The door hook* allows to hang your garment for steaming.



EN

The fabric brush* opens the weaves of the fabrics for better steam penetration.



EN

The steam bonnet* protects garments from the heated plate. This accessory must be used for delicate fabrics.




EN

The crease attachment* is used to press trousers easily. Put your fabric in the space between the two accessory parts. Move the crease attachment in a downwards motion starting from the top.



EN

The micro-fiber brush* is composed of a support and a micro-fiber. Wrap the micro-fiber around the support, release steam and softly scrub it with up and down movement on the textile in order to remove impregnated dust. When the micro-fiber is dirty, it can be cleaned, please refer to MAINTENANCE section. Never use the support without micro-fiber.

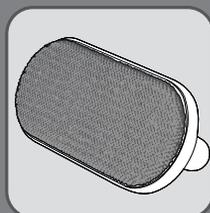

EN

The lint pad* is used to remove animal hair and lint from textiles.




EN

The travel bag* can be used to tidy the appliance. Before using the travel bag, unplug your appliance and allow it to cool down, for one hour.


3 USE



EN Warning : Never steam a garment while it is being worn.

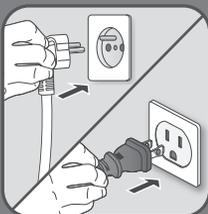

EN Plug-in the appliance.

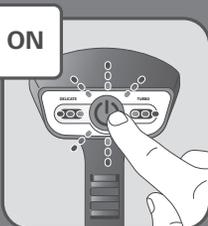


EN Switch on the appliance.



EN Wait until the light stops flashing. When the light is steady the appliance is ready to use.



EN Press the steam button with the appliance facing away from you holding it in a vertical position.

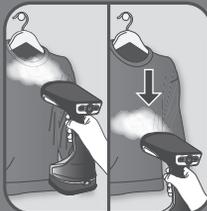

EN For optimal use, move the steam jets over your garment from top to down.



EN Delicate mode : a lower steam output for your most delicate textiles.



EN

Turbo mode : Ideal for heavy fabrics and to remove the stubborn creases.
To activate the boost, push for more than 2 seconds on this button. The boost will last approximately 3 seconds, and cannot be repeated more than 3 times a minute, every 20 seconds.




EN

For continuous steam, lock the steam trigger by pushing the lock switch down. To release it, push it up.



EN

Press and hold the On/Off button for 3 seconds to switch the appliance off.

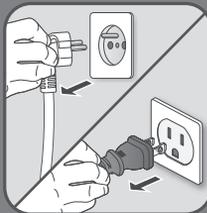

EN

Unplug the appliance.



EN

Warning: Never touch the soleplate of the appliance.

4 **STANDBY/AUTO-OFF MODE**




EN

- 1) For your safety, the appliance is fitted either with a standby monitoring system or auto-off system.
- 2) In case of standby system: it is activated after approximately 8 minutes without use. The ON/OFF button flashes slowly. To re-activate it, press the ON/OFF button once and wait to release steam.
- 3) In case of auto-off system: it is shutting off the appliance after approximately 8 minutes without use. To re-activate it, press the ON/OFF button once and wait to release steam.

5 AFTER USE



EN Unlock and remove the water tank.

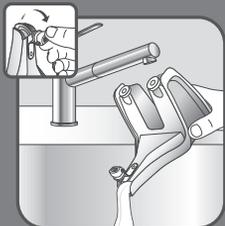

EN Empty the water tank completely.




EN Return the water tank to its place on the appliance.



EN Wait for an hour for your appliance to cool before storing.


6 EASY DESCALING

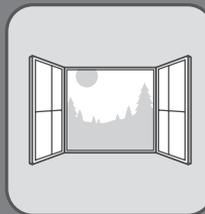

EN Do this operation in a vented room.



EN Unlock and remove the water tank.

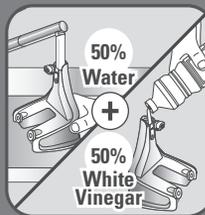

EN Fill the water tank with 50% water and 50% white vinegar.
Do not use other descaling products.



EN

Return the water tank to its place on the appliance. Make sure the water tank is fully set in place and locked.



EN

Plug in and switch on the appliance, then wait until the light stop flashing.



EN

Put the steam trigger in the locked position. Place the product on a flat, stable, horizontal and heat resistant surface.



EN

Allow the appliance to run until the water tank has completely emptied.



EN

Press and hold the On/Off button for 3 seconds to switch the appliance off.



EN

Unplug the appliance and pull the water tank out.



EN

Remove the water inlet stopper and fill the water tank with untreated tap water.



EN

Return the water tank to its place on the appliance. Make sure the water tank is fully set in place.



EN

Plug in and switch on the appliance, then wait until the light stop flashing.



EN

Put the steam trigger in the locked position. place the product on a flat, stable, horizontal and heat resistant surface.



EN


Allow the appliance to run until the water tank has completely emptied.

7 MAINTENANCE



EN

Wait an hour for complete cool down.

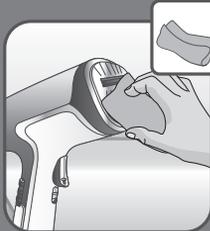

EN

Only use a dry cloth to clean. Do not use any detergent product.



EN

Never wash or rinse appliance directly over a sink.



EN

To clean the micro-fiber* remove it from its support. Follow the instruction set on the micro-fiber label to clean it in the correct way.

