

EN Please read the safety instructions before use

RU Перед использованием прибора внимательно прочтите инструкцию и соблюдайте меры безопасности.

UK

Після купівлі користуйтесь пристрієм, уважно прочитавши інструкцію з експлуатації та правила техніки безпеки.

LT

Lugej enne kasutamist tähelepanekult labi nii kasutusjuhend kui turvandub.

LV

Priēs naudotām atidzītā perspektīkite naudojimo instrukcijas ir saugos patarimus.

PL

Należy zapoznać się uważnie z instrukcją obsługi oraz z załączonym techniką bezpieczeństwa.

CS Pred použitím si pozorně přečtěte návod k použití a bezpečnostní pokyny.

1. GENERAL DESCRIPTION

- A. Top
- B. Led display 5 temperature positions + temperature locking
- C/+ button to reduce/increase temperature
- D. ON/OFF switch
- E. Straighting plates, Ceramic Titanium coating
- F. Rotating lock cord outlet
- G. Power supply cord
- H. Lock System (to lock and unlock the tongs)
- I. Ionic System (locking and unlocking the clips)

2. SAFETY INSTRUCTIONS

- For your safety this appliance complies with the applicable standards and regulations (e.g. VDE Directive, Electromagnetic Compatibility, Environmental,...).
- The applicable accessories become very hot during use. Avoid contact with skin or hair, otherwise burns or other damage may occur.
 - Check that the voltage of your electricity supply matches the voltage of your appliance. Any error when connecting the appliance can cause irreparable damage to the appliance and/or the power supply.
 - An additional safety measure, we recommend the installation of a residual current difference device in the electrical circuit supplying the bathroom acting as a safety device.
 - The instructions of the appliance must be observed as they must however comply with the standards in force in your country.
 - Caution: Never use your appliance with wet hands or with water coming from a tap, shower, bath, sink or other container...
 - When using the appliance in the bathroom, turn it off after use as the presence of water nearby may pose a danger even when the appliance is turned off.
 - This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
 - If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
 - Stop cleaning and maintenance and contact an Authorised Service Centre if:
 - your appliance has been damaged;
 - it does not work correctly;
 - the appliance is not correctly plugged;
 - before cleaning and maintenance procedures;
 - if it is not working correctly;
 - as soon as you feel that something is wrong;
 - if you feel that your hair is not straightened enough;
 - if you do not use the cord if damaged;
 - Do not immerse or put under running water, even for cleaning purposes.
 - Do not hold the handle by the casing, which is hot, but by the handle.
 - Do not plug by pulling on the cord, rather pull out by the plug.
 - Do not use an electrical extension lead.
 - Do not clean with abrasive or corrosive products.
 - Do not use at temperatures below 0°C and above 35°C.

GUARANTEE:
Your appliance is designed for domestic use only. It should not be used for professional purposes. The guarantee becomes null and void in the case of improper usage.

3. BRINGING INTO SERVICE

- 1. Lock System (Fig. 1): Open the clamps, pull the Lock System back. To lock the clamps close the clamps and push the "Lock System" to the front.
- 2. Plug the power cord into a power outlet.
- 3. Set the ON / OFF switch to position I. (Fig. 2)
- 4. Your appliance will heat up very quickly (ready to use in less than 30 seconds) and the temperature will increase (Fig. 3)
- 5. Select the temperature for your hair using the +/- buttons (Fig. 3); press the – button to decrease the temperature or the + button to increase it.

To help you find the most suitable straightening temperature for your hair, here's a guide:

- The temperature is displayed in green from 180°C to 200°C (130 - 150 - 170 - 200) in °C, fahrenheit, color, scaled or unscaled hair.
- The temperature is displayed in red: 230°C for healthy, resistant, robust hair.

Note: To avoid any handling error (inadvertently pressing the +/- buttons during use) this appliance is equipped with a locking function.

If you wish to lock your temperature setting during use, press the + or - buttons for 2 seconds. Your setting is being locked, a padlock appears on the screen.

If you want to change your appliance's temperature, you will need to unlock it by again pressing + or - for 2 seconds. Your setting is being unlocked, a lock icon appears from the screen.

You can change the temperature by pressing the buttons +/-.

Automatic cut out:

Your safety is guaranteed after 60 min. if you wish to turn it on again follow the instructions given in SWITCHING ON.

4. USE

- 4.1 How should you straighten your hair?

Hair must be dampened, clean and dry.

Do not use the appliance on synthetic hair (twigs, extensions, etc.).

Form small loops or centimeters in width, comb it and place it between the plates.

Hold the hair firmly between the plates and slide the appliance slowly from the tip to the tip of the hair.

The hair straightener will protect your hair against overheating by uniformly spreading the heat.

Wait for the smoothed hair to cool down before styling.

4.2 How should you style your hair?

Professional hairdresser's technique for easy styling from the root to the end of the hair.

1) First, lay the section of hair between the plates, close to the roots. (Fig. 4)

2) Whilst continuing to apply pressure on the hair section, gently turn the hair section 180° upwards. (Fig. 5)

3) Slide from the hair root to the ends. (Fig. 6)

4) Remove the straightener, the curl will take shape.

5. MAINTENANCE

CAUTION! Always unplug your appliance and allow it to cool before cleaning it.

- To clean the appliance, unplug it and then wipe with a damp cloth and dry with a dry cloth.

6. IF YOU ENCOUNTER A PROBLEM

- You're not happy with the results you're getting from your straightener.
- Press the + or - buttons for 2 seconds to turn the hair section.
- Slide your straightener slowly.
- Increase the temperature using the + button.
- It's impossible to change the temperature?

Check that the temperature level isn't locked.

- The top plate isn't static.

- This is quite normal, the straightener is fitted with a mobile plate to get better results from your straightening.

- The straightener automatically switches itself off after a while.

- This is quite normal, this straightener has an automatic switch-off system. Please refer to the paragraph on "automatic switch-off".

7. ENVIRONMENT PROTECTION

- (1) Your appliance contains valuable materials which can be recovered or recycled.
- (2) Leave it at a local civic waste collection point.

8. FOR VORZINKOVENEN PROBLEMS

- Was not the straightener straightened your hair?

- Check the straightener's temperature.

- The temperature is not changing.

- The straightener is not straightening your hair.

- The straightener is not

