

**1. GENERAL DESCRIPTION**

- A - ON/OFF button, blowing speeds
- B - Brush rotation direction control
- C - Ions Booster
- D - Hanging ring
- E - Power cord
- F - Small diameter brush
- G - Large diameter brush
- H - Brush protectors (2)
- I - Brush lock/release button
- J - Removable rear housing (fig. 16, 17, 18)

You have just purchased a technically innovative product!

It is normally necessary to practise using the appliance 2 or 3 times before being able to master the technique for use perfectly.

Brush Activ' is a rotating drying brush, especially designed so that you can blow dry your hair effortlessly and in a single move – quicker and easier than traditional blow drying. Brush Activ' lets you dry and style your hair at the same time, giving a perfect result both at the front and at the back of your hairstyle.

**2. SAFETY INSTRUCTIONS**

- For your safety, this appliance complies with the applicable standards and regulations (Low Voltage Directive, Electromagnetic Compatibility, Environmental...).
- The appliance's accessories become very hot during use. Avoid contact with the skin. Make sure that the supply cord never comes into contact with the hot parts of the appliance.
- Check that the voltage of your electricity supply matches the voltage of your appliance. Any error when connecting the appliance can cause irreparable harm, not covered by the guarantee.

• For additional protection, the installation of a residual current device (RDC) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask for installer for advice.

- The installation of the appliance and its use must however comply with the standards in force in your country.

• **WARNING:** do not use this appliance near bathtubs, showers, basins or other vessels containing water.



- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

• When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.

• This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

• If the supply cord is damaged, it must be replaced by the manufacturer, its service agent

or similarly qualified persons in order to avoid a hazard.

- Stop using your appliance and contact an Authorised Service Centre if:
  - your appliance has fallen.
  - it does not work correctly.
- The appliance is equipped with a heat-sensitive safety device. In the event of overheating (for example if the rear grill is blocked), the appliance will stop automatically: contact the After-Sales Service.
- The appliance must be unplugged:
  - before cleaning and maintenance procedures.
  - if it is not working correctly.
  - as soon as you have finished using it.
  - if you leave the room, even momentarily.
- Do not use if the cord is damaged.
- Do not immerse or put under running water, even for cleaning purposes.
- Do not hold with damp hands.
- Do not hold the appliance by the casing, which is hot, but by the handle.
- Do not unplug by pulling on the cord, rather pull out by the plug.
- Do not use an electrical extension lead.
- Do not clean with abrasive or corrosive products.
- Do not use at temperatures below 0°C and above 35°C.

**GUARANTEE**

Your appliance is designed for use in the home only. It should not be used for professional purposes. The guarantee becomes null and void in the case of improper usage.

**3. INSTRUCTIONS FOR USE****PROTECTING THE BRUSHES:**

To keep the brushes effective, always return them to their protectors (H) after use.

**FITTING THE BRUSHES AND REMOVING THEM FROM THE APPLIANCE (3, 4, 5, 6):**

**REMINER:** The brush accessory (F-G) is very hot when in use. Be careful when removing it.

**AIR TEMPERATURE / SPEED (A):**

**CAREFUL:** The cool position fix the style at the end of the drying session. For this purpose, the brush does not rotate in cool position.

**DIRECTION OF ROTATION (B):**


This function enables you to automatically wind the section of hair around the brush to blow dry your hair effortlessly.

- To start rotation, press the selector switch (B) in the desired direction of rotation (right or left).
- Keep pressing the switch while blow drying.
- To stop rotation, release the switch.

**DRYING AND STYLING IN ONE GO! (9, 10, 11, 12)****ENVIRONMENT PROTECTION FIRST!**

- ① Your appliance contains valuable materials which can be recovered or recycled.
- ➔ Leave it at a local civic waste collection point.

These instructions are also available on our website  
[www.tefal.com](http://www.tefal.com).

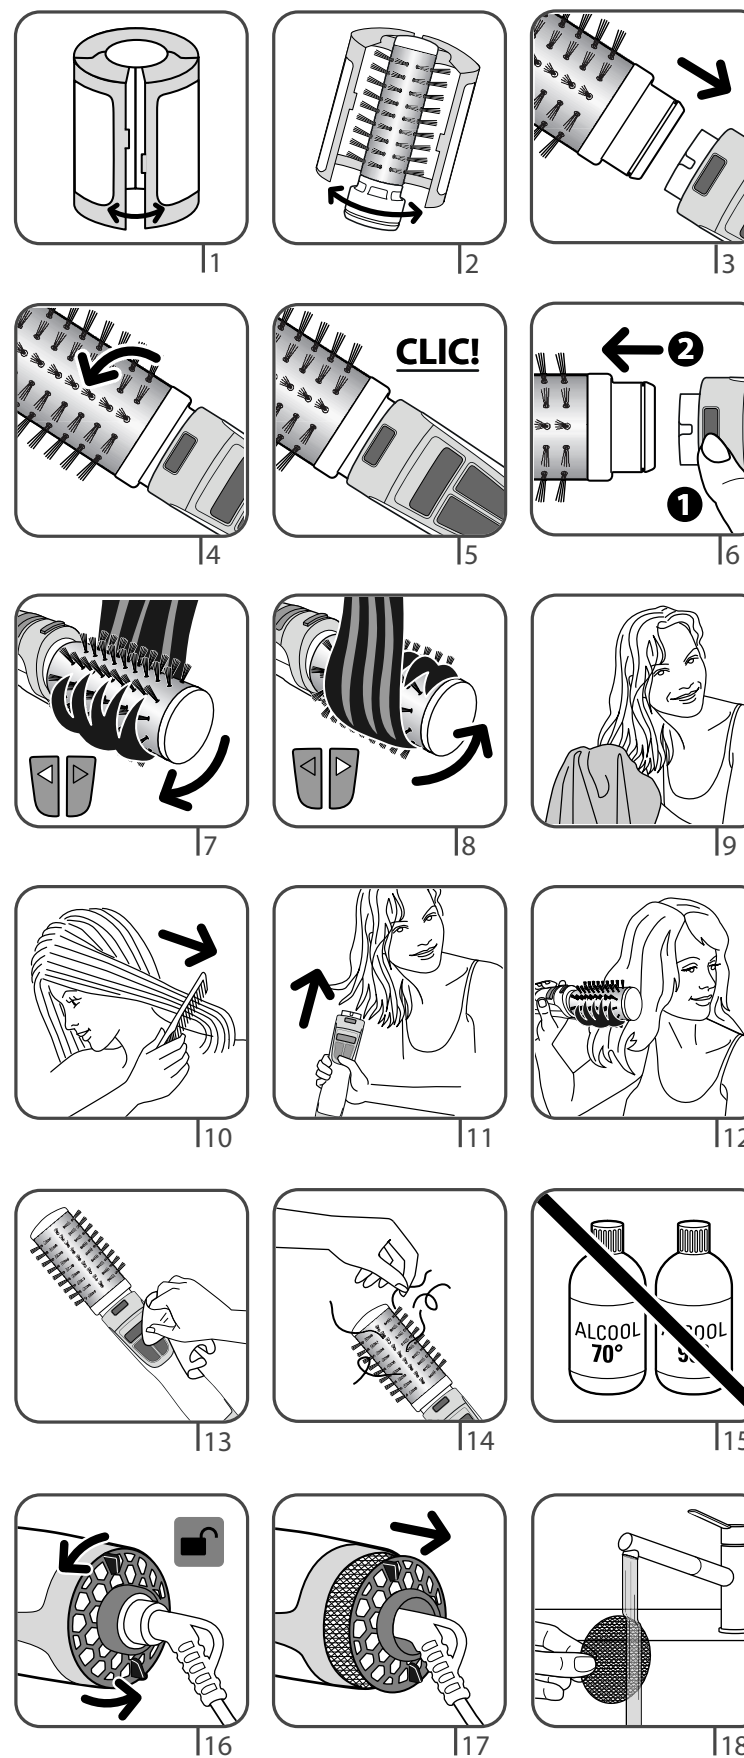

# Tefal®


Beauty



Brush activ' nano smart

[www.tefal.com](http://www.tefal.com)

1800135274

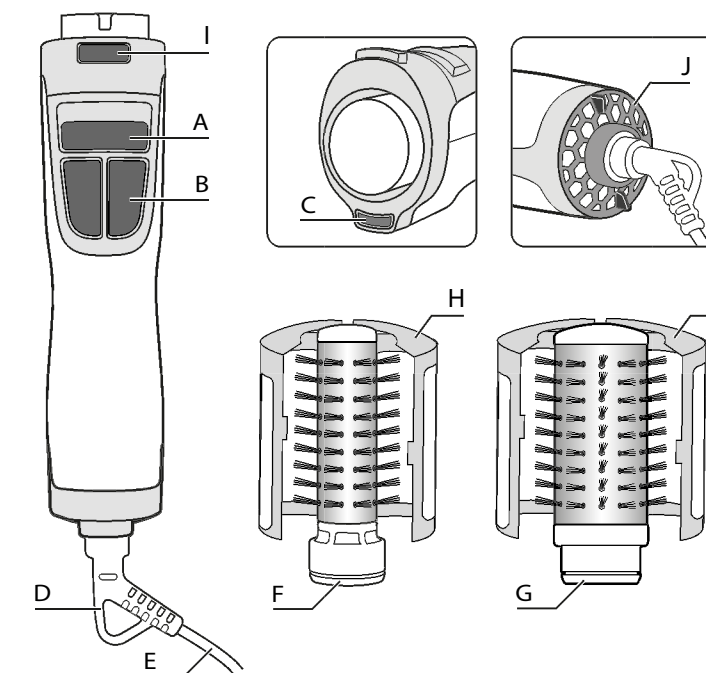

EN • depending on model



