

# Moulinex® cookeo ⊕ connect



1520013590

Félix Création - Photos : Michel Boudrier.

Moulinex® cookeo ⊕ connect

## FR

P. 006-007	- AVANT UTILISATION
P. 008-009	- UTILISATION ET MISE EN FONCTIONNEMENT
P. 010-011	- MENU RÉGLAGES
P. 012	- MENU ON/OFF
P. 013-015	- CONNEXION
P. 016-021	- MENU MANUEL
P. 022-023	- INGRÉDIENTS
P. 024-025	- RECETTE
P. 026-027	- BIBLIOTHÈQUE
P. 028-029	- INGRÉDIENTS - RECETTES
P. 030-033	- NETTOYAGE ENTRETIEN
P. 034-035	- SECURITE
P. 036-037	- RÉSOLUTION DES PROBLÈMES

## NL

P. 070-071	- VOOR GEBRUIK
P. 072-073	- GEBRUIK EN BEDIENING
P. 074-075	- MENU INSTELLINGEN
P. 076	- AAN/UIT-MENU
P. 077-079	- VERBINDING
P. 080-085	- MENU HANDMATIG
P. 086-087	- INGREDIËNTEN
P. 088-089	- RECEPT
P. 090-091	- BIBLIOTHEEK
P. 092-093	- INGREDIËNTEN - RECEPTEN
P. 094-097	- REINIGING EN ONDERHOUD
P. 098-099	- VEILIGHEID
P. 100-101	- PROBLEMEN OPLOSSEN

## DE

S. 038-039	- VOR GEBRAUCH
S. 039-040	- VERWENDUNG UND BETRIEB
S. 041-042	- MENÜ „EINSTELLUNGEN“
S. 043	- MENÜ „EIN/AUS“
S. 044-046	- ANSCHLUSS
S. 047-052	- MENÜ „MANUELL“
S. 053-054	- ZUTATEN
S. 055-056	- REZEPT
S. 057-058	- BIBLIOTHEK
S. 059-060	- ZUTATEN – REZEPTE
S. 061-065	- REINIGUNG UND PFLEGE
S. 066-067	- SICHERHEIT
S. 068-069	- FEHLERBEHEBUNG

## ES

P. 102-103	- ANTES DE SU USO
P. 104-105	- USO Y FUNCIONAMIENTO
P. 106-107	- MENÚ DE AJUSTES
P. 108	- MENÚ DE ENCENDIDO/APAGADO
P. 109-111	- CONEXIÓN
P. 112-117	- MENÚ MANUAL
P. 118-119	- INGREDIENTES
P. 120-121	- RECETA
P. 122-123	- BIBLIOTECA
P. 124-125	- INGREDIENTES - RECETAS
P. 126-129	- LIMPIEZA Y CUIDADO
P. 130-131	- SEGURIDAD
P. 132-133	- SOLUCIÓN DE PROBLEMAS

## PT

P. 134-135	- ANTES DA UTILIZAÇÃO
P. 136-137	- FUNCIONAMENTO E UTILIZAÇÃO
P. 138-139	- MENU DE CONFIGURAÇÃO
P. 140	- MENU LIGAR/DESLIGAR
P. 141-143	- LIGAÇÃO
P. 144-149	- MENU MANUAL
P. 150-151	- INGREDIENTES
P. 152-153	- RECEITAS
P. 154-155	- BIBLIOTECA
P. 156-157	- INGREDIENTES - RECEITAS
P. 158-161	- LIMPEZA E MANUTENÇÃO
P. 162-163	- SEGURANÇA
P. 164-165	- RESOLUÇÃO DE PROBLEMAS

## EN

P. 198-199	- BEFORE USE
P. 200-201	- USE AND OPERATION
P. 202-203	- SETTINGS MENU
P. 204	- ON/OFF MENU
P. 205-207	- CONNECTION
P. 208-213	- MANUAL MENU
P. 214-215	- INGREDIENTS
P. 216-217	- RECIPE
P. 218-219	- LIBRARY
P. 220-221	- INGREDIENTS - RECIPES
P. 222-225	- CLEANING AND CARE
P. 226-227	- SAFETY
P. 228-229	- TROUBLESHOOTING

## IT

P. 166-167	- PRIMA DELL'USO
P. 168-169	- USO E FUNZIONAMENTO
P. 170-171	- MENU IMPOSTAZIONI
P. 172	- MENU DI ACCENSIONE/SPEGNIMENTO
P. 172-175	- COLLEGAMENTO
P. 176-181	- MENU MANUALE
P. 182-183	- INGREDIENTI
P. 184-185	- RICETTA
P. 186-187	- RICETTARIO
P. 188-189	- INGREDIENTI - RICETTE
P. 190-193	- PULIZIA E CURA
P. 194-195	- SICUREZZA
P. 196-197	- RISOLUZIONE DEI PROBLEMI

## AR

P. 230-231	- قبل الاستخدام
P. 232-233	- الاستخدام والتشغيل
P. 234-235	- قائمة الإعدادات
P. 236	- قائمة التشغيل/إيقاف التشغيل
P. 237-239	- الاتصال
P. 240-245	- قائمة التشغيل اليدوي
P. 246-247	- المكونات
P. 248-249	- الوصفة
P. 250-251	- المكتبة
P. 252-253	- المكونات- الوصفات
P. 254-257	- التنظيف والعناية
P. 258-259	- الأمان
P. 260-261	- استكشاف المشكلات وحلها



Poignée d'ouverture / fermeture du couvercle  
Griff zum Öffnen/Schließen des Deckels  
Handvat voor openen/sluiten van deksel  
Asa de apertura/cierre de la tapa  
Pega de abrir/fechar a tampa  
Impugnatura di apertura/chiusura del coperchio  
Lid open/close handle  
مقبض فتح/غلق الغطاء



Valve silencieuse  
Dampventil  
Dempingsklep  
Válvula silenciadora  
Válvula silenciadora  
Valvola silenziatrice  
Silencing valve  
صمام كتم الصوت



Repère visuel d'indication d'ouverture/fermeture  
Markierung „Open/Geschlossen“  
Open/dicht-controlelampje  
Marca de apertura/cierre  
Símbolo de abierto/cerrado  
Símbolo di apertura/chiusura  
Open/closed marker  
علامة مفتوح/مغلق



Bouton annuler  
„Abbrechen“-Geschmack  
Knop Annulieren  
Botón de cancelación  
Botão para cancelar  
Pulsante Annulla  
Cancel button  
زر الإلغاء



Cuve de cuisson  
Kochbehälter  
Kookpan  
Recipiente de cocción  
Cuba de cozedura  
Recipiente per la cottura  
Cooking pot  
وعاء الطهي



Bouton d'utilisation principale  
Hauptnavigationknopf  
Hoofdbedieningsknop  
Botón principal de funcionamiento  
Botão principal de funcionamento  
Pulsante di funzionamento principale  
Main operation button  
زر التشغيل الرئيسي

Voyant bleu indication connexion bluetooth  
Blaue Anzeigelampe für Bluetooth-Verbindung  
Blauw indicatielampje voor Bluetooth-verbinding  
Indicador luminoso azul de conexión Bluetooth  
Indicador luminoso azul da ligação Bluetooth  
Spia luminosa blu della connessione bluetooth  
Blue light indicator for bluetooth connection  
مؤشر الضوء الأزرق الخاص بالاتصال بالبلوتوث



Panneau de commande  
Bedienfeld  
Bedieningspaneel  
Panel de control  
Panel de controllo  
Pannello di controllo  
Control panel  
لوحة التحكم

## Mon assistant culinaire connecté pour la cuisine du quotidien

Cookeo ⊕ Connect est un multicuiseur intelligent connecté qui dispose de 100/200\* recettes déjà programmées. Il s'adapte au nombre de convives, vous guide en pas à pas, et cuit sans surveillance. Grâce à son application dédiée, Cookeo, accédez à des centaines de recettes ; une simple connexion en Bluetooth vous permet de synchroniser votre tablette et/ou smartphone à votre Cookeo. Laissez-vous guider...

## Meine vernetzte Küchenhilfe für Alltagsgerichte

Cookeo ⊕ Connect ist ein intelligenter, vernetzter Schnellkochtopf mit bereits 100/200\* programmierten Rezepten. Das Gerät kann an die Anzahl der Gäste angepasst werden, leitet Sie dann Schritt für Schritt an und kocht unbeaufsichtigt. Dank der speziellen Cookeo-App können Sie auf Hunderte von Rezepten zugreifen. Über eine Bluetooth-Verbindung können Sie Ihr Tablet und/oder Smartphone mit dem Cookeo synchronisieren. Lassen Sie sich anleiten...

## Mijn met internet verbonden keukenhulp voor het dagelijks koken

Cookeo ⊕ Connect is een intelligente, met internet verbonden multicooker met 100/200\* voorgeprogrammeerde recepten. De multicooker kan worden aangepast aan het aantal gasten, begeleidt u stap voor stap en kookt zonder toezicht. Dankzij de speciale Cookeo-app hebt u toegang tot honderden recepten. Met een eenvoudige Bluetooth-verbinding kunt u uw tablet en/of smartphone synchroniseren met uw Cookeo. om u tijdens het koken te begeleiden...

## Mi asistente de cocina conectado para cocinar todos los días

Cookeo ⊕ Connect es un robot multicocción inteligente y conectado que cuenta con 100/200\* recetas ya programadas. Pueden adaptarse al número de huéspedes, te guía paso a paso y cocina sin supervisión. Gracias a su aplicación específica, Cookeo, puedes acceder a cientos de recetas; una sencilla conexión Bluetooth permite sincronizar la tableta o el smartphone con tu Cookeo. Deja que te guíe...

## O meu assistente de cozinha conectado para cozinhar diariamente

O Cookeo ⊕ Connect é um robot de cozinha inteligente e conectável que inclui 100/200\* receitas já programadas. Pode adaptar-se ao número de convidados, fornece instruções passo a passo e cozinha sem vigilância. Graças à aplicação dedicada, o Cookeo, pode aceder a centenas de receitas. A ligação Bluetooth simples permite-lhe sincronizar um tablet e/ou um smartphone com o Cookeo. Deixe-se guiar...

## L'assistente connesso per la cucina di tutti i giorni

Cookeo ⊕ Connect è un multicooker intelligente e connesso che include 100/200\* ricette già programate. Può adattare la ricetta al numero di persone, guida passo dopo passo nella preparazione della ricetta e cuoce senza bisogno di alcuna sorveglianza. Grazie all'applicazione dedicata Cookeo, è possibile accedere a centinaia di ricette; inoltre, una semplice connessione Bluetooth consente di sincronizzare il proprio Cookeo con il tablet e/o lo smartphone. Lasciati guidare...

## My connected kitchen assistant for everyday cooking

 
Cookeo ⊕ Connect is an intelligent, connected multicooker which boasts 100/200\* recipes already programmed. It can adapt to suit the number of guests, guides you step-by-step, and cooks unattended. Thanks to its dedicated app, Cookeo, you can access hundreds of recipes; a simple Bluetooth connection allows you to synchronise your tablet and/or smartphone to your Cookeo. Let them be your guide...

## المساعد المتصل الخاص بي لإنجاز مهامى اليومية في المطبخ

Cookeo ⊕ Connect هو جهاز طهي ذكي متصل متعدد الوظائف يحتوي على 100/200\* وصفة مُبرمجة. يمكنك إعداد الجهاز بحيث يتلاءم مع عدد ضيوفك ويرشدك عند الطهي خطوة بخطوة ويظهر لك الطعام من دون مراقبة. وبفضل تطبيق Cookeo المخصص، يمكنك الوصول إلى مئات الوصفات؛ وتتيح لك ميزة الاتصال بالبلوتوث سهولة الاستخدام مزامنة الجهاز اللوحي و/أو الهاتف المحمول الخاص بك مع جهاز Cookeo. فليكن هذا الجهاز مرشدك...


\* selon modèle / je nach Modell / afhankelijk van het model / En función del modelo / consoante o modelo / a seconda del modello / depending on modele / Depending on model / حسب الطراز

before use

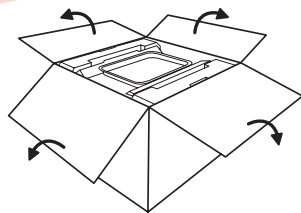

Remove the appliance from its packaging and read the operating instructions and safety notices carefully before using the product for the first time.



To open the product, turn the open/close handle on top of the lid so it is in line with the open padlocks: .



Install the appliance on a flat, dry and cool surface. Remove all the packaging, stickers and various accessories from inside and outside of the appliance.



#### CLEAN THE DIFFERENT COMPONENTS




- 1 Cooking bowl
- 2 Metal lid
- 3 Valve cover
- 4 Condensation collector
- 5 Steaming basket
- 6 Decompression ball

before use

#### NOTES ON HOW TO DISASSEMBLE AND REASSEMBLE THE LID

 


#### ACCESSING THE DECOMPRESSION BALL

Turn the ball cover anticlockwise to bring the marker I to position . Remove the cover. Remove the ball, clean it gently with water and washing-up liquid, and its casing. Dry the ball with a soft cloth then replace it in its casing. Put the ball cover back in place, and the marker I in position . Lock it, by turning the ball cover to bring the marker opposite the "closed" pictogram .



**DISSASSEMBLING THE METAL LID:** Hold the lid sub-assembly, gripping it by the seal, and unscrew the central nut in an anticlockwise direction. Remove the nut and then the lid.

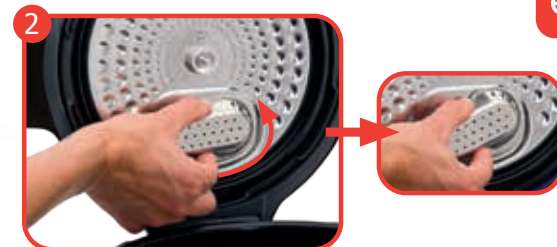

#### TAKING THE VALVE COVER OFF:

Hold the valve cover by the middle part (as indicated); then turn gently to unclip it. Clean the valve cover, focussing on the inside (check that there is no further food residue).



#### PUTTING THE METAL LID SUB-ASSEMBLY BACK INTO PLACE:

Hold the lid sub-assembly by the seal as indicated in the photo. Centre the lid on the central axis and press it flat. Put the nut back in place and screw it down in a clockwise direction.

 


#### PUTTING THE VALVE COVER BACK:

Hold the valve cover as indicated in the photo (grip the middle area). Centre the interior, circular shape on the three hooks, then push to clip the valve cover (you will hear a "click"). The valve cover must be in perfect contact with the inside of the lid.

## operation

When operating for the first time, you will access the settings menu:

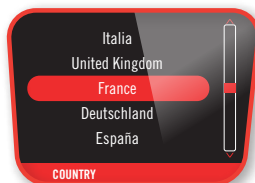

COUNTRY



LANGUAGE



+



Select your country



+



Select your language

### CONTROL INTERFACE



SELECT

CONFIRM

BACK

RESTART


## use

Never use the appliance without the cooking bowl.

When using your appliance for the first time, the bowl may emit a slight odour. This is normal.



### OPENING THE LID:

To open the product, turn the open/close handle so you can see the open padlock sign: . Never try to force the lid open if there is resistance.



### INSTALLATION OF THE CONDENSATION COLLECTOR:

Check that the condensation collector is empty then install it at the back of the appliance.



**SETUP OF STAND UNDERNEATH THE STEAMING BASKET;** Pinch the stand between thumb and index finger to fit it underneath the steaming basket.



**POSITIONING THE BOWL IN THE APPLIANCE:** Wipe the base of the cooking bowl. Make sure that there is no food residue or liquid under the bowl or on the heating plate.



Then fit the bowl into the appliance, positioning the bowl handles into the slots.

# settings menu



 
**N.B. : Even if sound is deactivated, the alert sounds will remain active.**



Select "language/country"




Select your language

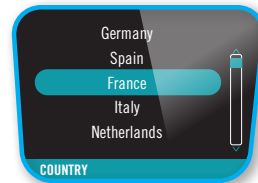


Select your country



 
Select "screen/sound"

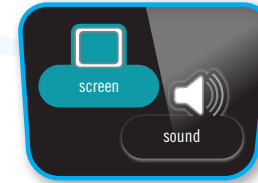

Select "screen"

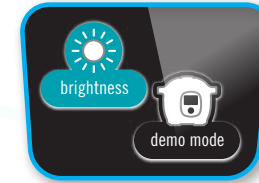 

Select "brightness"

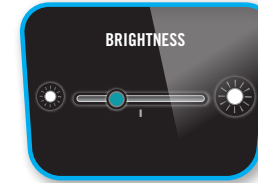 

Adjust brightness



Select "delete recipes"



 
Select "libraries"



Select "library 2"



Select "demo mode"

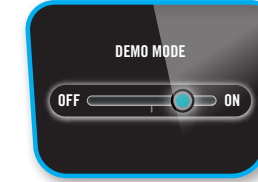

To activate or deactivate demo mode, you need to enter a code: 3424



**N.B. : DEMO mode allows the product to operate without heating or pressure increase.**



Do you want to delete this library?



 
Select "recipes"




Select "recipe 2"



Do you want to delete this recipe?

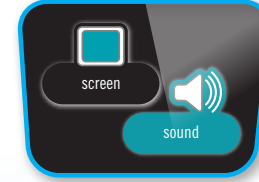


Select "sound"

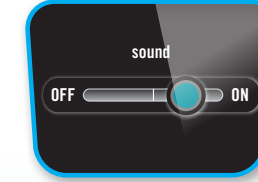 

Adjust sound



 Select "connect"

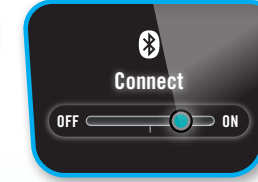

Activate or deactivate connect mode

on/off  
menu



Select and confirm

do you want to switch off  
your appliance?

 
YES NO



 
ON/OFF allows you to turn off your appliance.

do you want to switch off  
your appliance?

YES NO

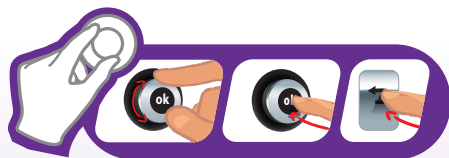

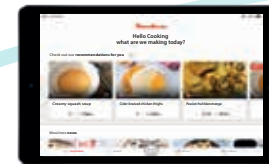

connection



Download the **Moulinex** app  
by visiting the App Store using  
your tablet or smartphone.



Your **Cookeo**  is functional, you can now use your product with the **100/200 pre-programmed recipes\*** even without the app.

When you turn on your Cookeo , the blue light will flash (awaiting connection) unless you have manually deactivated the connection function (see Settings section).

For first use, pair your product with your tablet by following the instructions on your screens.

Validate the connection  
request and press OK

OK



If connection is  
successful, the blue  
light will stay on.

\* depending on model



## connection

### Connection problems:

If connection fails, you will see an error message. You must follow the instructions on your screens to try to connect again. Note: only one connection at a time is possible.



### Create your account:

Follow the instructions in the app.

### Search bar:

Type your keywords into the search bar and access the search using filters



### Navigation:

You can also navigate using the app by accessing the Menu:

- **Inspiration**
- **Search**
- **Home**
- **Courses**

### Using the app you can:

 
 
- see the step-by-step guide
- Launch the step-by-step recipe in interaction with your **Cookeo** ⊕



Favourites



Library

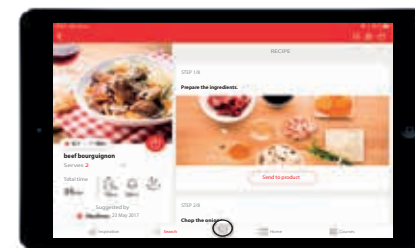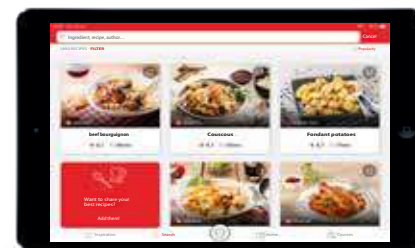

There is no effect on cooking if connection is lost. Cookeo ⊕ remains autonomous in all cases.

**N.B. :** if you don't use your Cookeo ⊕ for 30 minutes, it will go into standby mode and the connection will be lost. On exiting standby mode, the appliance will automatically reconnect.

**N.B. :** you can only start cooking from your Cookeo ⊕ by pressing the OK button (as indicated in the app).





## QUICK COOKING

### MANUAL MENU:

With the manual menu, you lead the cooking. Choose the cooking time and mode yourself: **quick cooking, classic cooking (gentle cooking, simmer, browning), reheat or keep warm.**



Select the "manual" menu



Select "quick cooking" mode



 
Insert the bowl then add the ingredients



Adjust the cooking time



Select immediate or delayed start (p.19)

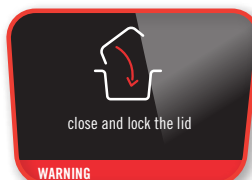

Close and lock



## QUICK COOKING



The appliance is preheating



 
 
 
Cooking has started



Cooking has finished



Ready to taste!

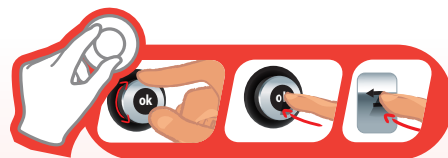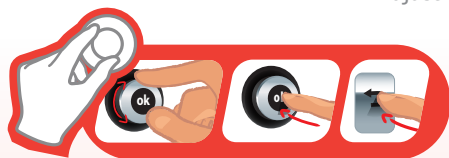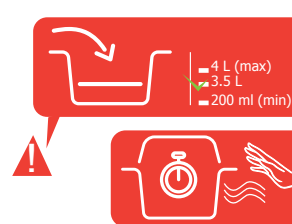


## manual menu cooking mode



Select the "manual" menu



 Select "classic" mode

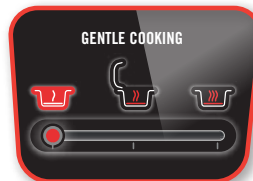

Select the desired mode

## manual menu cooking mode



Select the "manual" menu



Select "reheat" mode



Insert the bowl

## CLASSIC

With classic cooking mode, you can:

cook gently

 
simmer

brown


depending on the desired result. The lid stays open for these types of cooking.



Open the lid

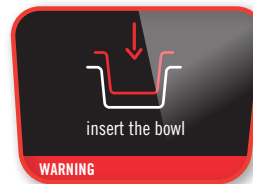

Insert the bowl

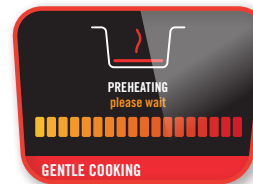 

The appliance is preheating

## REHEAT



Close and lock the lid



Reheating has started.  
to interrupt

 


Do you want to stop reheating?

**N.B. : The function is identical, only the temperature differs.**



To stop cooking, press the back arrow, you have the option of stopping cooking completely or moving to quick cooking.



**N.B. : Reheating starts and the time increases.**

## manual menu cooking mode

### KEEP WARM



Select the "manual" menu



Select the "keep warm" function



Insert the bowl



The appliance is preheating



Keep warm has begun



To stop keep warm, press the "back" arrow and select "yes"

## manual menu cooking mode

### DELAYED START (QUICK COOKING MODE)



Some foods cannot be used with delayed start mode (e.g. meat, fish, milk, etc.).

The end time of cooking may vary depending on the volume contained in the product.



 
Select "delayed start"



Select the current time





Select cooking end time

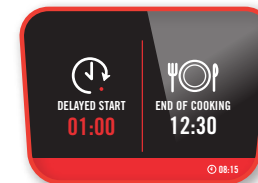

Delayed start is programmed

**NB: Delayed start is also possible within the Ingredients menu (depending on the type of ingredients).**

  



## ingredients menu



Select the "ingredients" menu



Select vegetables



Select "broccoli"



The recommended cooking time is displayed



Select "immediate start"



 
Start the recipe




Follow the instructions



Preheating

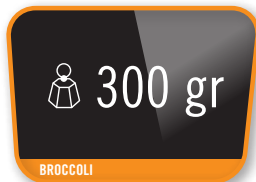

 Select the desired quantity of broccoli (minimum 300 g)

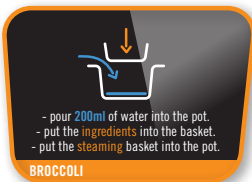

Follow the instructions



Start cooking



End of Cooking



You can enjoy your food



# recipe beef bourguignon\*

**RECIPES MENU:** Using the recipes menu, choose from 100/200\* savoury and sweet recipes divided into **three** categories: **starters / dishes / desserts.**




Select the recipes menu



Select the type of recipe



Select a recipe



Select the number of people

 


Presentation of the recipe




Prepare the ingredients

\* depending on model



# recipes menu

 **RECIPES MENU: (CONTINUED)** You can go back to the initial menu by pressing the back button for 3 seconds





Start the recipe



Preheating



Follow the instructions



Stop browning



Follow the instructions



Start cooking



Cook




You can enjoy your food



### DOWNLOADING RECIPE PACKS:

 Once the app is connected to your Cookeo ⊕, you can download recipe packs.

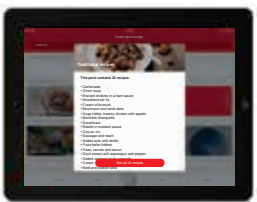

Choose a recipe. Once this starts up, the recipe (or pack) is downloaded to your Cookeo ⊕



Downloading is in progress

**N.B. : You can stop downloading at any time by pressing the Cookeo ⊕back button.**



### ACCESS LIBRARIES FROM YOUR COOKEO ⊕ :

You can find your downloaded packs again. Start recipes from your Cookeo ⊕ by accessing your Library.



Select the "library" sub-menu



Select the desired recipe pack



Select "starter", "dish" or "dessert" and select your recipe



ingredients  
menu



vegetables/fruit

artichokes  
asparagus  
aubergines  
beetroot  
broccoli  
carrots  
celeriac  
cabbage  
Brussels sprouts  
cauliflower/Romanesco cabbage  
kale  
Swiss chard/chard  
courgettes  
endives  
spinach  
fennel  
green beans  
lentils  
turnips  
sweet potatoes  
pears  
leeks  
peppers  
apples  
potatoes

recipes

[www.moulinex.com](http://www.moulinex.com)

Find our recipes on the Moulinex app and at  
[www.moulinex.com](http://www.moulinex.com)



meat

lamb  
beef  
rabbit  
pork  
veal  
chicken



fish, shellfish

prawns/gambas  
mussels  
fish  
scallops



 
rice and grains

wheat  
bulgar wheat  
barley  
quinoa  
white rice  
whole grain rice/wild rice  
buckwheat

\* Depending on country specificities Depending on model



## cleaning care

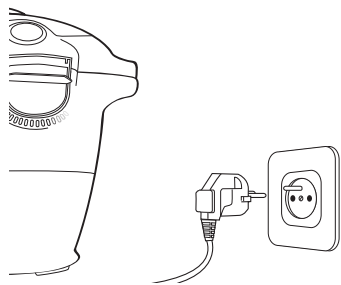

Once you have finished cooking your dish, unplug the appliance to clean it. Clean the appliance after every use.



You can clean the cooking bowl and steaming basket with hot, soapy water or in the dishwasher. Clean the body of the appliance using a damp cloth. After several trips through the dishwasher, the exterior of the bowl may become discoloured. You can clean it with your scraper sponge.

## cleaning care



After each use, remove the condensation collector and clean it carefully with clear water or in the dishwasher. Take care to dry it carefully. Then replace it in its initial position.



To clean the metal lid, by hand or by dishwasher, you must disassemble it and remove the valve cover.

- 1 Unscrew the nut at the centre of the metal lid
- 2 Take off the metal lid
- 3 Remove the valve cover



**CLEANING IN THE DISHWASHER:** you can put the metal lid in the dishwasher as it is, without removing the valves. After it has been through the dishwasher, remove the ball and blow into the pipe to make sure it is not blocked. Dry the ball and its casing carefully with a soft cloth.



**CLEANING BY HAND:** you can clean the metal lid with hot, soapy water. First of all, remove the ball and clean completely. Dry the ball and its casing with a soft cloth.



## cleaning care



Before removing the ball, check that the pipe is not blocked by blowing into it.



Press on the internal part of the spring-loaded safety valve to check that it is not clogged.



Before removing the interior cover. Clean the outer part of the cooking bowl. Clean the inside of the metal lid of the appliance with a damp sponge and check that the manometric rod is properly positioned and not blocked. Rinse with water, and check that the manometric rod is mobile.



Replace the seal at least every 3 years. You must do this at an Approved Service Centre.



Do not store the appliance with the lid closed. Leave it in open or semi-open position; this will avoid the development of unpleasant odours.



• In the event of accidental immersion of the appliance or if water has been poured directly onto the heating element in the absence of the bowl, take the appliance to an Approved Service Centre.



Carry the appliance using the two side handles. For increased safety, ensure that the handle is in closed position. For increased safety, ensure that the cover is locked.



Clean the outside of the appliance lid using a damp sponge. Also clean the silencing valve at the back of the lid



Clean the upper part of the cooking bowl using a damp cloth. Also clean the condensation container channel with a damp cloth.

Clean the metal lid seal using a damp sponge, then rinse with plenty of water. Do not use sharp objects.



## safety

Your pressure cooker is equipped with several safety features:

### **Safe opening:**

- If your appliance is pressure cooking, the manometric rod is in fully raised position locking the lid opening. Never open your appliance using force.
- Do not move the manometric rod.
- Ensure that internal pressure has fallen (no more steam is coming out of the silencing valve) before trying to open the cover.

### **Safety feature for over-pressurisation:**

- The safety valve releases the pressure – see [Cleaning and Maintenance chapter page 222](#).

### **If one of the over-pressurisation safety systems is triggered:**

Stop your appliance.

Leave your appliance to cool completely.

Open it.

Check and clean the safety valve, the decompression ball and the seal. See [Cleaning and Care](#) section.

If, after these checks and cleaning, your product leaks or is no longer working, take it to an SEB Approved Service Centre.

### **Your appliance's regulation:**

Regulation of the pressure is done by supplying or cutting off power to the heating element.

To limit the effects of thermal inertia and to improve the precision of the regulation, the decompression ball can be automatically activated to briefly release steam from time to time.

PROBLEMS	POSSIBLE CAUSES	SOLUTION
The lid does not close	There are foreign bodies between the bowl and the heating plate	Remove the bowl, check that the heating plate, the central component and the underside of the bowl are clean. Also check that the central component is mobile
	The lid opening handle is not in the right position	Ensure that the opening handle is in fully open position
	The metal lid and/or the tightening nut are not correctly fitted or fully screwed	Check that you have put all the components of the metal lid in place and that the nut is tightened
The product does not decompress	The ball cover is not in the right position	Leave the product to cool completely then remove the metal lid and position the ball cover correctly (marker in lock position)
The cover does not open after release of the steam	The manometric rod remains in raised position	After having ensured that no steam is escaping, and that the product is totally cold, insert a pin in the hole located between the opening handle and the silencing valve. Beware of a release of steam once the pin has been pushed in. When there is no more steam, try to open your appliance.
The appliance does not increase in pressure	Check the cleanliness of the seal, of the violet safety valve and of the manometric rod	Clean your appliance, following the instructions provided in the operating instructions
	Check that the cover is locked and the market should be opposite the closed padlock. Check the mobility of the manometric rod and clean it if necessary.	Check the mobility of the manometric rod and clean it if necessary.
	The decompression ball is not positioned correctly or is dirty	Check that the ball is correctly position and that its cover is in locked position. Clean and dry the ball and its casing
ERROR CODES	Code 24: pressure decreases during pressure cooking Code 21 and 26: the appliance pressure does not increase	Please add liquid to your recipe (water or liquid sauce)
Steam is escaping from the edges of the lid during cooking (leaks)	The metal lid seal and/or edges of the bowl are dirty	Clean the seal and the edge of the bowl using a damp cloth. Do not use sharp instruments
	Wear and tear, cuts and distortions of the seal	The seal must be changed every three years at maximum. Take your appliance to an approved service centre
	Bowl edge damaged	Take your appliance to an approved service centre
	The nut for the metal lid has not been properly screwed back into place.	Properly tighten the nut at the centre of the metal lid.
Water is running from the back of the appliance	The condensation collector is not in place or is overflowing.	Ensure that the condensation collector is in its proper place at the back of the appliance and that the flow pipe is not blocked.
	Safety valves and/or openings are obstructed	Check that the bowl is not filled too full and that the foodstuffs used are not those which expand (see safety notices booklet)
The control panel does not light up	The appliance is unplugged or is in standby mode	Ensure that the power cable is connected both to your appliance and to the mains. Check that the appliance is not in standby mode by pressing on the "OK" button
	The appliance is damaged	Take your appliance to an approved service centre
You cannot remove the metal lid, it is stuck	The ball cover of the metal lid has not been put back in place	Unscrew the nut at the centre of the metal lid, then press on the central element of the nut. This releases the lid, and you can access the ball cover. Ensure that the lid and ball are put back in place

**For all connection-related problems, go to the [www.moulinex.fr](http://www.moulinex.fr) site or the Moulinex app (Menu/Guide/FAQ).**

#### Trademarks

The Bluetooth® trademark and logos are the property of Bluetooth SIG, Inc. and their use by SEB SAS is subject to licence. The other commercial trademarks and brand names are the property of their respective owners.

#### SERIE EPC09 or EPC09-A\*

Low pressure 40kPa (109°C)/High pressure: 70kPa (115°C)

PRODUCT CAPACITY: 6L/USABLE CAPACITY: 4L

Frequency: 2.40 GHz. Maximum transmitted power: 7.7 dBm

Integrated heating

Regulation of pressure is achieved 10 minutes after the audible beep.

Standby mode power consumption: 0.35 W

Network standby mode power consumption: 0.35 W

\* depending on model