 
 
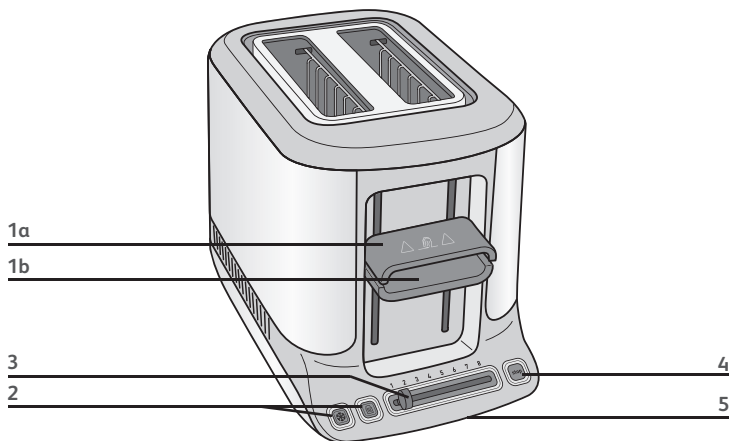 


Tefal

 
 
 
 
KING SIZE

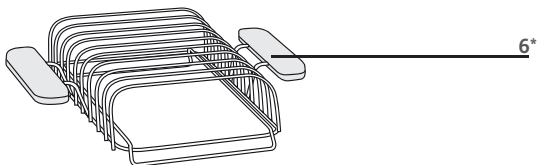



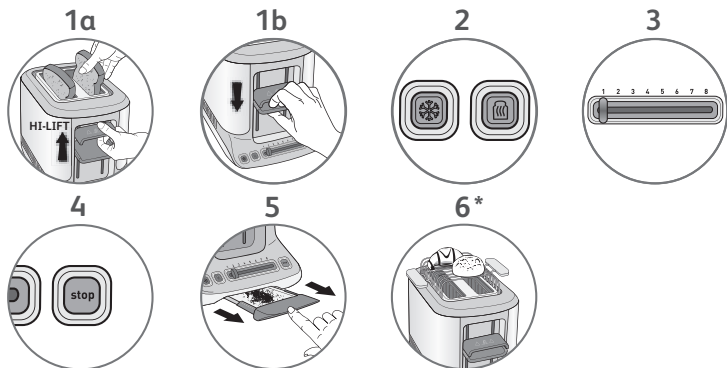


* Selon modèle - Afhankelijk van het model - Je nach Modell - Depending on model - Secondo i modelli - Según modelo - Consoante o modelo - ανάλογα με το μοντέλο - Modelle göre - Afhængig af model - Beroende på modell - Avhenger av modell - Mallista riipruuen - بر اساس مدل - حسب الموديل

1. FIRST USE

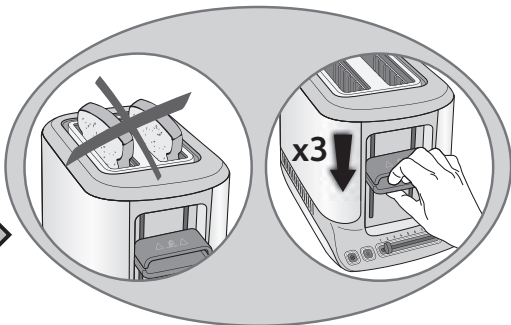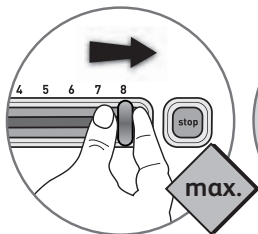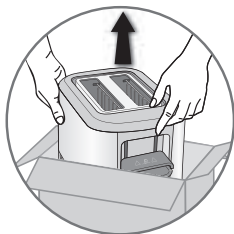


   2. TOASTING

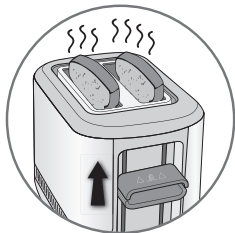
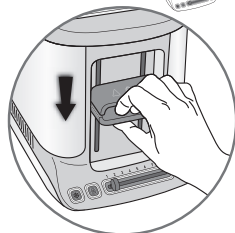
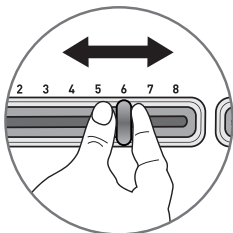


3. STOP/EJECT




 
stop/eject

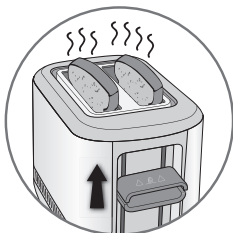






 
 
 
4. REHEAT

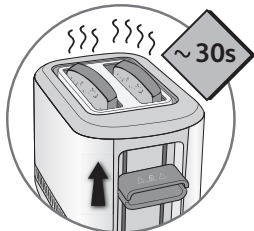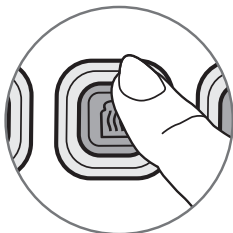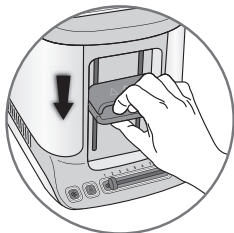

 
 
 
 
5. DEFROST

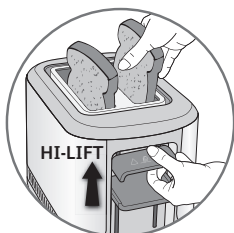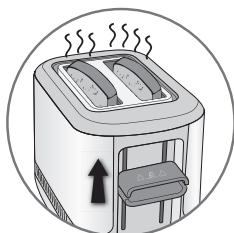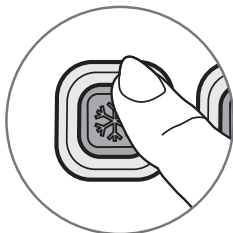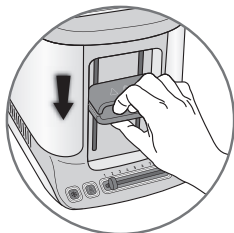

        6. BUN WARMER

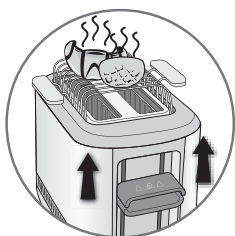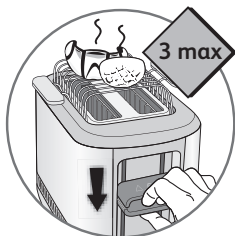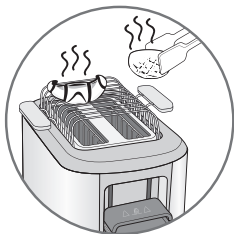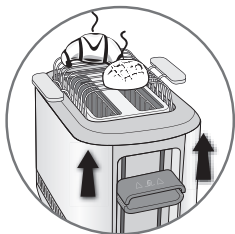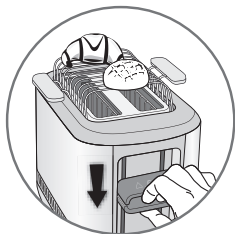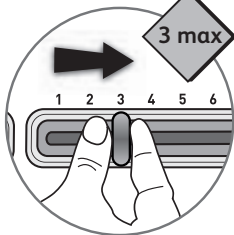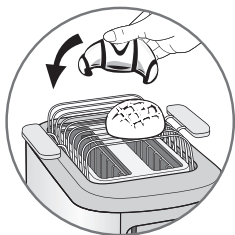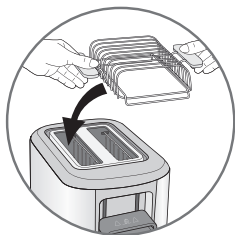

    7. CLEANING

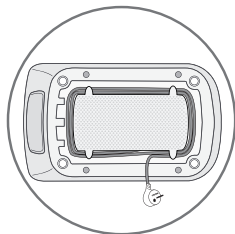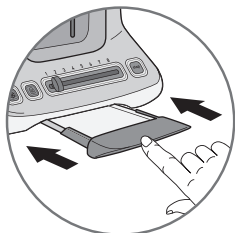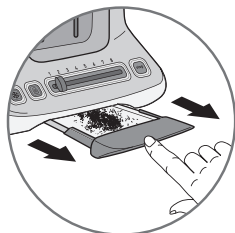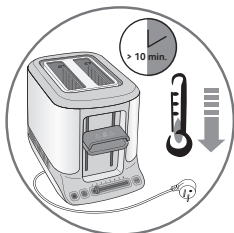

8. DO NOT

