 


Tefal®

MIJOT' COOK

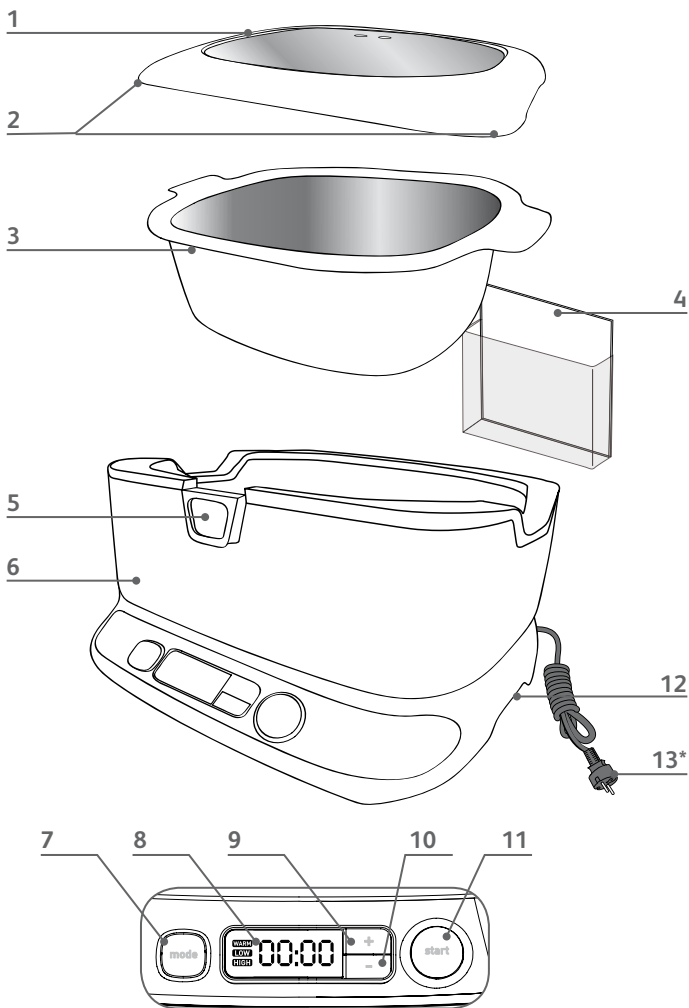



*Depending on model

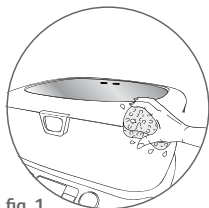


fig. 1

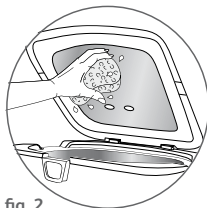


fig. 2

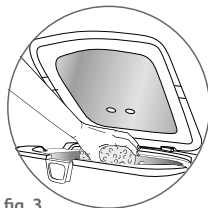


fig. 3

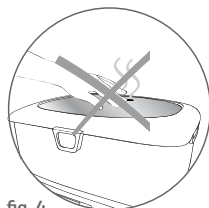


fig. 4

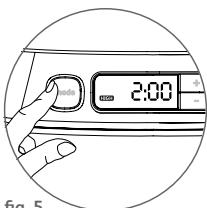


fig. 5

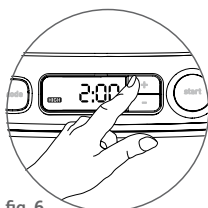


fig. 6

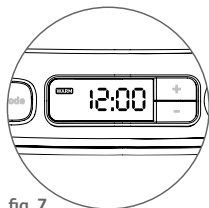


fig. 7



fig. 8

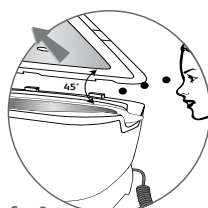


fig. 9

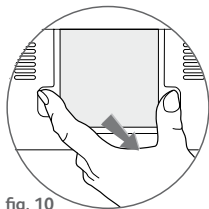


fig. 10

SAFETY INSTRUCTIONS

Please read these instructions carefully and keep them in a safe place.

- For your safety, this appliance conforms to current standards and regulations (Low Voltage Directives, electromagnetic compatibility, substances in contact with food, environment...).
- Please check that the voltage you are using corresponds to that indicated on the slow cooker (alternating current)
- Bearing in mind the different standards in force, if the slow cooker is used in a country other than that in which it was purchased, it should be checked by an approved service centre.
- Your slow cooker is designed for domestic use only. Any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and the guarantee will not apply. It is not designed for use in the following cases, which are not covered by the guarantee:
 - in kitchen areas reserved for staff,
 - in shops, offices and other professional environments,
 - on farms, by customers in hotels, motels and other residential accommodation,
 - in other types of accommodation such as Bed-and-Breakfast.
- Do not place the slow cooker close to a source of heat or in a hot oven as this may cause severe damage.
- Use on a flat, stable work heat-resistant surface away from any water spray.
- This slow cooker is not designed to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Always plug the slow cooker into an earthed socket.
- Do not use an extension lead. You decide to use an extension lead under your own responsibility, use only an extension lead which is in good condition and which is earthed and suitable for the power of the slow cooker.
- Do not unplug the slow cooker by pulling on the power cord.
- Do not use the slow cooker if:
 - it or its power cord are faulty, the slow cooker has fallen over and shows visible signs of damage or is not functioning correctly.
- In these cases, the slow cooker must be sent to the nearest approved Service Centre to where you live.
- Never dismantle the slow cooker yourself.
- If the power cord is damaged, it must be replaced by the manufacturer, the customer service centre or person similarly qualified so as to avoid all risk of danger.
- Do not touch the hot surfaces on the slow cooker.

Use the buttons. Always use protective oven gloves.

- To protect yourself from a possible electric shock, do not immerse the power cord, the electric plugs or the slow cooker itself in water or in any other liquid.
- Unplug the slow cooker when it is not in use and before cleaning it. Allow it to cool down before attaching or removing the accessories.
- The use of accessories not recommended by Tefal may cause injury and damage.
- Do not use the slow cooker outside.
- Do not let the power cord run along a table or work surface and do not allow it to come into contact with hot surfaces.
- Never put the slow cooker on or near to a gas burner, electric hot plate or in a hot oven.
- Be extremely careful when moving the slow cooker when it contains hot oil or other hot liquids.
- Always connect the power cord to the slow cooker first, then plug in. Before unplugging make sure that the slow cooker is switched off.
- Always use the slow cooker with the lid closed, for the recommended amount of time.
- Follow the recommendations for times and ways of cooking.
- Do not use the slow cooker's cooking pot for storing food.
- Do not reheat food in your slow cooker.
- Do not put the detachable cooking pot, when it is hot, onto a wooden table, varnished surface or any other type of delicate surface, which may burn, mark or melt.
- Do not put the detachable cooking pot in an oven.
- Do not use the cooking pot on an electric hot plate, gas or induction hob.
- Do not switch on your slow cooker when it is empty.
- Do not switch on the slow cooker if it is close to a wall.
- Do not put anything under the slow cooker while cooking is in process.
- Do not put the cooking pot near to an inflammable substance or object when it is hot.
- Never cook dry beans and lentils without having first soaked them in water for about ten hours beforehand (See instructions on the packaging of dry beans and lentils).

CARE FOR THE ENVIRONMENT

Your slow cooker has been designed to work for many years. Nevertheless, the day you wish to replace it, don't forget to spare a thought for what you can do to help protect the environment. The approved Service Centres will take back your old slow cooker and dispose of the appliance in accordance with environmental regulations.



Let's help protect the environment!

- ① Your appliance contains valuable materials which can be recovered or recycled.
- Leave it at a local civic waste collection point.

Description

1. Lid
2. Lid handles
3. Cooking pot
4. Condensation drip collector
5. Keep warm light
6. Stainless steel body wrap
7. Mode selection button
8. Display
9. Button +
10. Button -
11. On/off button
12. Carrying handles
13. Power lead

Before using your slow cooker for the first time

- Before using for the first time, clean the outside of the slow cooker with a damp sponge - **fig. 1**.
- Wash the cooking pot and the lid with hot soapy water - **fig. 2-3**.
- Rinse and dry.
- The cooking pot and the lid are dishwasher friendly.
- Plug in your slow cooker.
- It is now ready for use.

Remove all packaging, stickers or various accessories from the inside and the outside of the slow cooker. Never immerse the electric base in water.

Using your slow cooker

Always wear oven gloves when moving the slow cooker

Different cooking modes

LOW mode

- Using the Low mode for cooking makes it possible to stew food at an average temperature of 90°C. In Low mode, the cooking time varies between 4 hours and 20 hours, depending on the type of food and the recipe.

HIGH mode

- Using the High mode for cooking makes it possible to stew food at an average temperature of 120°C. In High mode, the cooking time varies between 2 hours and 10 hours, depending on the type of food and the recipe.

During cooking, do not touch the stainless steel or glass outside surface of the slow cooker which may become hot. Do not put your hands close to the lid edges. - **fig. 4**. Always wear oven gloves for carrying the product when it is hot. Do not obstruct the product's ear vents.

Cooking

- Place the food in the detachable cooking pot.
- Place the cooking pot in the base.
- Close the lid.
- Plug in the slow cooker.
- The appliance makes a beep sound indicating that the product is plugged in.
- Press the Mode button once to choose the High mode.
- Press the Mode button a second time to choose the Low mode - fig. 5.
- Using the +/- buttons to adjust and display the cooking time - fig. 6.
- Press the start button.
- The cooking starts.
- You can choose your cooking time in segments of 30 minutes.
- To cancel or modify a program, press the start button.

When cooking with your slow cooker you must always use the special cooking pot and never put the food directly on the base of the slow cooker. To avoid any spillage do not fill the cooking pot to more than 3/4 full.

During the cooking

During the cooking, the ceramic cooking pot gets very hot and you must not touch it with your bare hands during normal use.

- If you wish to add ingredients, or check on how cooked the food is, you only need to open the lid. When the lid is opened, a beep sounds. The keep warm light will start flashing.
- After 5 minutes, three beeps will sound to warn you that the lid is still open.
- Close the lid within one minute after this beep, otherwise, after a final warning consisting of 10 beeps, the slow cooker will switch off.
- The temperature booster ensures a build-up of heat in the slow cooker to keep contents hot even when the lid is open.
- When you close the lid, a beep will sound to confirm that the lid is correctly closed.
- The slow cooker will then go either to High or Low mode according to the cooking mode which was selected before the lid was opened and the cooking will resume.

At the end of cooking: automatic keep warm function

- At the end of cooking, the appliance goes automatically into KEEP WARM mode.
- This setting makes it possible to keep your dish warm at a temperature of about 70°C once the cooking itself is finished.
- The display also indicates the change to the Keep Warm function - fig. 7.
- The duration of the keep warm function depends on the cooking time. The slow cooker can remain on for up to 24 hours. So, if your cooking lasts 10 hours the keep warm function can operate for a further 14 hours, after which the slow cooker will go into stand by mode. In this case you will need to start the cooking again before eating the food.

During the keep warm function

- While the keep warm function is still on, you can start serving the food directly and place the slow cooker on the table.
- When you open the lid a beep will sound to warn you that the lid is open.
- The temperature booster allows the slow cooker to gain heat so that the food inside can be kept hot even when the lid is open.
- After 5 minutes, a beep will sound to let you know that the lid is still open.
- Close the lid in the minute following.
- If you do not close the lid, a series of 10 beeps will sound and the slow cooker will switch off.
- When you close the lid, a new beep will sound indicating that the slow cooker has been correctly closed.
- The slow cooker will then go into keep warm mode.

End of keep warm function

- When the keep warm function has come to an end and if you wish to switch off the slow cooker you just need to unplug it.
- Always unplug the slow cooker when it is not in use or if it has to be moved or cleaned. To unplug, pull on the plug and not on the power lead of the slow cooker.

Transporting the slow cooker

- Always transport the slow cooker with the lid closed.
- If you wish to transport the slow cooker while the keep warm function is on, you just need to unplug it. You then have up to 10 minutes to plug it in again. It will then restart in keep warm mode.
- If during transport, the temperature inside the slow cooker gets too low, the cooker will not switch on again when you next plug it in. In this case you need to restart the cooking in either High or Low mode.
- It is not advisable to move the slow cooker during cooking.

Advice on getting the best out of your slow cooker

- Vegetables stew slowly, so therefore they have to be cut up into small or medium size pieces and placed at the bottom of the cooking pot.
- Do not fill the slow cooker's cooking pot more than three quarters full.
- Meats can be precooked, browned or grilled to get rid of as much fat as possible.
- **DO NOT USE FROZEN MEAT.**
- **DEFROST ALL MEATS BEFORE COOKING THEM IN THE SLOW COOKER.**
- You can brown minced meat, like beef or turkey meat, before putting them in the slow cooker, in order to remove the excess fat and so reduce the risk of food poisoning,.
- Unplug the slow cooker when it is not in use or before cleaning it.
- Always wear oven gloves when the slow cooker is hot and you wish to move it.
- Always make sure the lid is on during cooking.
- Use aromatic herbs that are fresh or dried rather than in powder form because they release their flavours better during slow cooking.
- Fresh produce such as milk or cheese, must be added at the end of the cooking process, unless your recipe specifies otherwise.
- Avoid sudden changes in temperatures. For example, do not add food which has just come out of the freezer directly into the hot slow cooker .
- Always place some form of protection under the cooking pot before placing it on a table or work surface.
- Do not put anything under the appliance during the cooking process.
- Let your cooking pot cool down before you clean it in order to avoid sudden changes in temperature which might damage it.
- Do not put the cooking pot close to an inflammable substance or object when it is hot.
- Always use oven gloves when you need to open the lid - fig. 8.

Taking care of and cleaning your slow cooker

Make sure that your slow cooker is unplugged and that it has cooled down completely before cleaning it.

Cleaning the stainless steel body wrap

- The outside of the slow cooker must be cleaned with a non-abrasive sponge hot water and a little washing-up liquid.
- Rinse and dry.

Never immerse the electrical parts in water, nor in any other liquid. Do not use abrasive cleaning products which might damage the slow cooker. Do not allow liquid to enter the slow cooker.

Cleaning the detachable cooking pot

- The detachable cooking pot and the lid can go in the dishwasher or be hand washed in hot water and a little washing-up liquid.
- You will only need a soft cloth, sponge or a plastic spatula to remove any cooking residue.
- To remove water marks or any other marks, use a non-abrasive cleaner and wipe the underneath of the cooking pot with a paper towel.
- Residual marks will not prevent your slow cooker from functioning correctly.

Cleaning the lid

- The lid is detachable.
- Open the lid to a 45° angle pulling it gently towards you so as to free it from its hinges. Never force the lid, you run the risk of damaging the hinges - **fig. 9**.
- The lid must be cleaned with a non-abrasive sponge and with hot water and a little washing-up liquid. It can also go in the dishwasher.

Do not use abrasive cleaning products which might damage the lid. Never open the lid to more than 95°. Never apply excessive force to the lid once it is open so as not to damage the hinges.

Cleaning the condensation drip collector

- The drip collector serves to collect the condensation which runs off the lid when it is opened.
- Place your fingers on each side of the condensation drip collector at the appropriate points.
- Remove the drip collector taking care not to apply excessive force - **fig. 10**.
- The condensation drip collector must be cleaned with a non-abrasive sponge, some hot water and a little washing-up liquid. It can also go in the dishwasher.

What to do if your slow cooker is not working correctly

Problems and possible causes	Solutions
My slow cooker will not work. What do I do?	Check that the slow cooker is correctly plugged in. If need be, unplug it and plug it back in again. Check that your power socket is working.
I've unplugged my slow cooker and plugged it back in again. It has reset itself and is showing 0:00	The temperature inside the slow cooker has dropped too much during transport or the slow cooker has been unplugged for more than 10 minutes. Plug your slow cooker back in again and restart the cooking in either High or Low mode.
I opened the lid. When I came back, my slow cooker had switched itself off.	The lid has remained open for more than 6 minutes. Restart the cooking in either High or Low mode.
I opened and closed the lid when the slow cooker was cooking or keeping warm. I went away, and it switched itself off.	The lid hasn't been closed correctly. Restart the cooking and make sure you hear the beep which indicates that the lid has been closed correctly.

If the slow cooker still does not work, please bring it back to an approved service centre.

Ref : NC00019919
Conception : www.batoteam.fr

