

6 specific automatic programs



Burger

Poultry

Sandwich

Sausage /
Pork

Red meat

Fish /
Seafood



Tefal is registered trademarks of Tefal S.A.S. France BP 89 74156 RUMILLY Cedex
R.C.S. Annecy B 301 520 920

www.tefal.com.au

2100092383

Tefal®

OptiGrill™

INNOVATION



THICKNESS
MEASUREMENT



COOKING LEVEL
INDICATOR



Quick Start Guide

This Quick Start Guide is relevant for the Tefal® OptiGrill® GC702D61 and GC702861

1. GETTING STARTED - Wash non-stick plates before first use



INSERT



PLUG IN

2. LIGHT INDICATOR EVOLUTION

1. PREHEATING



PREHEATING



READY TO COOK

2. COOKING STARTS



3. COOKING



RARE



MEDIUM



WELL-DONE

KEEP WARM



MANUAL
FUNCTION



CALL
CONSUMER
SERVICE

3. SELECT COOKING PROGRAM



SELECT

OPTIONS



Frozen Food
+ program



Manual mode:
fixed temperature

4. PREHEATING



WAIT



Wait approx 5 min



BEEP = READY

5. COOKING



OPEN



 
PLACE FOOD



CLOSE
THICKNESS
MEASUREMENT



COOKING STARTS



REMOVE FOOD AT THE REQUIRED LEVEL



MEDIUM



WELL-DONE



READY TO EAT



CLOSE

For 2nd batch of food, close grill and start from section 3

6. CLEANING AND MAINTENANCE



OFF



UNPLUG



WAIT



REMOVE



WASH