

T-fal®

EN

CONVECTION AND ROTISSERIE OVEN



Instructions for use

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse or partially immerse cord, plugs or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment. Or, call the appropriate toll-free number on the cover of this manual.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over the edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to OFF, then remove plug from wall outlet.
- To switch off the appliance turn Timer knob to OFF position.
- Do not use appliance for other than intended use.
- Use extreme caution when removing tray or disposing of hot grease.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- Oversized foods or metal utensils must not be inserted in a toaster oven, as they may create a fire or risk of electric shock.
- A fire may occur if the toaster oven is covered or touching flammable material including curtains, draperies, walls and the like, when in operation. Do not store any item on top of the appliance when in operation.
- Extreme caution should be exercised when using containers constructed of other than metal or glass.
- Do not store any material, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, and the like.
- Do not cover crumb tray or any part of this oven with metal foil. This will cause overheating of the oven.

SAVE THESE INSTRUCTIONS.
THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY.

Grounded plug

- As a safety feature, this appliance is equipped with a grounded plug, which will only fit into a three-prong outlet. Do not attempt to defeat this safety feature. Improper connection of the grounding conductor may result in the risk of electric shock. Consult a qualified electrician if you are in doubt as to whether the outlet is properly grounded.

Electrical cord

- a) A short power-supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- b) Longer extension cords are available and may be used if care is exercised in their use.
- c) If an extension cord is used,
 - 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, and
 - 2) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally. If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord.

Warning: To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.

Note: If the power supply cord is damaged, it should be replaced by qualified personnel; in Latin America by an authorized service center.

DO NOT USE APPLIANCE FOR OTHER THAN INTENDED USE.

If you have any problems, contact the authorized after-sales service center.

Thank you for buying this appliance. Read the instructions in this leaflet carefully and keep them within reach. Any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and the guarantee will not apply.

For your safety, this product conforms to all applicable standards and regulations (Electric Safety, Food Compliant Materials, Environment, ...).

EN

Our company has an ongoing policy of research and development and may modify these products without prior notice.

- Only use parts or accessories provided with the appliance or bought from an Approved Service Center. Do not use them for other appliances or intentions.
- To avoid damaging your appliance, do not use flambé recipes with it at any time.

Prevention of accidents at home




- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by an adult responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Accessible surface temperatures can be high when the appliance is operating. Never touch the hot surfaces of the appliance, always use the handles.
- As this appliance is for household use only, it is not intended for use in the following applications and the guarantee will not apply for:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- This appliance is not intended to function using an external time-switch or a separate remote control system.
- Do not use the appliance if:
 - it has faulty or damaged power cord,
 - the appliance has been dropped and shows visible signs of damage or malfunction.



Environment protection first!

① Your appliance contains valuable materials which can be recovered or recycled.






➡ Leave it at a local civic waste collection point.

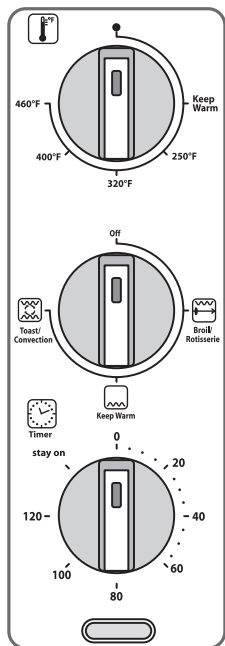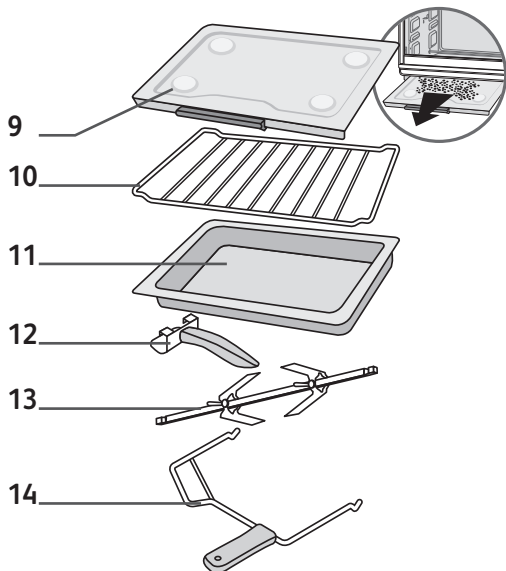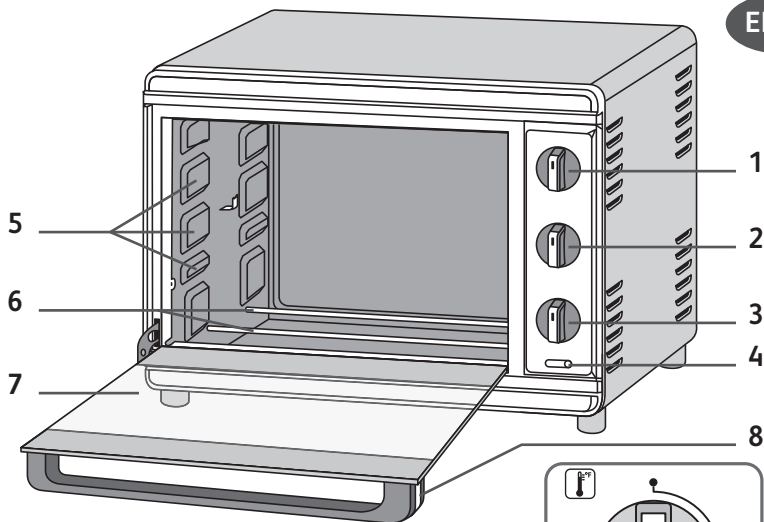

Description

- | | |
|-----------------------|--|
| 1 Thermostat | 8 Door handle |
| 2 Function switch | 9 Crumb tray |
| 3 Timer | 10 Chrome bake rack |
| 4 Indicator light | 11 Bake pan |
| 5 Rack support guides | 12 Tray/Rack handle |
| 6 Heating elements | 13 Rotisserie forks with screws/ Rotisserie spit |
| 7 Glass door | 14 Rotisserie handle |



Before using for the first time

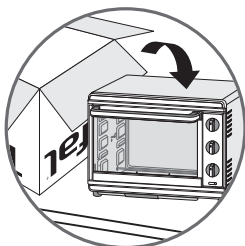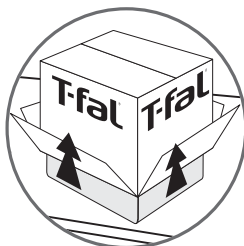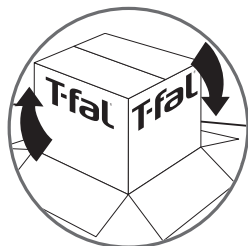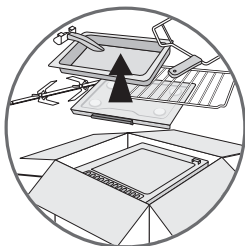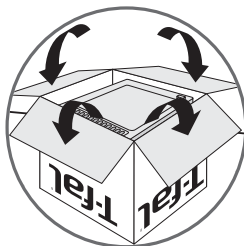



Remove all packaging materials and take out the appliance **without holding it by the handle.**

Read all the instructions for use and the important safeguards and follow them carefully.

Wash all accessories in warm, soapy water. Rinse and dry carefully. Unroll the power cord completely.

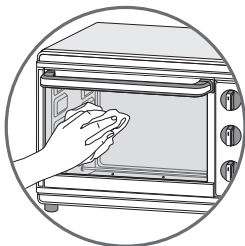
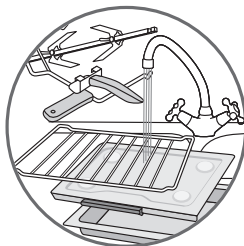


Wipe the outside of the appliance with a damp cloth and dry.

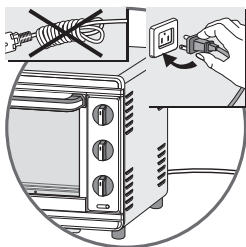
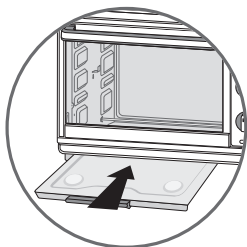


Plug in the toaster oven.
Put the crumb tray back in place.

In order to remove any possible residues from manufacturing, run the appliance empty for 20 minutes.

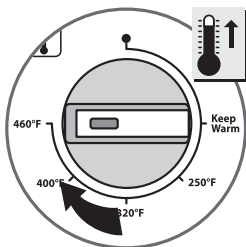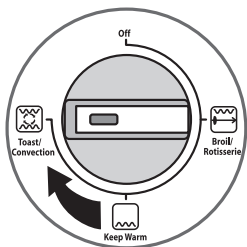

Select the Oven function and set the temperature dial to **460°F** (240°C).

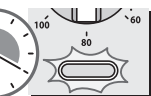
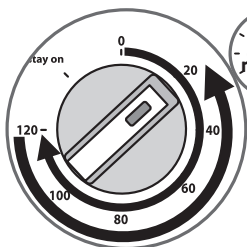


Set the timer dial to 20 minutes.

The power indicator light will now turn on indicating the toaster oven is now heating up.

You may observe smoke escaping from the oven.


This is normal and will gradually disappear with use.

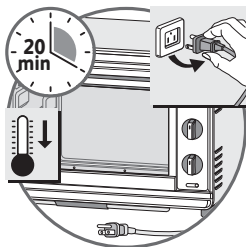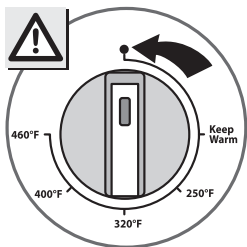

Once the timer has stopped, you will hear a beep. Turn the thermostat button to position •.

Let the appliance cool down before unplugging it.

Rack positions

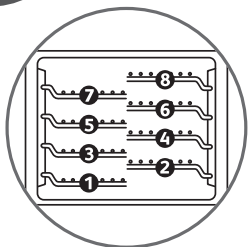

For all functions the position of the cooking rack will play an important role in the final cooking result.

Note that there are 8 separate positions for the cooking rack. Place your tray in the center of the rack at the desired height.

Warning: Do not pull the cooking rack more than 2/3-out.


Helpful hints about your oven

- When selecting baking time for a particular recipe, include preheat time.
- This oven has a 120 minute timer.
- Metal, ovenproof glass and ceramic bakeware without lids can be used in the oven.
- Turn all controls to **Off** before inserting or removing plug from electrical outlet.
- Cooking times are provided at the back of the manual. These are only estimated times and can vary depending on the dish used, the size, thickness, freshness and initial temperature of the food to be cooked.
- Do not put any container directly on the lower heating element.
- To obtain the best performance from this toaster oven:
 - Do not overfill the oven;
 - To avoid heat loss do not open the door too frequently.


Crumb tray

The crumb tray should be cleaned in warm soapy water.
(Do not wash the crumb tray in the dishwasher).


Leave the crumb tray in place while the appliance is in operation.

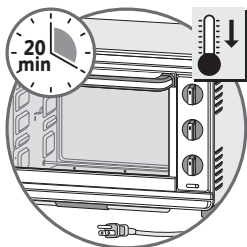

Do not touch the crumb tray during or immediately after operation.
Allow to cool completely.

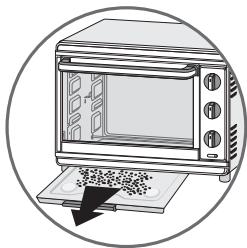

Remember to empty the crumb tray after every use.

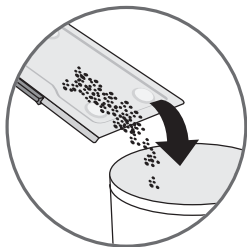


Toast/Convection function


Warning:

1. Never leave unattended during use.
2. Do not use the « stay on » function.

Plug in the toaster oven.
Insert the rack at the desired level.
Select the **Toast/Convection** function.

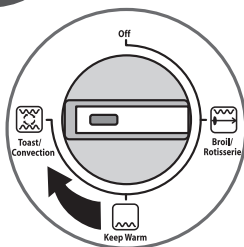


Set the temperature dial to the desired temperature

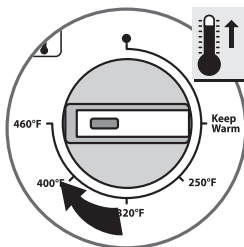



Set the timer dial on the desired cooking time.
The power indicator light turns on and cooking starts.

Timer: turn the knob to 120 minutes, then turn dial counter clockwise back to the desired time.

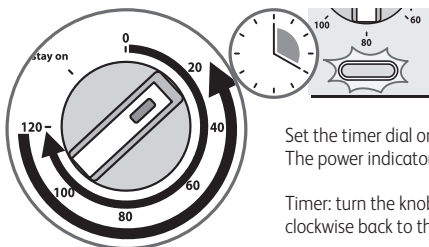


If preheating is necessary, wait for the time indicated in the cooking table and then place the food on the rack using a suitable dish.

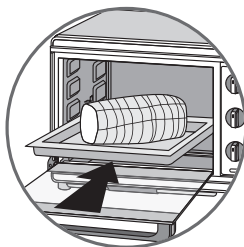


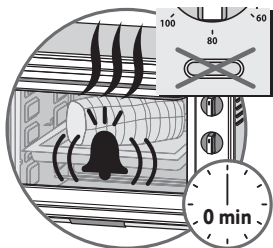

When cooking is completed, you will hear a beep and the timer automatically returns to the off position, the power indicator light will turn off.

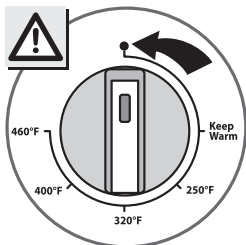

Turn the temperature dial to the position •.

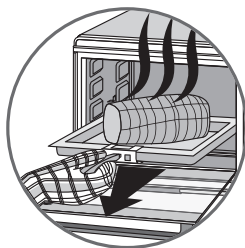


Using oven mitts or pot holders, lower oven door to the full open position and remove the cooked food.

You can also use the Tray/Rack handle.

Let the appliance cool down before unplug it.



EN Broil function

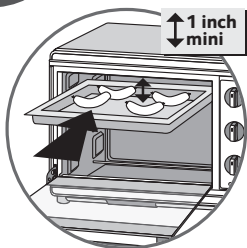



- Warning:**
1. Never leave unattended during use.
 2. Do not use the « stay on » function.

Plug in the toaster oven. Use shelf position #7. There must be a minimum space of 1 inch (2 cm) between the food and the top elements.

Note: Be sure food does not extend past the outer limits of the bake tray to prevent grease dripping onto the bottom heating elements.

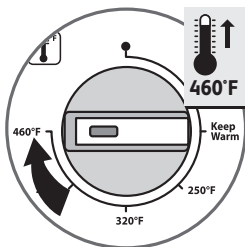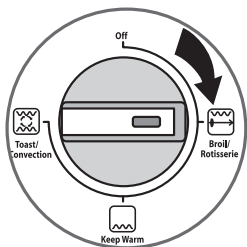


Close the door. Select the **Broil** function. Set the temperature dial on the highest temperature.

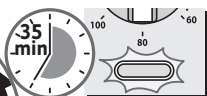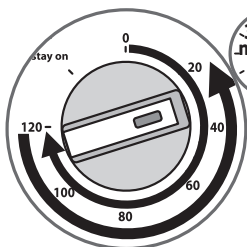


Set the timer dial on the desired time. The power indicator light turns on.


Timer: turn the knob to 120 minutes, then turn dial counter clockwise back to the desired time.

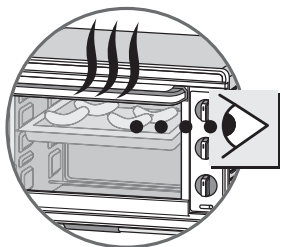


Monitor the food and for best results turn it over.

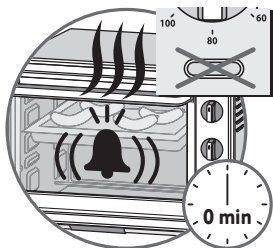

When the cycle is completed, you will hear a beep, the timer automatically returns to the off position and the power indicator light turn off.

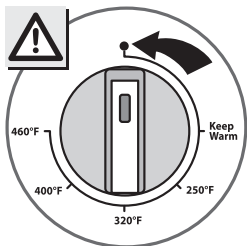

Turn the temperature dial to the position ●.

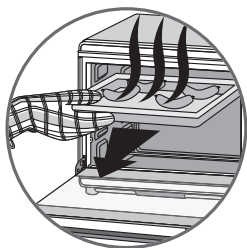

Using oven mitts or pot holders, lower oven door to the full open position and remove the cooked food.



You can also use the Tray/Rack handle.

EN Rotisserie function




Warning:

1. Never leave unattended during use.
2. Do not use the « stay on » function.

Plug in the toaster oven.
Insert the tray at the lowest position.
Pour water in the tray 10 fl oz (30 cl).

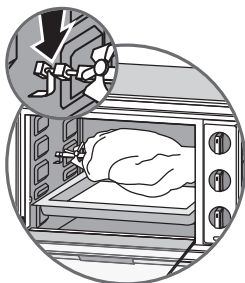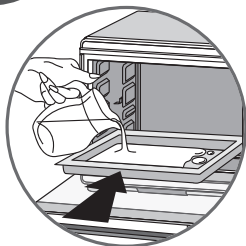


Place the poultry or meat onto the spit.

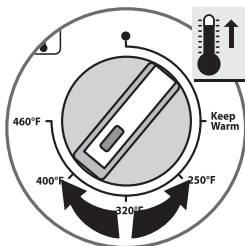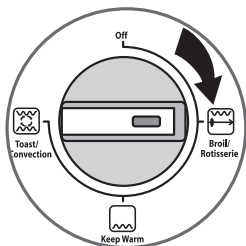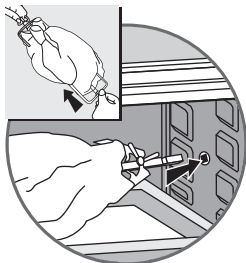

Select the **Rotisserie** function.

Note: Be sure poultry does not extend past the outer limits of the bake tray to prevent grease dripping onto the bottom heating elements.

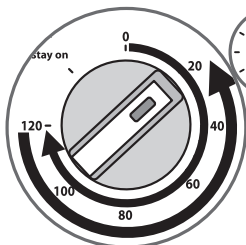


Close the door.


Set the timer dial on the desired time.
The power indicator light turns on.

Timer: turn the knob to 120 minutes, then turn dial counter clockwise back to the desired time.


Monitor the poultry.

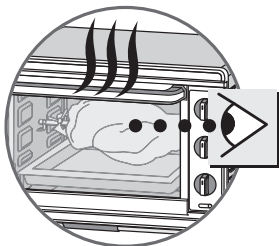

When cooking is completed, you will hear a beep and the timer automatically returns to the **Off** position, the power indicator light turns off.

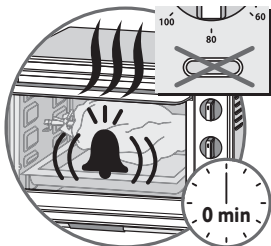



Turn the temperature dial to the position •.

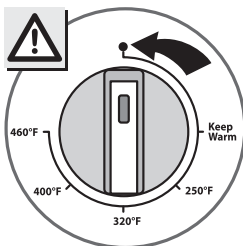

Using oven mitts or pot holders, lower oven door to the full open position and remove the cooked poultry.

You can also use the Rotisserie handle.



EN Keep warm function

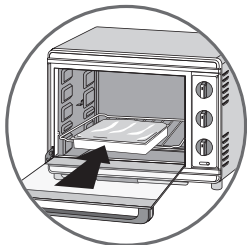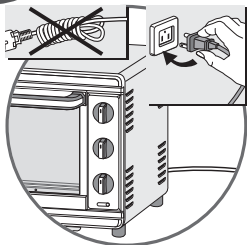

Never leave unattended during use.


Plug in the toaster oven.

Place the food on the rack using an appropriate dish.

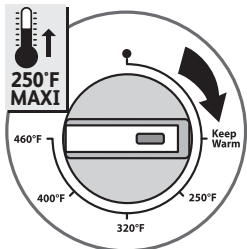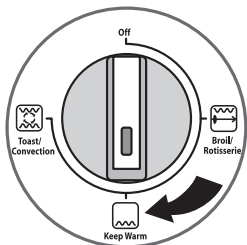


Select the **Keep Warm** function.

You have two options:

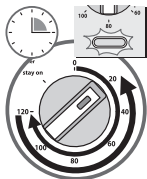

Set the timer dial on the desired cooking time. The power indicator light turns on and keep warm starts.

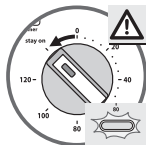

Set the timer dial on **Stay on**. The power indicator light turns on and keep warm starts.




Keep a watch...




Keep a watch...



When keep warm is completed, you will hear a beep and the timer automatically returns to the off position, the power indicator light turns off.

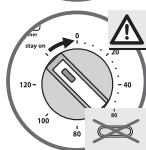

To stop the keep warm function, turn the timer button to **Off** position; the indicator light will turn off.


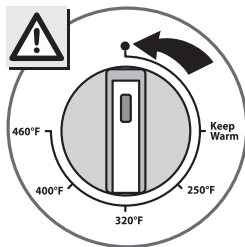


Turn the temperature dial to the position ●.

Using oven mitts or pot holders, lower oven door to the full open position and remove the cooked food.





Let the appliance cool down for 20 minutes before unplugging it.

Cleaning and care

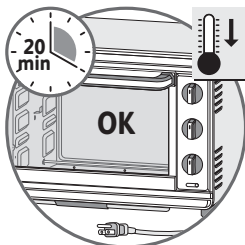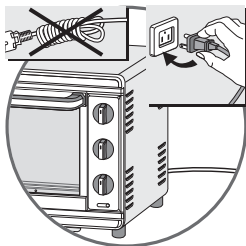

Do not allow grease to accumulate inside the appliance.

Let the appliance cool down completely and disconnect it before cleaning or storing.

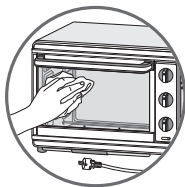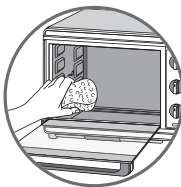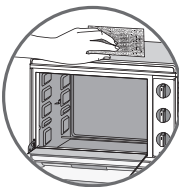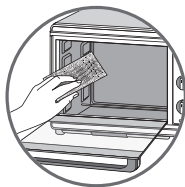


Do not use aggressive cleaning products (especially oven cleaners or metal or abrasive pads).








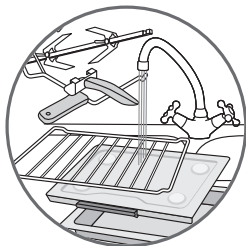


A quick wipe with a sponge is sufficient to clean the outside of the appliance.

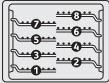Clean the door, enameled or lacquered surfaces and translucent parts with a damp sponge and a mild detergent.

Do not use cleaning products intended for metals (for stainless steel, copper etc.).

The inside walls of the oven are non-stick and can be cleaned easily with water and detergent.



Bread crust color				Pre-heating	
Light			460°F / 240°C	5 min.	5 min. + 1.55 min.
Medium			460°F / 240°C	5 min.	8 min. + 2.36 min.
Dark			460°F / 240°C	5 min.	13 min. + 3.55 min.

The above informations is just for reference. You should adjust it according to your personal taste or recipe guidelines.

Please pay attention to food in the oven when cooking.

EN 2 - 19