

Lire attentivement le mode d'emploi ainsi que les consignes de sécurité avant toute utilisation.

Перед использованием прибора внимательно прочтите инструкцию и правила по технике безопасности.

## 1. GENERAL DESCRIPTION

- A. Straighteners
- B. Ceramic on light
- C. On/off key pad
- D. Thermostat
- E. Ceramic straightening plates
- F. Power cord
- G. Hanging loop

## 2. SAFETY PRECAUTIONS

The appliance's accessories become very hot during use. Avoid contact with the skin. Make sure that the supply cord never comes into contact with the hot parts of the appliance.

For your safety, this appliance complies with the applicable standards and regulations (Low Voltage Directive, Electromagnetic Compatibility, Environmental...).

The appliance must be unplugged:

- before cleaning and maintenance procedures.

- if the power cord is damaged.

- as soon as you have finished using it.

- when you leave the room, even momentarily.

- whenever you leave the room.

- Check that the voltage of your electricity supply matches the voltage of your appliance. Any error when connecting the appliance can cause irreparable harm, not covered by the guarantee.

As an additional safety measure, we recommend the installation of a residual current device in the circuit or electrical circuit supplying the bathroom, acting at not more than 30 mA. Ask your installer for advice.

Caution: Never use the appliance with wet hands or near baths, basins or other recipients containing water. When using the appliance in the bathroom, unplug it after use as the presence of water nearby may pose a danger even when the appliance is turned off.

Close supervision is necessary when the appliance is used by children or people who have not been enabled people.

If the power cord is damaged, it must be replaced by the manufacturer, its after sales service or a person with similar qualifications, to avoid any risk.

Stop using your appliance and contact an Authorised Service Centre if:

- your appliance has fallen.

- it does not work correctly.

- "Drip-dripping" is not working correctly, see "Drip-dripping", or contact our Customer Helpdesk or your dealer.

Do not leave within the reach of children.

Do not use if the cord is damaged.

Do not immerse or put under running water, even for cleaning purposes.

Do not hold with damp hands.

Do not hold the appliance by the casing, which is hot, but by the handle.

Do not plug by pulling on the cord, rather pull out by the plug.

Do not use an electrical extension lead.

Do not clean with abrasive or corrosive products.

Do not use at temperatures below 0°C and above 35°C.

**GUARANTEE**  
Your appliance is designed for use in the home only. It should not be used for professional purposes. The guarantee becomes null and void in the case of improper usage.

**3. GETTING STARTED**  
Your appliance heats up very quickly (only 60 seconds), and the temperature remains constant throughout use:

- Plug in the appliance

- Set the ideal temperature to "1" (Fig.1-C)

- Wait 60 sec. until the appliance is ready for use (Fig. 2)

- Select the ideal temperature for your hair using the Thermostat (Fig.1-D)

- After use, unplug the appliance and let it cool down completely before storing it away.

## 4. OPERATION

Use this product on clean, untangled, dry (or slightly damp) hair.

- Do not use the straighteners on synthetic hair (wig, extensions, etc.).

- Take a small section of hair, a few centimetres in width, comb it and place it between the plates. Grip the hair firmly between the plates and slowly slide the appliance from the roots to the tips of the hair (Fig. 3).

- If your hair is very thick or frizzy, you can improve the result by spraying your hair with water before straightening.

- The ceramic plates protect your hair from excessive heat, thanks to an even distribution of the heat.

- Wait until your straightened hair has cooled down before styling (fig. 4).

**PROFESSIONAL TIPS**

- Always start with the layers of hair underneath: first the back, then the nape, working around to the sides then the front.

- To avoid kinks in long sections of hair, use a fluid, continuous movement.

- To enhance the effect, you can apply styling mousse before straightening.

**5. CLEANING**  
**CAUTION!** Before straightening your straighteners and let them cool down before cleaning them.

- Never submerge the straighteners in water.

- To clean the straighteners, unplug them, let them cool down then wipe with a damp cloth and dry with a dry cloth (fig. 5).

## 6. ENVIRONNEMENT

### PROTECTION FIRST!

Your appliance contains valuable materials which can be recovered or recycled. Leave it at a collection point.

## 7. ENTRETIEN

ATTENTION! Toujours débrancher l'appareil et le laisser refroidir avant de le nettoyer.

- Ne plongez jamais votre appareil dans l'eau.

- Pour nettoyer l'appareil : débranchez-le, passez un chiffon humide et séchez avec un chiffon sec (fig.5).

## 6. PARTICIPOS A LA PROTECTION DE L'ENVIRONNEMENT!

Votre appareil contient de nombreux matériaux valorisables ou recyclables. Confiez celui-ci dans un point de collecte ou à défaut dans un centre service agréé pour son traitement soit effectué.



8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81

82

83

84

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

101

102

103

104

105

106

107

108

109

110

111

112

113

114

115

116

117

118

119

120

121

122

123

124

125

126

127

128

129

130

131

132

133

134

