

6 specific automatic programs



Burger

Poultry

Sandwich

Sausage /
Pork

Red meat

Fish /
Seafood



Tefal®

OptiGrill™



INNOVATION



THICKNESS
MEASUREMENT



COOKING LEVEL
INDICATOR



Tefal is registered trademarks of Tefal S.A.S. France BP 89 74156 RUMILLY Cedex
R.C.S. Annecy B 301 520 920

www.tefal.com.au

REF. NC00117231

Quick Start Guide

1. GETTING STARTED - Wash non-stick plates before first use



INSERT



PLUG IN

2. LIGHT INDICATOR EVOLUTION

1. PREHEATING




PREHEATING

READY TO COOK

2. COOKING STARTS



3. COOKING

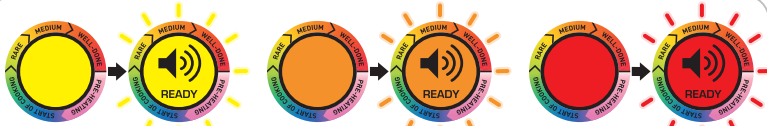

RARE

MEDIUM

WELL-DONE

KEEP WARM



MANUAL FUNCTION



FIXED



IF FLASHING

CALL CONSUMER SERVICE

3. SELECT COOKING PROGRAM



SELECT

OPTIONS



Frozen Food + program



Manual mode: fixed temperature

4. PREHEATING



WAIT

Wait approx 5 min



BEEP = READY

5. COOKING



OPEN



 
PLACE FOOD



CLOSE
THICKNESS MEASUREMENT



COOKING STARTS



RARE



MEDIUM



WELL-DONE

REMOVE FOOD AT THE REQUIRED LEVEL



READY TO EAT



CLOSE

For 2nd batch of food, close grill and start from section 3

6. CLEANING AND MAINTENANCE



OFF



UNPLUG



WAIT



REMOVE



WASH

