

1. GENERAL DESCRIPTION / 1. DESCRIZIONE GENERALE / 1. DESCRIPTION GENERALE / 1. ALLGEMEINE BESCHREIBUNG / 1. ALGEMENE BESCHRIJVING / 1. DESCRIPCIÓN GENERAL / 1. DESCRIZIONE GENERALE / 1. DESCRIÇÃO GERAL

- A. Tongs
B. ON/OFF switch
C. 6 smoothing plates with Ultrashine Nano Ceramic coating
D. System of evaporation
E. 6 position LED display
F. Boutons +/- pour diminuer/augmenter la température
G. Ionex System
H. Lock System (to lock and unlock the tongs)
I. Rotating power cord outlet
J. Ring hanger

2. SAFETY INSTRUCTIONS / 2. CONSEILS DE SECURITE / 2. SICUREZZA / 2. SICUREZZA / 2. SEGUANÇA / 2. SEGUANÇA

- For your safety, this appliance complies with the applicable standards and regulations (Low Voltage Directive, Electromagnetic Compatibility, Environmental...).
Check that the voltage of your electricity supply matches the voltage of your appliance.
Do not use this appliance in the bathroom if you are using it in the UK.
For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom.
The installation of the appliance and its use must however comply with the standards in force in your country.
WARNING : do not use this appliance near bathtubs, showers, basins or other vessels containing water.
When the hair straightener is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hair straightener is switched off.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Stop using your appliance and contact an Authorised Service Centre if:
- your appliance has fallen.
- it does not work correctly.
- The appliance must be unplugged:
- before cleaning and maintenance procedures.
- if it is not working correctly.
- as soon as you have finished using it.
- if you leave the room, even momentarily.
- Do not use if the cord is damaged.
- Do not immerse or put under running water, even for cleaning purposes.
- Do not hold with damp hands.
- Do not hold the appliance by the casing, which is hot, but by the handle.
- Do not unplug by pulling on the cord, rather pull out by the plug.
- Do not use any electrical extension lead.
- Do not clean with abrasive or corrosive products.
- Do not use at temperatures below 0°C and above 35°C.

GUARANTEE: Your appliance is designed for use in the home only. It should not be used for professional purposes. The guarantee becomes null and void in the case of improper usage.
3. BRINGING INTO SERVICE
1. Lock System (Fig 3): To open the clamps, pull the Lock System back. To lock the clamps: close the clamps and push the "Lock System" to the front.
2. Plug in the appliance.
3. Set the ON / OFF switch to position I. (B)
4. Your appliance will heat up very quickly (ready to use in less than 30 seconds) and the temperature will remain stable throughout use. (Fig. 1)
5. Select the ideal temperature for your hair using the +/- (fig. 2) buttons; press the - button to reduce the temperature or the + button to increase it. The red light indicates the selected temperature.
6. After use: Place ON/OFF (B) switch in the stop position (0), close the clamps, use the "Lock System", unplug the appliance and leave it to cool down completely before putting it away.

4. USE WARNING: Do not place your hands over the evaporation holes.
- Make sure the evaporation holes are not in direct contact with the hands, face, head or hair.
- The ceramic coating on the plates protects your hair against overheating by uniformly spreading the heat.
Use on damp hair:
- To use on clean, towel-dried and combed hair. (fig. 4 et 5)
- Form a small lock a few centimetres in width, comb it and place it between the plates.
- Direct the evaporation holes towards the outside and not towards the head. (fig. 6)
- Hold the hair firmly between the plates and slide the appliance slowly from the roots to the tip of the hair. (fig. 7)
- During operation, do not worry if you hear a slight crackling or if you see steam, it is only the excess water evaporating off your hair.

Use on dry hair:
- Hair must be untangled, clean and dry. (fig. 5)
- Form a small lock a few centimetres in width, comb it and place it between the plates.
- Do not use the appliance on synthetic hair (wigs, extensions, etc.).
- Hold the hair firmly between the plates and slide the appliance slowly from the roots to the tip of the hair.
- Wait for the smoothed hair to cool down before styling.
HAIRDRESSER'S TIPS
- Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.
- To avoid streaks along the lengths, work using a smooth and uninterrupted movement.
- To highlight, apply hair setting lotion before smoothing.
5. MAINTENANCE CAUTION! Always unplug your appliance and allow it to cool before cleaning it.
- To clean the appliance, unplug it and then wipe with a damp cloth and with a dry cloth.
6. ENVIRONMENT PROTECTION FIRST!
- Your appliance contains valuable materials which can be recovered or recycled.
- Leave it at a local civic waste collection point.

1. Lock System (Fig 3): To open the clamps, pull the Lock System back. To lock the clamps: close the clamps and push the "Lock System" to the front.
2. Plug in the appliance.
3. Set the ON / OFF switch to position I. (B)
4. Your appliance will heat up very quickly (ready to use in less than 30 seconds) and the temperature will remain stable throughout use. (Fig. 1)
5. Select the ideal temperature for your hair using the +/- (fig. 2) buttons; press the - button to reduce the temperature or the + button to increase it. The red light indicates the selected temperature.
6. After use: Place ON/OFF (B) switch in the stop position (0), close the clamps, use the "Lock System", unplug the appliance and leave it to cool down completely before putting it away.

4. USE WARNING: Do not place your hands over the evaporation holes.
- Make sure the evaporation holes are not in direct contact with the hands, face, head or hair.
- The ceramic coating on the plates protects your hair against overheating by uniformly spreading the heat.
Use on damp hair:
- To use on clean, towel-dried and combed hair. (fig. 4 et 5)
- Form a small lock a few centimetres in width, comb it and place it between the plates.
- Direct the evaporation holes towards the outside and not towards the head. (fig. 6)
- Hold the hair firmly between the plates and slide the appliance slowly from the roots to the tip of the hair. (fig. 7)
- During operation, do not worry if you hear a slight crackling or if you see steam, it is only the excess water evaporating off your hair.

Use on dry hair:
- Hair must be untangled, clean and dry. (fig. 5)
- Form a small lock a few centimetres in width, comb it and place it between the plates.
- Do not use the appliance on synthetic hair (wigs, extensions, etc.).
- Hold the hair firmly between the plates and slide the appliance slowly from the roots to the tip of the hair.
- Wait for the smoothed hair to cool down before styling.
HAIRDRESSER'S TIPS
- Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.
- To avoid streaks along the lengths, work using a smooth and uninterrupted movement.
- To highlight, apply hair setting lotion before smoothing.
5. MAINTENANCE CAUTION! Always unplug your appliance and allow it to cool before cleaning it.
- To clean the appliance, unplug it and then wipe with a damp cloth and with a dry cloth.
6. ENVIRONMENT PROTECTION FIRST!
- Your appliance contains valuable materials which can be recovered or recycled.
- Leave it at a local civic waste collection point.

1. Lock System (Fig 3): To open the clamps, pull the Lock System back. To lock the clamps: close the clamps and push the "Lock System" to the front.
2. Plug in the appliance.
3. Set the ON / OFF switch to position I. (B)
4. Your appliance will heat up very quickly (ready to use in less than 30 seconds) and the temperature will remain stable throughout use. (Fig. 1)
5. Select the ideal temperature for your hair using the +/- (fig. 2) buttons; press the - button to reduce the temperature or the + button to increase it. The red light indicates the selected temperature.
6. After use: Place ON/OFF (B) switch in the stop position (0), close the clamps, use the "Lock System", unplug the appliance and leave it to cool down completely before putting it away.

4. USE WARNING: Do not place your hands over the evaporation holes.
- Make sure the evaporation holes are not in direct contact with the hands, face, head or hair.
- The ceramic coating on the plates protects your hair against overheating by uniformly spreading the heat.
Use on damp hair:
- To use on clean, towel-dried and combed hair. (fig. 4 et 5)
- Form a small lock a few centimetres in width, comb it and place it between the plates.
- Direct the evaporation holes towards the outside and not towards the head. (fig. 6)
- Hold the hair firmly between the plates and slide the appliance slowly from the roots to the tip of the hair. (fig. 7)
- During operation, do not worry if you hear a slight crackling or if you see steam, it is only the excess water evaporating off your hair.

Use on dry hair:
- Hair must be untangled, clean and dry. (fig. 5)
- Form a small lock a few centimetres in width, comb it and place it between the plates.
- Do not use the appliance on synthetic hair (wigs, extensions, etc.).
- Hold the hair firmly between the plates and slide the appliance slowly from the roots to the tip of the hair.
- Wait for the smoothed hair to cool down before styling.
HAIRDRESSER'S TIPS
- Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.
- To avoid streaks along the lengths, work using a smooth and uninterrupted movement.
- To highlight, apply hair setting lotion before smoothing.
5. MAINTENANCE CAUTION! Always unplug your appliance and allow it to cool before cleaning it.
- To clean the appliance, unplug it and then wipe with a damp cloth and with a dry cloth.
6. ENVIRONMENT PROTECTION FIRST!
- Your appliance contains valuable materials which can be recovered or recycled.
- Leave it at a local civic waste collection point.

1. Lock System (Fig 3): To open the clamps, pull the Lock System back. To lock the clamps: close the clamps and push the "Lock System" to the front.
2. Plug in the appliance.
3. Set the ON / OFF switch to position I. (B)
4. Your appliance will heat up very quickly (ready to use in less than 30 seconds) and the temperature will remain stable throughout use. (Fig. 1)
5. Select the ideal temperature for your hair using the +/- (fig. 2) buttons; press the - button to reduce the temperature or the + button to increase it. The red light indicates the selected temperature.
6. After use: Place ON/OFF (B) switch in the stop position (0), close the clamps, use the "Lock System", unplug the appliance and leave it to cool down completely before putting it away.

4. USE WARNING: Do not place your hands over the evaporation holes.
- Make sure the evaporation holes are not in direct contact with the hands, face, head or hair.
- The ceramic coating on the plates protects your hair against overheating by uniformly spreading the heat.
Use on damp hair:
- To use on clean, towel-dried and combed hair. (fig. 4 et 5)
- Form a small lock a few centimetres in width, comb it and place it between the plates.
- Direct the evaporation holes towards the outside and not towards the head. (fig. 6)
- Hold the hair firmly between the plates and slide the appliance slowly from the roots to the tip of the hair. (fig. 7)
- During operation, do not worry if you hear a slight crackling or if you see steam, it is only the excess water evaporating off your hair.

Use on dry hair:
- Hair must be untangled, clean and dry. (fig. 5)
- Form a small lock a few centimetres in width, comb it and place it between the plates.
- Do not use the appliance on synthetic hair (wigs, extensions, etc.).
- Hold the hair firmly between the plates and slide the appliance slowly from the roots to the tip of the hair.
- Wait for the smoothed hair to cool down before styling.
HAIRDRESSER'S TIPS
- Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.
- To avoid streaks along the lengths, work using a smooth and uninterrupted movement.
- To highlight, apply hair setting lotion before smoothing.
5. MAINTENANCE CAUTION! Always unplug your appliance and allow it to cool before cleaning it.
- To clean the appliance, unplug it and then wipe with a damp cloth and with a dry cloth.
6. ENVIRONMENT PROTECTION FIRST!
- Your appliance contains valuable materials which can be recovered or recycled.
- Leave it at a local civic waste collection point.

1. Lock System (Fig 3): To open the clamps, pull the Lock System back. To lock the clamps: close the clamps and push the "Lock System" to the front.
2. Plug in the appliance.
3. Set the ON / OFF switch to position I. (B)
4. Your appliance will heat up very quickly (ready to use in less than 30 seconds) and the temperature will remain stable throughout use. (Fig. 1)
5. Select the ideal temperature for your hair using the +/- (fig. 2) buttons; press the - button to reduce the temperature or the + button to increase it. The red light indicates the selected temperature.
6. After use: Place ON/OFF (B) switch in the stop position (0), close the clamps, use the "Lock System", unplug the appliance and leave it to cool down completely before putting it away.

4. USE WARNING: Do not place your hands over the evaporation holes.
- Make sure the evaporation holes are not in direct contact with the hands, face, head or hair.
- The ceramic coating on the plates protects your hair against overheating by uniformly spreading the heat.
Use on damp hair:
- To use on clean, towel-dried and combed hair. (fig. 4 et 5)
- Form a small lock a few centimetres in width, comb it and place it between the plates.
- Direct the evaporation holes towards the outside and not towards the head. (fig. 6)
- Hold the hair firmly between the plates and slide the appliance slowly from the roots to the tip of the hair. (fig. 7)
- During operation, do not worry if you hear a slight crackling or if you see steam, it is only the excess water evaporating off your hair.

Use on dry hair:
- Hair must be untangled, clean and dry. (fig. 5)
- Form a small lock a few centimetres in width, comb it and place it between the plates.
- Do not use the appliance on synthetic hair (wigs, extensions, etc.).
- Hold the hair firmly between the plates and slide the appliance slowly from the roots to the tip of the hair.
- Wait for the smoothed hair to cool down before styling.
HAIRDRESSER'S TIPS
- Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.
- To avoid streaks along the lengths, work using a smooth and uninterrupted movement.
- To highlight, apply hair setting lotion before smoothing.
5. MAINTENANCE CAUTION! Always unplug your appliance and allow it to cool before cleaning it.
- To clean the appliance, unplug it and then wipe with a damp cloth and with a dry cloth.
6. ENVIRONMENT PROTECTION FIRST!
- Your appliance contains valuable materials which can be recovered or recycled.
- Leave it at a local civic waste collection point.

1. Lock System (Fig 3): To open the clamps, pull the Lock System back. To lock the clamps: close the clamps and push the "Lock System" to the front.
2. Plug in the appliance.
3. Set the ON / OFF switch to position I. (B)
4. Your appliance will heat up very quickly (ready to use in less than 30 seconds) and the temperature will remain stable throughout use. (Fig. 1)
5. Select the ideal temperature for your hair using the +/- (fig. 2) buttons; press the - button to reduce the temperature or the + button to increase it. The red light indicates the selected temperature.
6. After use: Place ON/OFF (B) switch in the stop position (0), close the clamps, use the "Lock System", unplug the appliance and leave it to cool down completely before putting it away.

4. USE WARNING: Do not place your hands over the evaporation holes.
- Make sure the evaporation holes are not in direct contact with the hands, face, head or hair.
- The ceramic coating on the plates protects your hair against overheating by uniformly spreading the heat.
Use on damp hair:
- To use on clean, towel-dried and combed hair. (fig. 4 et 5)
- Form a small lock a few centimetres in width, comb it and place it between the plates.
- Direct the evaporation holes towards the outside and not towards the head. (fig. 6)
- Hold the hair firmly between the plates and slide the appliance slowly from the roots to the tip of the hair. (fig. 7)
- During operation, do not worry if you hear a slight crackling or if you see steam, it is only the excess water evaporating off your hair.

Use on dry hair:
- Hair must be untangled, clean and dry. (fig. 5)
- Form a small lock a few centimetres in width, comb it and place it between the plates.
- Do not use the appliance on synthetic hair (wigs, extensions, etc.).
- Hold the hair firmly between the plates and slide the appliance slowly from the roots to the tip of the hair.
- Wait for the smoothed hair to cool down before styling.
HAIRDRESSER'S TIPS
- Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.
- To avoid streaks along the lengths, work using a smooth and uninterrupted movement.
- To highlight, apply hair setting lotion before smoothing.
5. MAINTENANCE CAUTION! Always unplug your appliance and allow it to cool before cleaning it.
- To clean the appliance, unplug it and then wipe with a damp cloth and with a dry cloth.
6. ENVIRONMENT PROTECTION FIRST!
- Your appliance contains valuable materials which can be recovered or recycled.
- Leave it at a local civic waste collection point.

1. Lock System (Fig 3): To open the clamps, pull the Lock System back. To lock the clamps: close the clamps and push the "Lock System" to the front.
2. Plug in the appliance.
3. Set the ON / OFF switch to position I. (B)
4. Your appliance will heat up very quickly (ready to use in less than 30 seconds) and the temperature will remain stable throughout use. (Fig. 1)
5. Select the ideal temperature for your hair using the +/- (fig. 2) buttons; press the - button to reduce the temperature or the + button to increase it. The red light indicates the selected temperature.
6. After use: Place ON/OFF (B) switch in the stop position (0), close the clamps, use the "Lock System", unplug the appliance and leave it to cool down completely before putting it away.

