

Lire attentivement le mode d'emploi ainsi que les consignes de sécurité avant toute utilisation.

**GENERAL DESCRIPTION**

- A. Tong
- B. ON/OFF switch
- C. Cleaning plates with Ultrashine Nano Ceramic coating
- D. STRAIGHT OPTIMIZER system
- E. Pre-Curling System
- F. LCD display
- G. Control panel to reduce/increase temperature and lock temperature selected
- H. IONIC system
- I. Lock System (locks and releases pinces)
- J. Power cord
- K. Power lead
- L. Storage pouch

**2. SAFETY INSTRUCTIONS**

- For your safety, this appliance complies with the applicable standards and regulations (Low Voltage Directive, Electromagnetic Compatibility, Environmental...).
- The electrical accessories become very hot during operation. Avoid contact with the hot parts of the appliance.
- Make sure that the supply cord never comes into contact with the hot parts of the appliance.
- Check that the voltage of your electricity supply matches the voltage of your appliance. Any error when connecting the appliance can cause irreparable damage, not covered by the guarantee.

- For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask for installer for advice.
- The installation of the appliance and its use must however comply with the standards in force in your country.

**WARNING:**

- do not use this appliance near bathtubs, showers, basins or other vessels containing water.

- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.

**Water**

- When using the appliance in the bathroom, unplug it after use as the presence of water nearby may pose a danger even when the appliance is turned off.

- This appliance is supplied with a heat-sensitive safety device. In the event of over-heating, the heating element will cut off (the grill is blocked), the dryer will stop automatically; contact the After-Sales Service.

- The appliance must be unplugged:

- before cleaning and maintenance procedures;
- when not in use;
- as soon as you have finished using it;

**Temperature**

- If the supply cord is damaged, it must be replaced by the manufacturer, its service station or similar qualified persons in order to avoid a hazard.

**Storage**

- Store your appliance and contact an Authorised Service Centre if:

- the appliance has fallen;

- the cable or plug is damaged;

- the appliance does not work correctly;

- the appliance has been dropped;

- the appliance has been damaged;

- the plug or cable is damaged;

- the appliance has been damaged;

- the plug or cable is damaged;</

