 
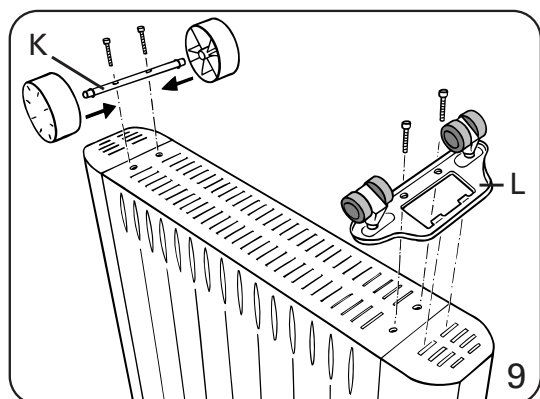 
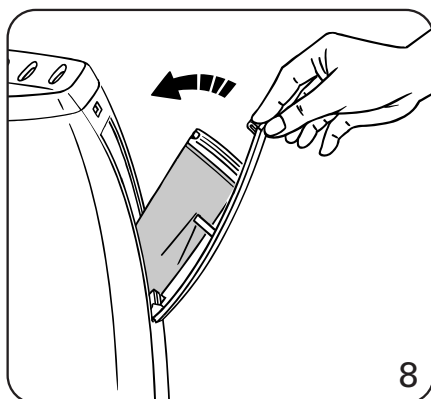 
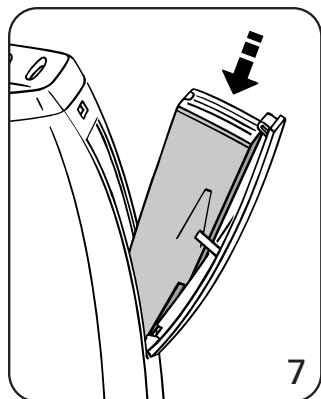 
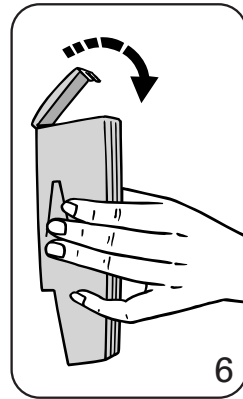 
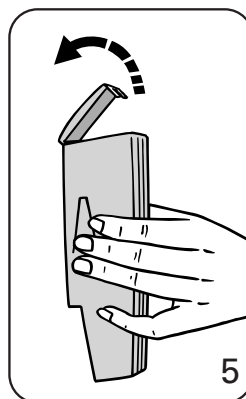 
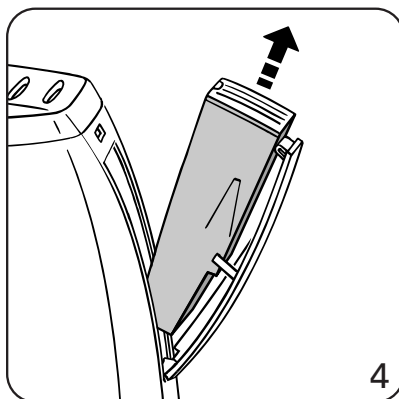 
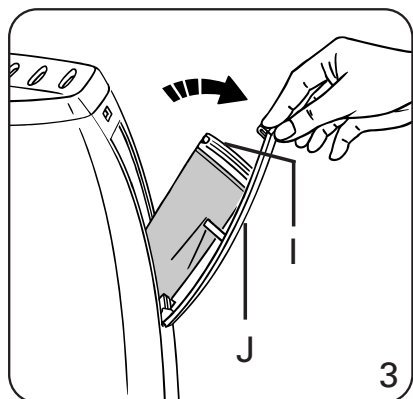 
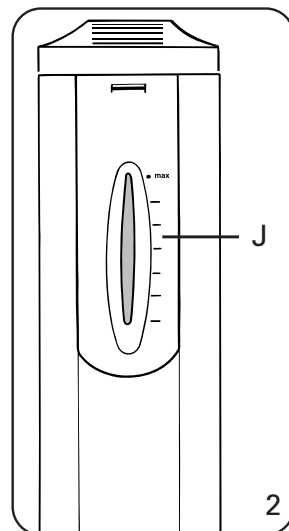 
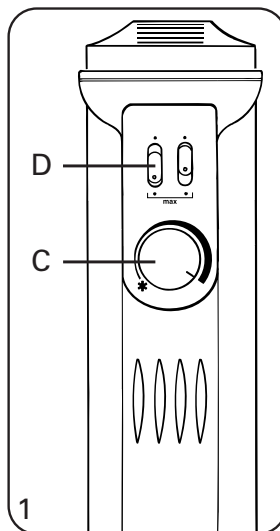 


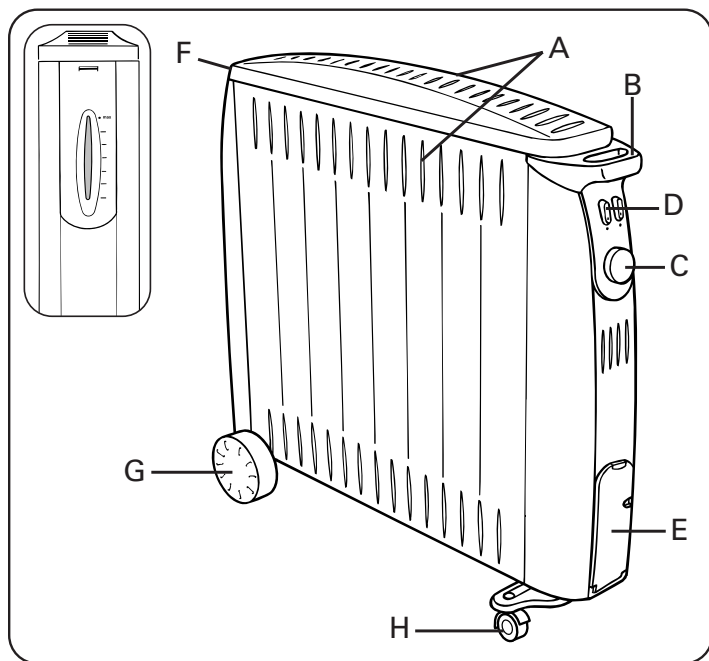

English

READ CAREFULLY BEFORE USING AND THEN KEEP IN A SAFE PLACE.

You have just purchased an oil heater, ideal for quickly heating the different rooms in your house.

This highly compact appliance can be easily stored or moved around from one room to another for your comfort.

- A - Air outlet vents
- B - Handle
- C - Thermostat dial
- D - Adjustment switches
- E - Cord storage compartment
- F - Air humidifier

- G - Stabilizing rear wheels
- H - Castor front wheels
- I - Tank
- J - Flap with level indicator
- K - Axle
- L - Plate

WARNINGS

It is essential that you read these instructions carefully and comply with the following recommendations.

- This appliance complies with European directives 73/23/EEC and 89/336/EEC.
- Before using, always check the condition of the appliance, the power socket and the power cord.
- Do not pull on the power cord or the appliance, even to unplug it from the wall socket.
- Fully unwind the cord each time before use.
- Do not place the appliance immediately below a power socket.
- Never insert objects into the appliance (e.g. needles...).
- When in use, this appliance must be kept out of the reach of young children, animals and certain handicapped people.
- Do not use your appliance in a dusty room or a room where there is a risk of fire.
- This product has been designed for domestic use only. Any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and the guarantee will not apply.
- If the power cord is damaged, it must be replaced by the manufacturer, its after-sales service or a person with similar qualifications to avoid any danger.
- Furthermore :
 - the heater is filled with a quantity of special oil which is precisely calculated to match its dimensions. Repairs requiring the body of the heater to be opened must therefore be carried out exclusively by the manufacturer or its After-Sales Service (the same applies if oil has been lost from the heater.)
 - You must comply with the regulations concerning disposal of the oil when the heating appliance is scrapped.

VERY IMPORTANT :

- **NEVER COVER THE APPLIANCE, even temporarily, as there is a danger of overheating.**
- **Keep the appliance 50 cm away from any objects (curtains, walls, aerosols, etc.)**
- **NEVER USE IT TILTED OR LYING ON ITS SIDE.**
- **This appliance must not be used in damp places.**
- **Do not use this appliance near a bath, shower, sink or swimming pool.**
- **NEVER ALLOW WATER TO PENETRATE THE APPLIANCE.**
- **Do not touch the appliance with wet hands.**
- **In the event of a long absence : set the switches to the initial position I and unplug the appliance.**

1 - VOLTAGE

- Before using the appliance for the first time, ensure that your mains voltage corresponds to the voltage indicated on the appliance.
- Your appliance must be used with a power plug with an earth connection. It is a class 1 appliance.

2 - SAFETY

- For your safety, an additional internal thermostat regulates automatically the casing temperature. If necessary, it will switch off the appliance for a short time. When this happens you will notice the indicator lights on the switches will go out. The heater will automatically switch itself back on again. This safety device will also operate if the air outlet and inlet vents are obstructed.
- If the appliance is tilted, a safety system automatically cuts off the power. Return the appliance to a vertical position and it will start operating again.

This product is manufactured in China.

3 - FASTENING OF THE WHEELS

- Fitting of the front wheels :
 - Fix the plate (L) to the heater on the side containing the controls by inserting the attachment tabs into the slots in the lower grille of the heater and then lock with 2 screws (fig. 9).
- Fitting of the rear wheels :
 - Assemble the two large wheels (G) on the axle (K) and press until you hear a click.
 - Fix the heater axle on the humidifier side using the 2 otherscrews.
 - Turn the heater over so that it is standing on its wheels.

4 - OPERATION

Starting up the appliance and choosing the operating mode:

• Power selection :

Mod. : OR 260

One ● Switch pressed and indicator light on → power 600 W.

One ● Switch pressed and indicator light on → power 900 W.

Both ● Switches pressed and both indicator lights on → power 1500 W.

Mod. : OR 270

One ● Switch pressed and indicator light on → power 800 W.

One ● Switch pressed and indicator light on → power 1200 W.

Both ● Switches pressed and both indicator lights on → power 2000 W.

• Thermostat :

Adjust the temperature setting, according to your own comfort, by turning the dial (C) (fig. 1) :



• Frost-free setting : *

This setting enables you to automatically maintain the temperature above 0°C in a normally insulated room, whose volume corresponds to the power of your appliance.

To do so, plug in your appliance, turn the dial (C) so that the marker is opposite the “ ” symbol and press either of the power selection switches (D; indicator light on).

• Humidifier:

There is a humidifier (fig. 3-8) located in the rear part of the radiator to maintain a balanced level of humidity in the air. To top up or change the water in the tank, tilt the flap, remove the tank/flap assembly and slide the flap off the tank. Then open the tank cover and fill with water up to the maximum level indicated on the flap.

Close the cover and replace the assembly.

Caution : this tank should only contain water so it is prohibited to add perfume, petrol, etc.

Risk of burns when handling the tank because the water in it may be hot.

5 - CLEANING

- Your appliance must be unplugged before proceeding with any cleaning work.
- You can clean it with a slightly damp cloth.
- **IMPORTANT:** Never use abrasive products which might damage the appearance of your appliance.
- We recommend that you clean the air inlet and outlet grilles at least once a year; (clean with a vacuum cleaner if necessary).

6 - STORAGE

- Your appliance is equipped with a cord storage space located at the bottom of the appliance on the side with the controls.
- It is important to allow the appliance to cool before winding the cord.
- When you are not using your appliance, store it in a dry place.

7 - IN THE EVENT OF PROBLEMS

- Never dismantle your appliance yourself. A poorly repaired appliance may be dangerous for the user.
- Before contacting one of our Approved Service Centres (see enclosed list), ensure that:
 - the appliance is set to normal operating mode;
 - the air inlet and outlet grilles are totally clear.

8 - ENVIRONMENT PROTECTION FIRST!

Your appliance contains valuable materials which can be recovered or recycled.

Leave it at a local civic waste collection point.



If you have any problems or queries please call our Customer Relations Team for expert help and advice:

HELPLINE:

0845 602 1454 - UK

(01) 4751947 - Ireland

Or consult our web site: www.rowenta.co.uk

(if this is a Rowenta product).

中文

- A. 空氣出口
- B. 手柄
- C. 溫度調節器旋鈕
- D. 調節開關
- E. 電線貯存格
- F. 空氣放濕器
- G. 後穩定腳輪
- H. 前小腳輪
- I. 貯水箱
- J. 加濕器外蓋連水位指示
- K. 輪軸
- L. 腳輪固定座

注意事項

請仔細閱讀並遵循以下各項建議：

- 本電器符合歐盟 73/23/CEE 和 89/336/CEE 訂下之規定。
- 每次使用前請檢查一下電暖爐、電源線和電源插座。
- 不要拉拽電源電線和儀器，即使是想把插頭從牆上插座中拔出時。
- 在使用前，把電線全部放開。
- 不要把儀器正好安裝在插座上面。
- 電暖爐不應放置在電源插座下。
- 注意別讓任何物品（譬如針等）掉入電暖爐內。
- 開啟電暖爐後，注意別讓幼兒、家養寵物或殘疾人士碰觸到電暖爐。
- 注意別在灰塵很大或容易引起火警的地方使用本電器。
- 本電器設計只適合家居使用。任何工商業使用、使用不當或不依照說明書操作所造成的損壞，製造商不會負上任何責任及不屬於保養範圍。
- 如電源線損壞，只有製造商或它的售後服務部才可更換，以免發生危險。
- 此外
- 放熱器裝有一種特殊的油，所裝油量是根據放熱器本身大小決定。凡是要打開放熱器的維修，只有製造商或者製造商的售後服務部才能進行。（這一點同樣適用於當放熱器漏油時）。
- 當放熱器報廢時，必須遵守其內部剩餘油的棄置規定。

重要注意事項：

- 切勿在電暖爐上置放任何東西，以致造成電暖爐過熱，即使臨時置放亦應避免。
- 儀器應該同所有的東西保持 50 厘米的距離（如窗簾、牆壁、氣溶膠等）。
- 使用時切勿傾側或臥倒本電暖爐。
- 此儀器不能用在潮濕的住所。
- 不要在靠近浴缸、淋浴器、盥洗室、游泳池等處用此儀器。
- 切勿讓水流進電暖爐內。
- 不要用潮濕的手碰儀器。
- 長期不在時：請將所有的開關撥回●位置，然後切斷儀器的電源。

1 - 電壓

首次使用本電暖爐前，應確定您家居使用的電源電壓須與標明在本電暖爐底部的電壓相符。
您的放熱器必須使用帶有地線的插座。

2 - 安全

溫控安全裝置：

- 當儀器不正常發熱時，有一個安全裝置會關閉儀器，然後等儀器降溫後再自動將其啟動。
- 儀器翻倒時，一個安全系統會自動關閉儀器。請重新豎立儀器，它便可以重新運轉。

請在使用前認真地看懂說明書，並且將說明書保存好。

您剛買了一部充油式暖爐，它能迅速地使您家裏不同的房間變得暖和。

本電器體積輕巧，安裝容易，而且能方便地從一間房間搬移至另一間房間，取得最大的舒適效果。

3 - 輪子的固定

■ 前輪的安裝：

- 將固定座架插入放熱器內柵縫中便可把前輪盤（H）固定在放熱器操縱鈕那邊，然後用兩個螺絲扭緊。（見圖 10）

■ 後輪的安裝：

- 把兩個大輪裝到 K 軸上，然後按動直到聽到固定住的喀喀聲；
- 用另外兩個螺絲來固定放熱器軸—潤濕器那邊；
- 翻轉放熱器，使其立在本身的輪子上。

4 - 使用

開啟電暖爐，選擇功能：

■ 功率選擇：mod. OR 260

- 一個開關 ● 撥動及其點亮的指示燈 → 600 W 功率。
- 一個開關 ● 撥動及其點亮的指示燈 → 900 W 功率。
- 二個開關 ●● 撥動及其二個點亮的指示燈 → 1500 W 功率。

mod. OR 270

- 一個開關 ● 撥動及其點亮的指示燈 → 800 W 功率。
- 一個開關 ● 撥動及其點亮的指示燈 → 1200 W 功率。
- 二個開關 ●● 撥動及其二個點亮的指示燈 → 2000 W 功率。

■ 溫度調節器：

用戶可根據本人的舒適感覺，通過旋鈕（C）（圖示 1）來調節溫度：



■ 防霜設定 *

在一個正常隔離而其體積同您的電器功率對應的房間，這個設定可以保持電器溫度在攝氏零度以上。要得到這個位置，請把您的儀器接通電源，轉動按鈕 C 直到標志對準該位置記號“*”，然後撥動功率選擇開關（D：指示燈亮）。

■ 放濕器：

在電暖爐的後面有一個放濕器，以便保持均衡程度的空氣濕度。水箱加水或換水時，將外蓋傾斜打開，拿出水箱。打開水箱蓋，加水直到最高水位指示。關上水箱蓋及把水箱放回原處。

注意：這個水箱只能裝入水，禁止加入香水、汽油等。
手直接拿水箱時，有被燙的危險，因為水箱的剩餘水可能會很熱。

5 - 清理保養

- 在一切清理保養之前，應先拔去電源插頭。
- 用微濕的布擦淨電暖爐。
- 重要事項：為避免損壞電器表面，切勿使用磨損性過強的清潔用品。
- 用戶每年至少清洗一次進風口護柵和吹風口護柵（必要時可用吸塵機吸去灰塵）。

6 - 儲藏和搬運

- 您的儀器操縱盤下面有一個空間，是用來放置電線的。
- 必須等電暖爐完全冷卻後才能收攏電線。
- 不使用時，電暖爐須存放在乾燥的地方。

7 - 遇到故障時

- 切勿擅自拆散電暖爐。胡亂修理的電器會對使用者造成危險。在與本廠指定的維修站聯絡之前（請閱所附的指定維修站名單），請用戶先檢查一下：
- 電暖爐是否調在正常的運行檔位上；
- 進風口護柵和吹風口護柵有否堵塞。