

Tefal®

Cook4me+ connect

The one-pot digital cooker
that guides you to fast & fresh meals



SAFETY INSTRUCTIONS

- Read these instructions for use carefully before using your appliance for the first time. Any use which does not conform to these instructions will absolve the manufacturer from any liability and invalidate the guarantee.
- Check that your power supply voltage corresponds to that shown on the appliance (alternating current only). Any error in plugging in your appliance may cause irreversible damage and invalidate the guarantee.
- Indoor use only.
- For cleaning your appliance, please refer to instructions for use. You can wash the cooking bowl and steam basket in soapy hot water or in the dishwasher. Clean the body of the appliance using a damp cloth.
- Do not immerse the appliance in water or any other liquid.
- Take the time to read all the following instructions carefully.
- Improper use of the appliance and its accessories may damage the appliance and cause injury.
- Do not touch hot parts of the appliance. After use, the heating element surface is subject to residual heat after use.
- For your safety, this appliance conforms to all applicable standards and regulations (Low Voltage Directive, Electromagnetic Compatibility, Food Compliant Materials, Environment, ...).
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. Do not replace the power cord supplied with other cords.
- This appliance is intended for domestic household use only. It is not intended to be used in the following applications, and the guarantee will not apply for:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Children shall not play with the appliance.
- Place the appliance on a flat stable, heatproof work surface, away from any water splashes or any sources of heat.
- Never place or use the appliance close to a wall or below a wall cupboard as the steam produced by the appliance can cause damage.
- Do not place your appliance near a heat source in operation (hob, household appliance, etc.).
- Do not fill your appliance to more than the MAX mark on the bowl. Do not fill it more than half full for food that expands during cooking, such as rice, dried vegetables. Reduce the volume of water to avoid the risk of boiling over.
- When in operation, never leave the appliance unattended.
- Please follow the recommendations on the volume of food and water to avoid the risk of boiling over which can damage your appliance and cause injury.

- Before using your appliance, check that the manometric rod and the safety valve are clean (see section Cleaning and maintenance).
- Do not place any foreign objects in the pressure release system. Do not replace any of the safety device yourself.
- When you open the lid, first unlock it by holding the lid open/close handle. Then position your arms in alignment with the side carrying handles, hold each side lid handle with your hands and raise the lid.
- Be careful also about the risk of scalding from the steam coming out of the appliance when you open the lid. First open the lid very slightly to allow the steam to escape gently.
- Never force the appliance open. Make sure that the inside pressure has returned to normal. Do not open the lid when the appliance is under pressure. To do so, see pages 46-47 “Problem & Solutions” section “The lid does not open once the steam is released”.
- Use only the appropriate spare parts for your model. This is particularly important for the sealing gasket, the cooking bowl and its safety devices.
- Do not damage the sealing gasket. If it is damaged, have it replaced in an Approved Service Centre.
- The heat source necessary for cooking is included in the appliance.
- Do not place the appliance in a heated oven or on a hot hob. Do not place the appliance close to an open flame or a flammable object.
- Do not heat the cooking bowl with any other heat source than the heating plate of the appliance and do not use any other bowl. Do not use the cooking bowl with other appliances.
- Move the appliance with great care when it is under pressure. Do not touch the hot surfaces. Use the carrying handles when moving it and wear oven gloves, if necessary. Do not use the lid handle to lift the appliance.

- Do not use the appliance for other than the intended purpose.
- This appliance is not a steriliser. Do not use it to sterilise jars.
- The appliance cooks food under pressure. Incorrect use may cause risks of burns due to steam.
- Make sure that the appliance is properly closed before bringing it up to pressure (see Instructions for use).
- Do not use the appliance empty, without its bowl or without liquid inside the bowl if using a mode cooking under pressure. This could cause serious damage to the appliance.
- After cooking meat which has an outer layer of skin (such as ox tongue), which could swell due to the effects of pressure, do not pierce the skin after cooking if it appears swollen: you could get burnt. Pierce it **before** cooking.
- When cooking food with a thick texture (chick peas, rhubarb, compotes, etc.), shake the appliance slightly before opening it to ensure that the food or cooking juices do not spurt out.
- Do not use the appliance to deep fry food in oil. Only browning is allowed.
- When browning food using the classic cooking mode, be careful of risks of burns caused by spattering when you add food or ingredients into the hot bowl.
- During cooking and automatic steam release at the end of cooking, the appliance releases heat and steam. Keep your face and hands away from the appliance to avoid scalding. Do not touch the lid during cooking.
- Do not use a cloth or anything else between the lid and the housing to leave the lid ajar. This can permanently damage the gasket.
- Do not touch the safety devices, except while cleaning and maintaining the appliance in accordance with the instructions given.
- Make sure that the bottom of the cooking bowl and the heating element are always clean. Make sure that the central part of the heating plate is mobile.
- **Do not fill up the interior body of your appliance without its cooking bowl.**

- Use a plastic or wooden spoon to prevent any damage to the non-stick coating of the bowl. Do not cut food directly in the cooking bowl.
 - If a great deal of steam is released from the rim of the lid, unplug the power cord at once and check whether the safety devices are clean. If necessary, send the appliance to an Approved Service Centre for repair.
 - Do not carry the appliance by holding it by the handles of the removable bowl. Always use the two side handles on the housing of the appliance. Wear oven gloves if the appliance is hot. For more safety, make sure that the lid is locked before transporting the appliance.
 - If pressure is released continuously through the valve of the appliance (for more than 1 minute) while pressure cooking, send the appliance to a Approved Service Centre for repair.
 - When in operation, never leave the appliance unattended.
 - Do not use a damaged appliance. Take it to your Approved Service Centre.
 - The guarantee does not cover the abnormal wear and tear of the cooking bowl.
 - In accordance with current regulations, before disposing of an appliance no longer needed, the appliance must be rendered inoperative (by unplugging it and cutting off the supply cord).
 - Use only spare parts sold in an Approved Service Centre.
- SAVE THESE INSTRUCTIONS CAREFULLY.**



Environment protection first!

- ① Your appliance contains valuable materials which can be recovered or recycled.
- ➡ Leave it at a local civic waste collection point.

CONTENTS

P. 9-11	INGREDIENTS & RECIPES PROGRAMS
P. 12-13	BEFORE USE
P. 14-15	OPERATION AND USE
P. 16-17	SETTINGS MENU
P. 18	ON/OFF MENU
P. 19-21	 CONNECTION
P. 22-27	PRESSURE COOKING/ CLASSIC COOKING (gentle cooking/simmer/brown)/ REHEATING/ KEEP WARM/ DELAYED START
P. 28-29	INGREDIENTS MENU
P. 30-33	COOKING GUIDE
P. 34-35	RECIPES MENU
P. 36-37	LIBRARY MENU
P. 38-39	GOLDEN RULES OF COOKING
P. 40-43	CLEANING MAINTENANCE
P. 44-45	SAFETY FEATURES
P. 46-47	TROUBLESHOOTING

SERIE EPC09-A

Low pressure 40kPa/5.8psi (109°C) / High pressure: 70kPa/10.2psi (115°C)

Product capacity: 6L / Useful capacity: 4L

Frequency: 2.40 GHz. Maximum transmitted power: 7.7 dBm

Built-in heating

The operational pressure is achieved 10 minutes after the beep.



Lid open / close handle



Silencing pressure valve



Main operation button



Open / closed marker



Return button



Control panel



Blue light indicates that the Bluetooth connection is activated



Cooking bowl



INGREDIENTS



meat & chicken

Beef
Chicken
Lamb
Pork



fish & shellfish

Cod
Fish
King prawns (raw)
Mussels
Scallops



rice & cereals

Brown rice - Basmati
Bulgur wheat
Quinoa
White rice - Basmati
White rice - Long grain



fruits & vegetables

Apples
Asparagus
Aubergines
Beetroot
Broccoli (florets)
Brussels sprouts
Butternut squash
Cabbage (green)
Cabbage (red)
Carrots
Cauliflower (florets)
Celery
Courgettes
Green beans (whole)
Green lentils
Leeks
Mushrooms
Parsnips
Pears
Peas (frozen)
Peppers (any colour)
Potatoes (new)
Potatoes (old)
Runner beans
Spinach
Swede
Sweet potatoes
Turnips

RECIPE LIST



starter

Asian pork meatballs
Aubergine dip
Broccoli with almonds
Cauliflower Soup
Celery and stilton soup
Chickpeas and mushrooms
Dahl
Houmous
Indian One Pot Pasta
Indian style cauliflower
Italian vegetable soup
Lebanese cracked wheat salad
Lentil and smoked bacon soup
Mackerel rillettes

Miso soup
Mushroom and ham gnocchi
Onion Soup
Poached egg tomato mozzarella
Prawn coriander bisque
Pumpkin soup
Quinoa salad with orange
Ratatouille
Rice and prawn salad
Salmon turmeric terrine
Store cupboard risotto
Tomato and lemon grass soup
Vegetable curry
Vegetable mozzarella tian



main

Bacon and leek risotto
Beef and ale casserole
Beef and cheddar potatoes
Beef Bolognese Chef Style
Beef madras curry
Beef tacos
Beef tournedo & red wine sauce
Biryani rice
Bolognese Chef Style
Butternut squash risotto
Cantonese rice
Chicken and cheese pasta
Chicken drumsticks and chickpeas

Chicken paella
Chicken tikka masala
Chicken with lime and coconut
Chicken, green beans and nuts
Chilli con carne
Cod and asparagus tajine
Cod loin in prawn sauce
Coq au Vin
Cottage pie
Curried prawns with peas
Curried rice, chickpeas & tofu
Farmers chicken
Gammon joint
Green thai chicken curry
Korma chicken wings

Lamb rogan josh curry
Lamb with tomatoes
Meatballs in tomato sauce
Mince turkey with mustard
Mushroom & spinach risotto
Mussels in white wine
Mustard pot roast beef
One pot pasta pizza style
Pesto chicken risotto
Pork spare ribs
Pork with chilli and cashews
Pot roast cider chicken
Quinoa and feta salad
Quinoa and Vegetables
Saffron gnocchi



main


Sausage and bean stew
Spring lamb stew
Steamed sweet chilli salmon
Stuffed courgettes
Tandoori spiced chicken
Thai spicy pork and green beans
Thai chicken with rice
Tuna and tomato tagliatelle
Tuna puttanesca
Veggie burger
Vietnamese curried pork



dessert

Banana sesame seed envelopes
Bread and butter pudding
Cabinet pudding
Cherries poached in orange
Chocolate croissant pudding
Cream and apple pudding
Creme brulee
Ginger and coconut pudding
Gingerbread pudding
Jam sponge puddings
Madeleines with lemon syrup
Malaysian pudding
Molten chocolate puddings
Panna cotta with strawberries
Pears in red wine
Pineapple with vanilla syrup
Traditional cheesecake
White chocolate cream

BEFORE USE

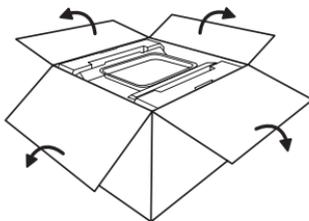

Remove the appliance from its packaging and read the instructions carefully before using the appliance for the first time.



To open the appliance, turn the open/ close handle on top of the lid, until the open padlock is shown: 



Install the appliance on a flat dry surface that is not hot. Remove all the packaging, stickers or different accessories inside and outside the appliance.



CLEAN THE DIFFERENT COMPONENTS

- 1 Cooking bowl
- 2 Metal plate with non-removeable seal
- 3 Valve cover
- 4 Condensation collector
- 5 Steam basket
- 6 Decompression ball

BEFORE
USE

HOW TO DISMANTLE AND REASSEMBLE THE METAL PLATE



HOW TO REMOVE THE METAL PLATE:

Grip the metal plate holding it by the seal, and unscrew the central nut in an anti-clockwise direction. Remove the nut and keep it in a safe place. Press the spring loaded screw spindle to release the metal plate. Remove the metal plate.



HOW TO TAKE THE VALVE COVER OFF:

Hold the valve cover by its middle part (as shown); Then turn it slightly to unclip it. Clean the valve cover, paying special attention to the inside (check that there is no left over food).



ACCESSING THE DECOMPRESSION BALL:

When the lid is completely cool, turn the ball cover, anti-clockwise, so as to bring the **I** marker into position . Lift off the cover. Remove the ball, and gently clean it, along with its cover, with water and some washing-up liquid. Dry the ball using a soft cloth, then put it back in position. Put the ball cover back in place, and the marker **I** in position . Lock it by turning the ball cover so that the marker is opposite the pictogram "closed" .



PUTTING THE METAL PLATE BACK IN PLACE:

Grip the metal plate by the seal as shown in the picture. Line up the metal plate with the central screw spindle and press it flat against the underside of the lid. Put the nut back on with the flat side facing the metal plate and turn it clockwise, tightening it as far as it will go.



PUTTING THE VALVE COVER BACK:


Take the valve cover as shown in the picture (gripping the middle). Line up the interior circular shape with the three hooks and then push so that the valve cover clips on (you should hear a "click" sound). The valve cover must be close up against the inside of the lid.

Note: The metal decompression ball may still be hot even when the lid has cooled.

The notches on the rotating inner part of the lid must be correctly aligned with the notches on the rim of the bowl otherwise the lid will not lock when closed.



OPERATION

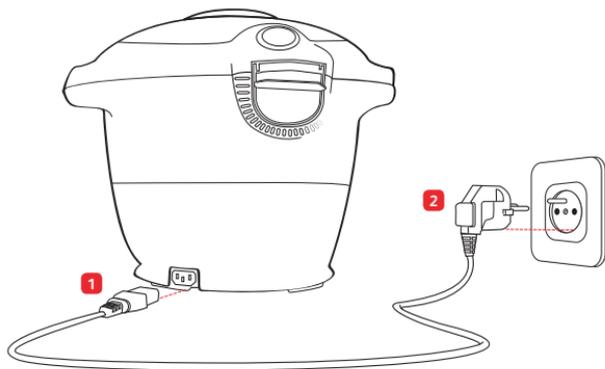

When turning on for the first time, you will first see the settings menu:



COUNTRY



Select your country



LANGUAGE



Select your language



INTERFACE CONTROLS



SELECT



CONFIRM



BACK



RESTART

3 secs



USE

Never use the appliance without the cooking bowl.



OPEN THE LID:

To open the appliance, turn the open/close handle so that the open padlock is showing. Never try to force the lid to open if it is stuck. 



INSTALLING THE CONDENSATION COLLECTOR:

Check that the condensation collector is empty then install it behind the appliance.



When using your appliance for the first time, the bowl can release a slight odour. This is normal.

When cooking under pressure it is normal for the Cook4me © connect to vent steam during cooking.

After each use check the safety valve and manometric rod move freely and clean if necessary as instructed on page 42.

INSTALLING THE STAND UNDER THE STEAM BASKET:

Pinch the stand between your thumb and index finger to install it under the steam basket as shown.



POSITIONING THE BOWL IN THE APPLIANCE:

Wipe the bottom of the cooking bowl. Make sure there are no food remains or liquid under the bowl or on the heating plate.



Then install the bowl in the appliance by positioning the bowl handles into the slots.



SETTINGS MENU



Select "language/country"



Select your language



Select your country



Select "delete libraries"




Select "libraries"



Select "library 2"

N.B.: even if the sound is deactivated, the alert sounds remain active.

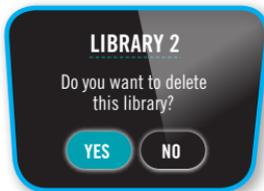

Do you want to delete this library?



Select "recipes"




Select "recipe 2"



Do you want to delete this recipe?




Select "screen/sounds"

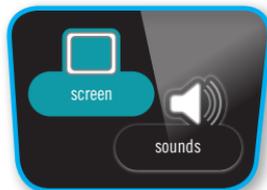

Select "screen"




Select "brightness"

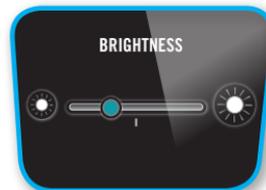


Adjust the light




Select "demo mode"

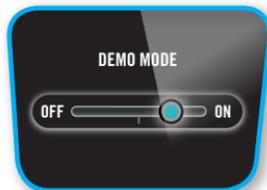


To activate or deactivate the demo mode,
please enter the code: 3424

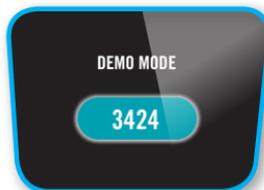

N.B.: DEMO mode allows you to operate the appliance without heating or pressurising it.

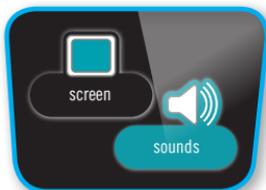

Select "sounds"

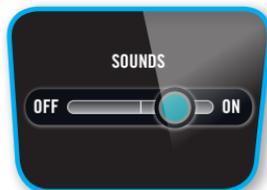

Adjust the volume



Select "Connect"



Activate or deactivate the connect mode (Bluetooth, BLE)



ON/OFF MENU



Select and confirm



Selecting Yes or No will allow you to switch the appliance on and off.






CONNECTION



Download the **My Cook4me** app
(on the App Store and on Google Play)
via your tablet or mobile.

Your **Cook4me**  **connect** is operational, you can now use your appliance with the **100 pre-programmed recipes** even without the app.

When you turn on your **Cook4me**  **connect**, the blue light will start flashing (awaiting connection), unless you manually deactivate the connect function (See 'Settings' chapter).

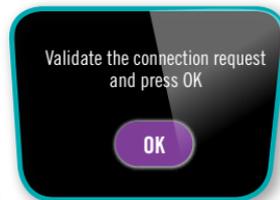


When you use the appliance for the first time, pair your product to your tablet or mobile by following the instructions on screen.



If the connection is successful, the light will stay blue.




CONNECTION

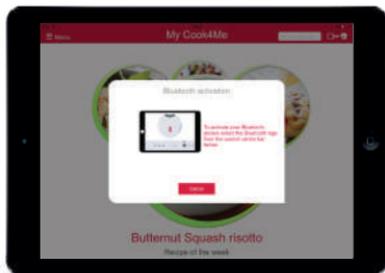

Connection problem:

If the connection failed, you will see an error message. Follow the instructions on your screens to establish a new connection.

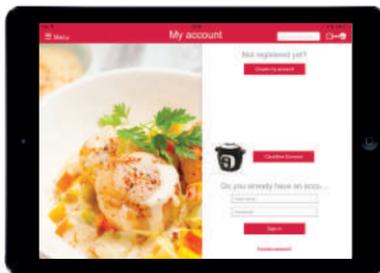

Creating an account:

Follow the instructions on the app.



Search bar:




Type the key words in the search bar and access the search filter.

N.B.: only one connection possible at any time.

N.B.: if you don't use your Cook4me © connect for 30 minutes, it will switch to stand-by mode and the connection will be lost. When exiting stand-by mode, it will automatically re-connect.



CONNECTION

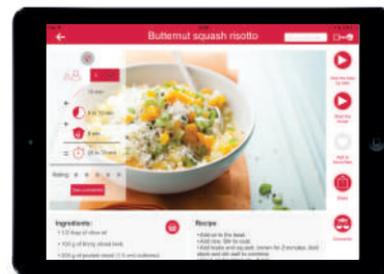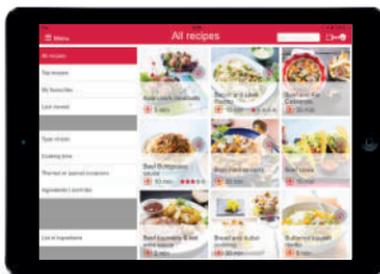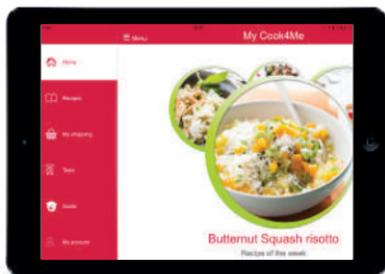

Browsing:

You can also browse via the app by accessing the Menu:

- welcome
- recipes
- my shopping
- tools
- guide
- my account



Recipes in your Cook4me 



Favourites



Library

From the app, you can either:

- view the step by step
- launch the recipe step by step in interaction with your **Cook4me **

No information about the cooking time can be provided if there is no connection.

You will always have a direct access to the 100 programmed recipes and ingredients. The cooking continues even if you do not have connection.

N.B.: you can start the cooking from your Cook4me  connect by pressing the OK button (as instructed on the app).

NB: Ensure that you never leave the appliance unattended whilst in operation.



MANUAL MENU

COOKING MODE

PRESSURE COOKING

MANUAL MENU:

With the manual menu, you set the cooking yourself. Select the cooking mode: **pressure cooking, classic cooking (gentle cooking, simmer, brown), reheat or keep warm**, as well as the cooking time.



Select the "manual" menu



Select "pressure cooking" mode



WARNING

Insert the bowl then add the ingredients



Set the cooking time



Select immediate or delayed start (p.27)



WARNING

Close and lock the lid





MANUAL MENU

COOKING MODE

PRESSURE COOKING



The preheating time will vary between 3-10 minutes depending on the quantity of food, the quantity of liquid and whether the food is fresh or frozen



Cooking has started (the cooking time counts up)



Cooking has finished



It's ready to eat! The appliance automatically goes to keep warm mode



Note: 4 litre max and 200 ml min capacity for pressure cooking.



Do not touch the hot appliance during cooking.





MANUAL MENU

COOKING MODE

CLASSIC COOKING

With classic cooking mode, you can select:

-  **gentle cooking**
(ie: for melting butter)
-  **simmer**
(ie: for reducing sauces)
-  **brown**

The lid remains open for these types of cooking.

N.B.: The operation is the same, only the temperature is different.



Select the "manual" menu



Select the "classic cooking" function



Select the desired function



Open the lid



Insert the bowl



The appliance is preheating
(This can take up to 5 minutes)



Add the ingredients



To stop classic cooking select ok and then confirm by selecting yes.





MANUAL MENU

COOKING MODE

REHEAT



Select the "manual" menu



Select the "reheat" mode



WARNING

Insert the bowl



WARNING

Close and lock the lid



Reheat has started



Press OK to interrupt



Do you want to stop reheat?
To stop reheating select yes.
Ensure food is piping hot
before serving



Beware of the steam while opening the lid

KEEP WARM 00:02

It's ready to eat!
The appliance automatically
goes to keep warm mode

N.B.: Reheating starts and
the time increases.





MANUAL MENU

COOKING MODE

KEEP WARM



Select the "manual" menu



Select the "keep warm" function



Insert the bowl



The appliance is preheating



The keeping warm function has started



To stop the keep warm function, press the "back" button and select "yes"





MANUAL MENU

COOKING MODE

DELAYED START

The delayed start feature is only possible with the manual menu “pressure cooking” and the ingredients menu “fruits & vegetables” or “Rice & Cereals”.



Do not use delayed start for recipes containing meat, chicken, fish, milk or eggs as these foods can deteriorate if left at room temperature before cooking.



PRESSURE COOKING



Select “delayed start”



PRESSURE COOKING



Select the current time (using the 24 hour clock)



PRESSURE COOKING

08:15



Select the end of cooking



PRESSURE COOKING

08:15

Delayed start is programmed

Note: The delayed start time always includes 15 minutes for the appliance to preheat.



INGREDIENTS MENU

INGREDIENTS MENU:

With the ingredients menu, cook single ingredients without having to program the cooking mode or time: Cook4me \oplus connect provides you with instructions for different weights and types of ingredients: meat, fish, vegetables, fruits and cereals.

The guides on pages 30 to 33 give you advice on how to prepare fruits and vegetables for use with the ingredients menu and suggested cuts of meat.



Select the "ingredients" menu



Select fruits & vegetables




Select the required ingredient



Select the quantity of ingredients



Start the recipe

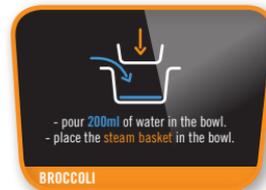

Follow the instructions on screen



Note: The weights displayed on the Cook4me \oplus connect are the prepared weight of the ingredients.



INGREDIENTS MENU



The recommended cooking time is displayed. You can adjust the cooking time to your personal taste by turning the OK button.




Select immediate or delayed start (p.27)



Follow the instructions



The appliance is preheating
Note: depending on the type of ingredient and the quantity the preheating time will take between 3-10 minutes

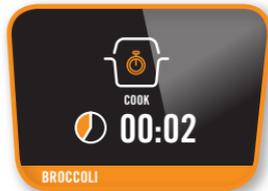

Cooking has started



Cooking has finished



It's ready to eat! The appliance automatically goes to keep warm mode



Note: The delayed start can be used on the Ingredients Menu with the Fruits & Vegetables and Rice & Cereals programs.

COOKING GUIDE FOR RICE AND CEREALS

	Weight (g)	Recommended quantity cold water (ml)
Bulgar Wheat	200 g	300 ml
	300 g	400 ml
	400 g	500 ml
	500 g	600 ml
	600 g	700 ml
Quinoa	200 g	500 ml
	300 g	600 ml
	400 g	750 ml
	500 g	800 ml
	600 g	850 ml
Brown Rice - Basmati*	200 g	350 ml
	300 g	500 ml
	400 g	650 ml
	500 g	725 ml
	600 g	800 ml
White Rice - Basmati & Long Grain*	200 g	300 ml
	300 g	450 ml
	400 g	600 ml
	500 g	675 ml
	600 g	750 ml

*Once at pressure it is normal for the Cook4me © connect to vent short bursts of steam during cooking.
After cooking rice a thin translucent layer may form at the base of the bowl caused by loose starch from the rice.

COOK4ME+ CONNECT MEAT & CHICKEN COOKING GUIDE

The cooking times for meat are approximate and may need adjustment depending on the degree of doneness you prefer. When cooking joints we recommend leaving them to rest covered with foil for 10 minutes before carving.

Ingredient	Type	Suggested cuts of meat/chicken
Beef	Roast	Boneless joints of beef such as topside, top rump, sirloin & mini joints
	Pieces	Casserole steak, braising steak, chuck steak, stewing steak
Chicken	Whole	Unstuffed
	Pieces with bone	Chicken drumsticks, chicken legs, chicken thighs, chicken wings
Lamb	Roast	Boneless joints of leg or shoulder, mini joints
	Pieces	Diced lamb shoulder or leg
	Pieces with bone	Lamb chops, lamb cutlets
Pork	Roast	Boneless joints of leg & shoulder. For loin joints reduce the cooking time slightly
	Pieces	Diced pork shoulder or leg
	Pieces with bone	Pork chops

COOK4ME+ CONNECT FRUIT & VEGETABLES COOKING GUIDE

The cooking times are approximate and may need adjustment depending on personal taste.

Ingredient	Immersion (IM) or steamed in basket (ST)	Preparation	Tips
Apples	ST	wedges	Use a firm texture apple variety such as Braeburn. Bramley variety is not recommended as it froths during cooking. Peel apples & cut into 2.5 cm thick wedges
Asparagus	ST	whole (thin stems 8-10 mm diameter)	Choose fresh, tender stems. Trim to 17 cm lengths to fit steaming basket
	ST	whole (thick stems 12-15 mm diameter)	Choose fresh, tender stems. Trim to 17 cm lengths to fit steaming basket
Aubergines	ST	whole	Choose small aubergines that fit inside steaming basket
	ST	pieces	Cut into 2.5 cm pieces
Beetroot	IM	whole (small or medium size)	Trim off all but 2.5 cm of stalk and root. Wash without breaking the skin. Cook using 1 litre of water. Peel skin after cooking. Serve hot or cold
Broccoli	ST	florets	Cut into small florets of even size
Brussels Sprouts	ST	whole	Adjust cooking time according to size of brussels sprouts.
Butternut Squash	ST	pieces	Cut into 2.5 cm pieces
Cabbage (green)	ST or IM	shredded	Cook sliced cabbage either by steaming in the basket or immersion method using 200 ml water. Use green cabbage, Savoy cabbage and spring greens. For pointed (Sweetheart) cabbage reduce cooking time by about 1 minute
Cabbage (red)	ST or IM	shredded	Cook sliced cabbage either by steaming in the basket or immersion method using 200 ml water.
Carrots	ST	small whole	Choose similar size carrots so that they all cook to the same time, such as Chantenay variety
	ST	slices	Cut into 1 cm slices
Cauliflower	ST	florets	Cut into small florets of even size
Celery	ST	slices	Cut into 5 cm slices

Ingredient	Immersion (IM) or steamed in basket (ST)	Preparation	Tips
Courgettes	ST	whole	Choose courgettes that fit inside the steam basket
	ST	pieces	Cut into 2.5 cm slices
Green beans	ST	whole	For fine green beans reduce cooking time by 1 minute
Green lentils	IM	washed	Rinse well before cooking. Cook 200 g green lentils with 400 ml cold water. Cook 300 g green lentils with 550 ml cold water Cook 400 g green lentils with 650 ml cold water Cook 500 g green lentils with 750 ml cold water
Leeks	ST	slices	Cut into 5 cm slices
Mushrooms	ST	whole	Cut in half or quarters if large
Parsnips	ST	florets	Cut into 2.5 cm pieces
Peas (frozen)	ST		Cook from frozen. Place in steaming basket
Pears	ST	whole	Peel pears and trim bases so they stand upright in the steaming basket. Choose firm, ripe pears such as Comice variety
Peppers (any colour)	ST	whole	Trim off stalk and deseed peppers
Potatoes (new)	ST	whole	The cooking time will vary depending on the variety and size of the potatoes
Potatoes (old)	ST	pieces	Peel potatoes and cut into pieces approximately 40 g. The cooking time will vary depending on the variety of potatoes. The larger the size of the potato pieces the longer cooking time.
Runner beans	ST	sliced	String and slice the beans
Spinach	ST or IM	washed	Cook in steaming basket or by immersion method with 100 ml water
Swede	ST	pieces	Cut into 2.5 cm cubes
Sweet potatoes	ST	whole	Wash and cook unpeeled
	ST	pieces	Cut into 2.5 cm pieces
Turnips	ST	pieces	Cut into 2.5 cm cubes



RECIPES MENU

GREEN THAI CHICKEN CURRY

RECIPES MENU:

With the recipes menu, choose from over 100 savoury or sweet recipes divided into four categories: **starter/ main / dessert/ libraries.**

You can go back to the initial menu by pressing the return button for 3 seconds, or back one step by pressing the return button once.



Select the recipe menu



Select the type of recipe



Select the recipe



Select the number of servings



Show recipe



Prepare the ingredients






Start the recipe



Follow the instructions



Follow the instructions

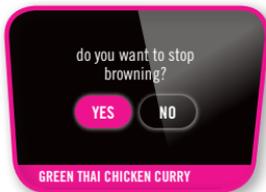

Stop browning



Follow the instructions



Start cooking



Preheating



Cooking time



Cooking has finished



Its ready to eat



LIBRARIES

DOWNLOADING RECIPE PACKS:

When the app is connected to your Cook4me ⊕ Connect, you can download the recipe packs.



Select a pack and press the “Download on Cook4me ⊕ connect” button



Download in progress



N.B.: You can stop the transfer at any time by pressing the return button on Cook4me ⊕ connect.



LIBRARIES

ACCESS THE LIBRARIES:

You can find your downloaded packs. Launch your recipes from your Cook4me \oplus Connect by accessing your library.



Select the
"libraries" sub-menu



Select the desired theme



Select "starter", "main" or
"dessert" and choose
your recipe



GOLDEN RULES OF COOKING WITH YOUR COOK4ME ⊕ CONNECT

- Always use plastic or wooden utensils to avoid damaging the non-stick coating of the cooking bowl. Never cut food in the bowl.

Liquid quantities

- Programs that cook under pressure – pressure cooking, ingredients menu and recipes menu – always require some liquid. See the cooking guides on pages 30-33 for advice on the quantity of liquid to use or follow the instructions on the Cook4me ⊕ connect display screen.
- Always use a liquid that gives off steam when boiled e.g. water, stock, wine, beer, cider, etc. Never use oil or fat. Do not use milk as it can froth up under pressure.
- When steaming foods in the basket always use a minimum of 200 ml of water in the Cook4me ⊕ connect.

Maximum Filling level

- The ingredients plus liquid must not exceed the maximum filling level.
- Some foods such as rice and pulses (e.g. dried beans and dried peas) swell up and tend to froth during cooking and the bowl should not be more than half full with these ingredients and liquid.

Foods which require special care when cooking in Cook4me ⊕ connect

- See the point above about cooking rice & pulses.
- Take care when cooking fruit which froths during pressure cooking, such as stewed apple. Instead steam some fruits, such as apple, in the steaming basket instead.
- Never cook dumplings in the Cook4me ⊕ connect

connect under pressure, as they could rise up and block the safety devices.

Cooking times

- The cooking times programmed into the Cook4me ⊕ connect are only a guide and can be adjusted to your personal taste by manually adjusting the advised cooking time.
- For the programs that cook under pressure – pressure cooking, ingredients menu and recipes menu – the pressure cooking time will vary according to the size of the individual pieces or thickness of the food, not the weight.
- To prevent overcooking with delicate foods such as vegetables, fruit and fish the suggested cooking times may need slight adjustment for your personal taste.
- Cook4me ⊕ connect is not a slow cooker. The “gentle cooking” mode operates using a low temperature (approx 75°C) for gentle cooking such as melting butter.
- The “simmer” mode operates using a temperature of approximately 90°C and can be used for such things as reducing sauces.

Cook4me ⊕ connect Meat & Chicken Cooking Tips

- Choose meat joints of an even shape and thickness to ensure they cook evenly. Boneless joints which are tied into an even cylindrical shape are ideal.
- The maximum recommended weight for meat joints is 1 kg.
- The maximum recommended weight for a whole chicken is 1.5 kg.

- Choose pieces of meat, such as chops, cubed meat for stews, of the same size and thickness to ensure they cook evenly.
- Before browning meat joints dry the outside with kitchen paper towel if it is moist on the outside. This helps reduce spitting during browning.
- Use about ½ – 1 tablespoon sunflower or vegetable oil when browning joints of meat.
- During browning, turn joints or meat using a spatula so it browns on all sides. Take care as hot oil may spit from the bowl. For pieces of meat, e.g. chops, or chicken, e.g. drumsticks, brown in batches, if necessary.
- After browning, take care when adding liquid to the hot bowl as it may spit or give off hot steam.
- Meat or joints with a layer of fat on the outside, such as chops or pork joints, will not turn crisp when cooked in the Cook4me ⊕ connect.

Adapting your own recipes for use in Cook4me ⊕ connect

- For the programs that cook under pressure – pressure cooking and ingredients menu – reduce the liquid quantity when adapting a conventional recipe as there is less evaporation in Cook4me ⊕ connect.
- The cooking time will be shorter than in a conventional oven or on the hob. Find a similar recipe in the Recipe Menu as a guide to the cooking time.
- Recipes are best thickened after cooking using Instant Thickening Granules available in larger supermarkets and are usually sold in the aisle near to cornflour. Just stir the thickening granules into the boiling hot dish or liquid until all the granules dissolve and the liquid thickens.

Alternatively, blend cornflour with a little cold liquid to form a smooth paste (see packet instructions for advice on quantities); stir into the hot dish and then bring to the

boil in a separate saucepan.


- To remove any unpleasant odours left in the Cook4me ⊕ connect after cooking strong foods, such as fish or curry, clean the appliance afterwards including dismantling the metal plate and cleaning all safety parts. Reassemble and leave the lid open for a few hours.

About the recipe program

- The cooking times in the recipes are approximate and may need adjustment to suit your personal taste.
- Eggs used in the recipes are medium size unless stated otherwise.
- All spoon measures are level unless stated otherwise.
- The weight stated in the recipes are for the prepared weight of the food, for example, 100 g sliced carrots is the weight of carrots after peeling and trimming off the top and bottom.
- The recipes have been specifically developed for use in Cook4me ⊕. If the recipes are prepared in an appliance other than this, the results and cooking times may vary.

CLEANING MAINTENANCE

Note: To ensure the correct operation of your Cook4me  connect, follow these cleaning and maintenance instructions after each use.

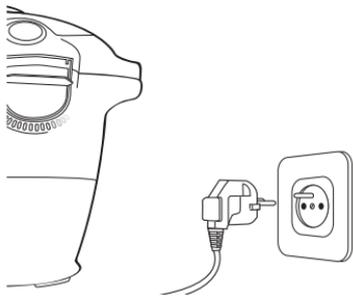

Once you have finished cooking your dish, disconnect the appliance to clean. Clean the appliance after each use.



You can wash the cooking bowl and steam basket in hot water and washing up liquid or in the dishwasher. Clean the body of the appliance using a damp cloth. After several washes in the dishwasher, the exterior of the bowl may become discoloured.

CLEANING MAINTENANCE



After each use, remove the condensation collector and wash carefully in soapy water or in the dishwasher. Take care to dry it well. Return to its original position.



To clean the metal plate, by hand or in the dishwasher, you need to remove the valve cover.

- 1 Unscrew the screw at the centre of the metal plate and keep it in a safe place
- 2 Take off the metal plate
- 3 Remove the valve cover



CLEANING IN THE DISHWASHER:

you can place the metal plate in the dishwasher, without removing the valves. After placing in the dishwasher, remove the decompression ball and blow in the pipe to check that it is not blocked. Dry the ball and its support carefully using a soft cloth.



CLEANING BY HAND:

you can clean the metal plate using washing up liquid and hot water. Firstly, remove the ball then clean completely. Dry the ball and its support using a soft cloth.

CLEANING MAINTENANCE



Do not clean any part of the Cook4me ® connect with abrasive sponges or wire wool.



Before reinstalling the ball, check that the pipe is not blocked by blowing into it, from the opposite side to the picture above.



Press on the internal part of the safety valve spring, from the opposite side to the picture shown above, to check that it is not clogged.



Clean the metal plate using a damp sponge and check that the manometric rod (shown in picture to the left) is not blocked and correctly positioned. Rinse with water and check it moves freely.



Replace the watertight seal at least every three years. This seal can only be replaced by an Approved Service Centre.



Do not store the appliance with the lid closed. Leave open or half open or slightly ajar. This will prevent unpleasant odours.

CLEANING MAINTENANCE



Clean the outside of the appliance's lid using a damp cloth. Clean the silencing pressure valve at the back of the lid. Pull out the valve cover from the lid, then take out the valve and clean it under running water. Reassemble the valve and return it to its original position in the lid.



- In the event of accidental immersion of the appliance or if water is spilt directly on the heating element when the bowl is not in position, take the appliance to an Approved Service Centre.

Note: The seal is non-removable from the metal plate.



Clean the upper part of the cooking bowl using a damp cloth. Clean the area behind the condensation collector using a damp cloth. Rinse the condensation collector and replace.

Clean the seal on the metal plate using a damp cloth then rinse thoroughly. Do not use sharp objects.



Transport the appliance using the two side handles. To carry the appliance, close the lid and lock it.



SAFETY FEATURES

Your pressure cooker contains several safety features:

Safety When Opening:

- If your pressure cooker is under pressure, the manometric rod is in the upper locking position, which prevents the lid from opening. Never try to force open your pressure cooker.
- It is especially important not to apply pressure to the manometric rod.
- Ensure that the internal pressure has fallen (additional steam escaping from the safety valve) prior to trying to open the lid.

Two Overpressure Safety Features:

- First device: the safety valve releases the pressure – [see chapter on Cleaning and Maintenance, page 42.](#)
- Second device : the joint let off steam on the back of the cover

If one of the overpressure safety features is triggered:

Turn off your appliance.

Let your pressure cooker completely cool down.

Open it.

Check and clean the safety valve, decompression ball and gasket. See chapter on Cleaning and Maintenance.

If your product leaks or is no longer operational after having performed these checks and cleaning, return it to a Tefal authorised Service Centre.

Regulating your appliance:

The pressure can be regulated by switching the heating element on or off.

To minimise the effects of thermal inertia and improve regulation accuracy, the decompression ball can be automatically triggered to briefly release steam from time to time.

PROBLEMS	POSSIBLES CAUSES	SOLUTION
The lid does not close.	There are foreign bodies between the bowl and the heating plate.	Remove the bowl, check that the heating plate, central element and under the bowl are clean. Also check that the central element can move around.
	The lid open/close handle is not correctly positioned.	Check that the open/close handle is completely open.
	The metal plate and/or the tightening screw are not properly installed or fully tightened.	Check that the nut is fully tightened and that the notches on the rotating inner part of the lid are correctly aligned with the notches on the rim of the bowl and then try locking the lid closed. The nut must be fitted with the flat side facing the metal plate.
The appliance does not depressurise.	The ball cover is not in place.	Let the appliance cool completely and then remove the metal plate and correctly position the ball cover (fixed in the lock position).
The lid does not open once the steam is released.	The manometric rod is still in the high position.	After ensuring that no more steam is released and that the appliance is completely cold, insert a fine metal skewer into the hole located between the open handle and the silencing valve. Be careful of hot steam being released once the skewer is pushed in. When no more steam is released, try to open the appliance.
The appliance does not become pressurised.	Check that the seal, purple safety valve and manometric rod are clean.	Clean your appliance by following the cleaning and maintenance instructions in this book.
	Check that the lid is locked and the marking is properly aligned with the closed padlock. Check that the manometric rod can move around and if it needs cleaning.	Clean the manometric rod as instructed in the Cleaning and Maintenance section.
	The decompression ball is not positioned correctly or dirty.	Check that the ball is correctly positioned and that the cover is in the locked position. Clean and dry the ball and its support.
ERROR CODES	Code 24: the pressure decreases while pressure cooking. Code 21 and 26: pressure fails to raise.	Add liquid to your recipe (water, stock or a liquid sauce) 50-100ml at a time and re-start the recipe.

PROBLEMS	POSSIBLES CAUSES	SOLUTION
Steam is released from the sides of the lid during cooking (leaks).	The seal of the metal plate and/or the edges of the bowl are dirty.	Clean the sides of the bowl and seal using a damp cloth. Do not use any sharp instruments.
	Wear, cuts and deformation of the seal.	The seal must be changed at least every 3 years. Take your appliance to an Approved Service Centre.
	Bowl edges damaged.	Take your appliance to an approved service centre.
	The nut for the metal plate was not tightened enough.	Fully tighten the nut so the metal plate is correctly positioned. The nut must be fitted with the flat side facing the metal plate.
Water flows behind the appliance.	The condensation collector is not in position or is overflowing.	Make sure that the condensation collector is properly positioned behind the appliance and that the flow channel is not blocked. The nut must be fitted with the flat side facing the metal plate.
	The safety valves and/or openings are obstructed.	Check that the bowl is not too full with food or that foods have been cooked which expand (see Safety Instructions pages).
The control panel does not light up.	The appliance is not connected or is on standby.	Check that the power lead is connected both to the appliance and the mains. Check that the appliance is not on standby by pressing the "OK" button.
	The appliance is damaged.	Take your appliance to an Approved Service Centre.
Condensation appears on the indicator.	There is condensation on the lid.	Let the appliance dry in fresh air for a few hours.
The metal plate can not be removed, it is blocked.	The ball cover was not well positioned on the metal plate.	Unscrew the nut on the metal plate, then press the spring loaded screw spindle to release the metal plate. Check that the ball cover and decompression ball are correctly positioned and re-fit if necessary.

For any connection-related problems, go to www.tefal.co.uk or the My Cook4me app (Menu/ guide/ FAQ).

Helpline Information:

0345 602 1454 - UK

01 677 4003 - ROI

Trademarks

The Bluetooth® brand and logo are the property of Bluetooth SIG, Inc.; use by SEB SAS is subject to licensing. The other commercial brands and brand names are the property of their respective owners.



Tefal®