# 6 specific automatic programs













Burger

**Poultry** 

Sandwich Sausage / Red meat Pork

Fish / Seafood

















Quick Start Guide

#### 1. GETTING STARTED - Wash non-stick plates before first use







PLUG IN

**KEEP WARM** 

## 2. LIGHT INDICATOR EVOLUTION


PREHEATING







2. COOKING STARTS

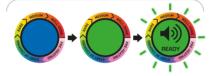

3. COOKING










CALL **CONSUMER SERVICE** 


## 3. SELECT COOKING PROGRAM





OPTIONS

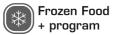

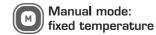

## 4. PREHEATING



Wait approx 5 min



WAIT

BEEP = READY

#### 5, COOKING









OPEN

RARE

**PLACE FOOD** 

CLOSE THICKNESS MEASUREMENT

COOKING STARTS







REMOVE FOOD AT THE REQUIRED LEVEL

MEDIUM

**READY TO EAT** 

CLOSE

#### FOR 2ND BATCH OF FOOD, CLOSE GRILL AND START FROM SECTION 3

## 6. CLEANING AND MAINTENANCE







UNPLUG





OFF





REMOVE





WASH