



제품을 사용하기 전에 안전상 주의사항과
사용 설명서를 주의 깊게 읽어주십시오

안전상 주의 사항

- 본 제품은 안전을 위해 현재 시행중인 기술 표준과 전기기기 관련 안전 규정(저전압 안전규격, 전자기적 적합여부, 사용 환경 등)에 맞추어 제작되었습니다.
- 제품 사용 중에는 제품이 매우 뜨거워지므로 피부에 닿는 것을 주의하십시오. 전원 코드는 제품의 열판 가까이 닿지 않도록 하십시오.
- 사용 전압이 제품에 표기된 전압과 일치하는지 확인하십시오. 표기되지 않은 전압 사용시 제품에 발생하는 문제는 매우 치명적이며 품질 보증 혜택을 받을 수 없습니다.

- 안전을 위하여 30mA 이하의 전기 차단기를 욕실 전원에 설치하실 것을 권장합니다. 보다 자세한 사항은 전기 전문가에게 문의하십시오.

- 본 제품의 설치와 사용법은 현재 국내법이 우선합니다.

- 주의: 젖은 손으로 또는 물이 차있는 욕조 근처, 세면대 또는 물이 담긴 용기 근처에서 기기를 절대 사용하지 마십시오.

- 욕실에서 사용하신 후에는 반드시 전원 플러그를 뽑아 주십시오. 욕실에서는 제품의 전원 꺼진 경우에도 물기가 주위에 있으면 위험할 수 있습니다.

- 어린이들을 포함하여 신체, 지각 또는 정신능력에 장애가 있는 분 및 제품 사용에 대한 지식이나 경험이 부족한 분은 안전을 위해 보호자의 감독없이 제품을 사용하지 못하도록 하십시오. 어린이들이 제품을 가지고 장난치지 않도록 주의하여 주십시오.

8세 이상의 어린이나 신체, 지각 또는 정신능력에 장애가 있는 분 및 제품 사용에 대한 지식이나 경험이 부족한 분이 제

품을 사용할 경우 안전한 사용을 위해 보호자의 감독하에 제품을 사용할 수 있도록 곁에서도와 주시고 각별히 주의하여 주십시오. 어린이들이 제품을 가지고 장난치지 않도록 주의하여 주십시오. 어린이들이 보호자의 감독 없이 제품을 세척하거나 관리해서는 안됩니다.

- 전원 코드가 손상되었을 경우에는 위험을 방지하기 위해 반드시 당사 서비스센터나 전기 전문가를 통해 전원 코드를 교체하십시오.

- 다음과 같은 경우에는 절대 제품을 사용하지 마시고 당사 서비스센터에 문의하십시오.
 - 제품을 떨어뜨렸을 경우
 - 제품이 제대로 작동되지 않는 경우
- 다음과 같은 경우에는 전원 플러그를 뽑아주십시오.
 - 제품 보관 및 세척 전
 - 제품이 제대로 작동되지 않는 경우
 - 제품을 사용한 후
 - 부재 시(짧은 시간 동안일 경우에도)
- 전원 코드가 손상되었을 경우에는 제품을 사용하지 마십시오.
- 제품을 물에 담그거나 흐르는 물로 세척하지 마십시오.
- 물기있는 손으로 제품을 사용하지 마십시오.
- 제품의 뜨거운 열판 부분이 아닌 손잡이 부분으로 제품을 잡아주십시오.
- 전원 코드를 잡아당겨 콘센트를 빼지 마시고 전원 플러그를 잡고 빼 주십시오.
- 전원 연장 코드를 사용하지 마십시오.
- 연마제나 부식제를 사용하지 마십시오.
- 0°C 이하나 35°C 이상의 기온에서는 사용하지 마십시오.

품질보증

이 제품은 국내 가정용으로 제작 되었으므로 상업용 또는 부적절하게 사용된 경우 당사의 품질보증 혜택을 받으실 수 없습니다.

환경 보호

- ① 본 제품은 재활용이 가능한 부속품들을 포함하고 있습니다.
- ② 환경 보호를 위해 분리 수거해 주십시오.

구입하신 제품의 사용 설명서는 로벤타 홈페이지에서도 확인 가능합니다. (www.rowenta.co.kr)

국내모델 적용

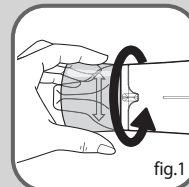
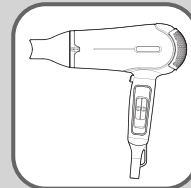
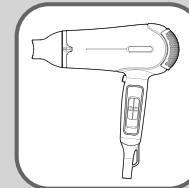


fig.1

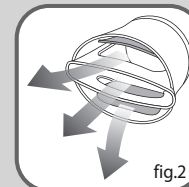


fig.2


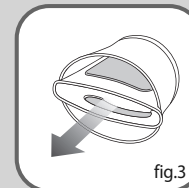


fig.3






Rowenta®

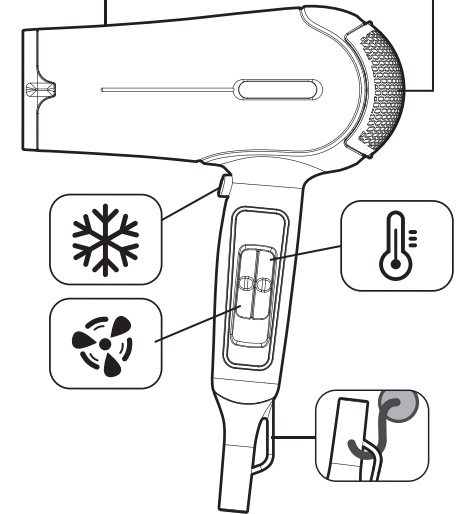

9100014891

www.rowenta.com

국내모델 적용

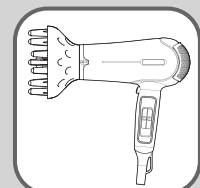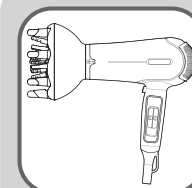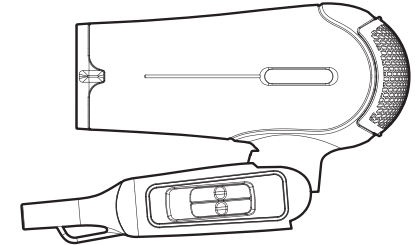

SAFETY

- For your safety, this appliance complies with the applicable standards and regulations (Low Voltage Directive, Electromagnetic Compatibility, Environmental...).
- The appliance's accessories become very hot during use. Avoid contact with the skin. Make sure that the supply cord never comes into contact with the hot parts of the appliance.
- Check that the voltage of your electricity supply matches the voltage of your appliance. Any error when connecting the appliance can cause irreparable harm, not covered by the guarantee.

• For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask for installer for advice.

- The installation of the appliance and its use must however comply with the standards in force in your country.

• **WARNING: do not use this appliance near bathtubs, showers, basins or other vessels containing water.**

• When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.



- When using the appliance in the bathroom, unplug it after use as the presence of water nearby may pose a danger even when the appliance is turned off.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

• This appliance can be used by children aged from 8 years and above

and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

• If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

- Stop using your appliance and contact an Authorised Service Centre if:
 - your appliance has fallen.
 - it does not work correctly.
- The appliance is equipped with a heat-sensitive safety device. In the event of overheating (for example if the rear grill is blocked), the dryer will stop automatically: contact the After-Sales Service.
- The appliance must be unplugged:
 - before cleaning and maintenance procedures.
 - if it is not working correctly.
 - as soon as you have finished using it.
 - if you leave the room, even momentarily.
- Do not use if the cord is damaged.
- Do not immerse or put under running water, even for cleaning purposes.
- Do not hold with damp hands.
- Do not hold the appliance by the casing, which is hot, but by the handle.
- Do not unplug by pulling on the cord, rather pull out by the plug.
- Do not use an electrical extension lead.
- Do not clean with abrasive or corrosive products.
- Do not use at temperatures below 0°C and above 35°C.

GUARANTEE:

Your appliance is designed for use in the home only. It should not be used for professional purposes. The guarantee becomes null and void in the case of improper usage.

ENVIRONMENT PROTECTION FIRST!



- ① Your appliance contains valuable materials which can be recovered or recycled.
- ➡ Leave it at a local civic waste collection point.



These instructions are also available on our website www.rowenta.com.

CHT

安全事項

- 基於您的安全起見，本電風筒完全符合現行相關的標準和規定（低電壓、電磁相容性、環保...）。
 - 使用電風筒時，配件會變得極熱。請避免與皮膚接觸。確認電線未與風筒的發熱部份有任何接觸。
 - 請檢查您的電壓裝置是否符合電風筒的電壓。
- 所有不當的接電可造成無法修復的損壞，且不在保養範圍內。
- 為了多一層保護，建議在浴室供電的電路中安裝額定剩餘電流不超過 30mA 的剩餘電流裝置。請向您的電力安裝人員查詢。
 - 無論如何，電風筒的安裝及使用必須符合使用地區的標準。
 - 注意：請勿在雙手潮濕時使用電風筒，或在有水的浴缸、淋浴間、臉盆或其他容器...等附近使用電風筒。
 - 在浴室內使用電風筒時，請於使用後拔除電插頭。因為靠近水的地方可能存在風險，即使電風筒已停止操作。
 - 本電風筒器並未設計供下列人士(包括孩童)使用：體能、感官或心智等能力有限、或對電風筒毫無認識或缺乏經驗的人士。如以上人士使用本電風筒，必須有人在旁監督或事前指導如何操作，確保他們的安全。
 - 必須有人在旁監督，以免孩童玩弄電風筒。
 - 若電線已受損，應立即由製造商、其售後服務部或合格人員予以更換，以免發生危險。
 - 若發生下列情況，請勿使用電風筒，並與認可服務中心連絡：
 - 電風筒曾經掉落
 - 操作不正常
 - 本電風筒內置過熱保護裝置。若發生過熱(例如尾部入風柵格被阻塞)，電風筒將自動停止運轉：請與售後服務部聯絡。
 - 下列情況應先拔除電插頭：
 - 清潔與保養前
 - 運作不正常
 - 使用完畢
 - 離開時(即使暫時性)
 - 若電線受損，請勿使用電風筒。
 - 請勿將電風筒浸泡在水中，或用水沖洗，即使是為了清潔電風筒。
 - 請勿用潮濕的雙手握持電風筒。
 - 請勿手持發熱的機身外殼，而應握住手柄。
 - 請勿以拉扯電線的方式拔除電插頭，而應直接拔除插頭。
 - 請勿使用電線拖板。
 - 請勿使用研磨性或腐蝕性產品清潔。
 - 請勿在低於 0°C 或高於 35°C 的溫度時使用。



保養

本電風筒之設計僅限於家居使用。其不得做為專業美髮用途。若使用不當則不具保養效力。