

Tefal[®]


EN






TH



Easy Rice Rice Cooker / Easy Rice & Slow Cooker

www.tefal.com

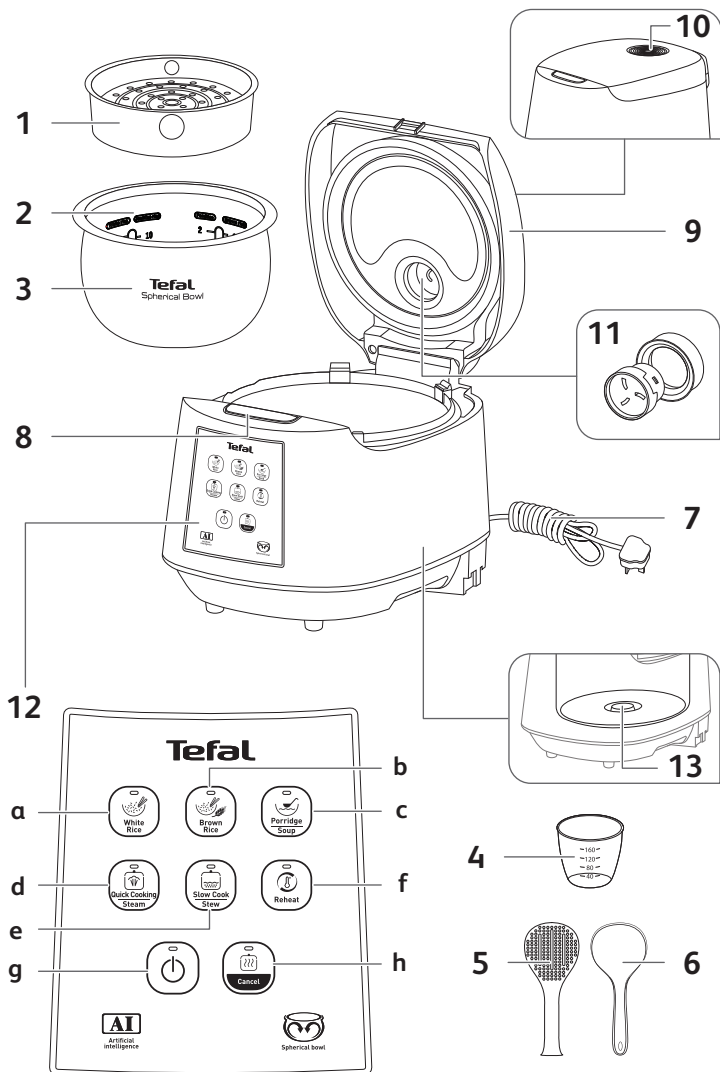

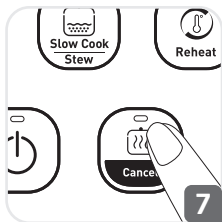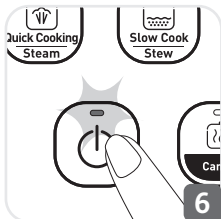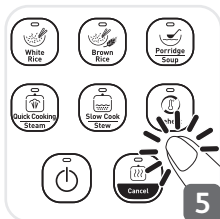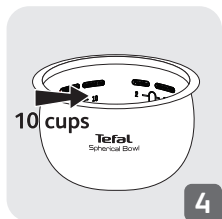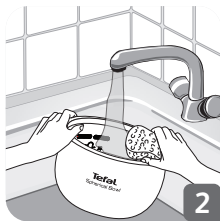

DESCRIPTION

- | | | | |
|----|-------------------------------|----|---------------------|
| 1 | Steam basket | 12 | Control panel |
| 2 | Graduation for water and rice | a | White rice |
| 3 | Removable Non-Stick bowl | b | Brown rice |
| 4 | Measuring cup | c | Porridge/soup |
| 5 | Rice spatula | d | Quick cooking/steam |
| 6 | Soup spoon | e | Slow cook/stew |
| 7 | Power cord | f | Reheat |
| 8 | Lid opening button | g | Start |
| 9 | Lid | h | Keep warm/cancel |
| 10 | Steam vent | 13 | Sensor |
| 11 | Steam valve | | |

IMPORTANT SAFEGUARDS SAFETY INSTRUCTIONS

Read and follow the instructions for use. Keep them safe.

- This appliance is not intended to be operated by means of an external timer or a separate remote-control system.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 years and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.

- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is for household use only. It is not intended for even use in the following applications and the guarantee will not apply for:
 - Staff kitchen areas in shops, offices and other working environments
 - Farm houses
 - By clients in hotels, motels and other such kind of residential type environments
 - Bed and breakfast type environments
- **If your appliance is fitted with fixed power cord:** if the power supply cord is damage, it

must be replaced by the manufacturer, the manufacturer's after-sales service department or similarly qualified person in order to avoid any danger.

- The appliance must not be immersed in water or any other liquid.
- Use a damp cloth or sponge with washing up liquid to clean the accessories and parts in contact with food. Rinse with a damp cloth or sponge. Dry carefully.
- If the symbol  is marked on the appliance, this symbol means “ Caution: surfaces may become hot during use ”.
- Caution: the surface of heating element is subject to residual heat after use.
- Caution: risk of injury due to improper use of the appliance.
- Caution: if your appliance has a removable power cord, do not spill liquid on the connector.
- Always unplug the appliance:
 - immediately after use
 - when moving it
 - prior to any cleaning or maintenance
 - if it fails to function correctly
- Burns can occur by touching the hot surface of the appliance, the hot water, steam or the food.

- During cooking, the appliance gives out heat and steam. Keep face and hands away.
- Do not obstruct the steam outlet.
- For any problems or queries please contact our Customer Relations Team or consult our website.
- The appliance can be used up to an altitude of 2000 m.
- For your safety, this appliance complies with the safety regulations and directives in effect at the time of manufacture (Low-voltage Directive, Electromagnetic Compatibility, Food Contact Materials Regulations, Environment...).
- Check that the power supply voltage corresponds to that shown on the appliance (alternating current).
- Given the diverse standards in effect, if the appliance is used in a country other than that in which it is purchased, have it checked by an approved service centre.

CONNECTING TO THE POWER SUPPLY

- Do not use the appliance if:
 - the appliance or the cord is damaged.
 - the appliance has fallen or shows visible damage or does not work properly.
 - In the event of the above, the appliance must be sent to an approved service centre. Do not take the appliance apart yourself.
- Do not leave the cord hanging.
- Always plug the appliance into an earthed socket.
- Do not use an extension lead. If you accept liability for doing so, only use an extension lead which is in good condition, has an earthed plug and is suited to the power of the appliance.
- Do not unplug the appliance by pulling on the cord.

USING

- Use a flat, stable, heat-resistant work surface away from any water splashes.
- Do not allow the base of the appliance to come into contact with water.
- Never try to operate the appliance when the pot is empty or without the pot.
- The cooking function/knob must be allowed to operate freely. Do not prevent or obstruct the function from automatically changing to the keep warm function.
- Do not remove the pot while the appliance is working.
- Do not put the appliance directly onto a hot surface, or any other source of heat or flame, as it will cause a failure or danger.
- The pot and the heating plate should be in direct contact. Ensure that no food or liquid is inserted between the pot and heating plate.
- Do not place the appliance near a heat source or in a hot oven, as serious damage could result.
- Do not put any food or water into the appliance until the pot is in place.
- Respect the levels indicated in the recipes.
- Should any part of your appliance catch fire, do not attempt to put it out with water. To smother the flames use a damp tea towel.
- Any intervention should only be made by a service centre with original spare parts.
- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.

- Your appliance has been designed to run for many years. However, when you decide to replace it, remember to think about how you can contribute to protecting the environment.
- Before discarding your appliance you should remove the battery from the timer and dispose of it at a local civic waste collection centre (according to model).

Environment protection first!



① Your appliance contains valuable materials which can be recovered or recycled.



➡ Leave it at a local civic waste collection point.

BEFORE FIRST USE

- Open the lid by pressing the opening button located on the top lid. – Fig. 1
- Remove the spherical pot and clean the pot with a sponge and washing up liquid. – Fig. 2
- Wipe the outside of the appliance with a damp cloth. – Fig. 3

USING YOUR RICE COOKER

Measuring the ingredients - Max capacity of the bowl

- The graduated markings on the inside of the bowl are given in cups, these are used for measuring the amount of water when cooking rice and other cereals. There are 3 kinds of water level marks for 3 different kinds of rice: white rice, brown rice, Jasmine rice. And one water level mark for porridge and congee.
- The maximum quantity of water + rice should not exceed the 10 cup mark inside the bowl. – Fig. 4.
- The plastic cup provided with your appliance is for measuring rice and other cereals.
- To cook 1 cup of white rice (serves 2 small or 1 large portion), use 1 measuring cup of white rice and then add 1 1/2 measuring cup of water. To cook other quantity of rice, refer to cooking guide below.

COOKING GUIDE -White RICE For Example

Measuring cups of white rice	Water level in the bowl (+ rice)	Serving per person
2	2 cup white rice mark	3-4
4	4 cup white rice mark	5-6
6	6 cup white rice mark	8-10
8	8 cup white rice mark	11
10	10 cup white rice mark	13

Note: Always add the rice first otherwise you will have too much water.

COOKING PROGRAM

- Press program name key to select different program – Fig. 5. The light of selected program lights up and the “Start” light will flash. Press “Start” to start cooking. – Fig. 6
- After simmering, the rice cooker will enter keep warm automatically.
- If you wish to change the selected cooking menu or have chosen the incorrect setting, press “Keep warm/Cancel” button – Fig. 7 and choose the function you want. Press “Keep warm/Cancel” key under standby status, the light of “Keep warm/Cancel” button lights up, the appliance will start to keep warm.

Programs	Cooking time	Temperature	Delayed Start	Keep warm
1 White Rice	Auto	Auto	NA	12h
2 Brown Rice	Auto	Auto	NA	12h
3 Porridge/Soup	1h30min	Auto	NA	12h
4 Slow Cook	8h	95°C	NA	12h
5 Steam	Auto	Auto	NA	12h
6 Quick Cooking	Auto	Auto	NA	12h
7 Reheat	25min	Auto	NA	12h
8 Keep warm	12h	Auto	NA	-

Note: It takes around 43 minutes to cook 4 cups of white rice under the normal condition and if you use Quick Cooking function you will save around 9 minutes.

NOTE

- Do not open the lid during cooking as steam will escape and this will affect the cooking time and the taste.
- On completion of cooking, when the “KEEP WARM” indicate light is on, stir the rice and then leave it in the rice cooker for a few minutes longer in order to get perfect rice with separate grains.
- **Do not touch the heating element when the product is plugged in.**
- **Carefully wipe the outside of the bowl (especially the bottom). Make sure that there are no foreign residues or liquid underneath the bowl and on the heating element.**
- **Never place your hand on the steam vent during cooking, as there is a danger of burns. – Fig. 8**
- **Only use the inner pot provided with the appliance.**
- **Do not pour water or put ingredients in the appliance without the bowl inside.**

TROUBLESHOOTING

Malfunction description	Cause	Solution
Any indicator light off and no heating.	Appliance not plugged in.	Check the power cord is plugged in the socket and on the Mains.
Any indicator light off and heating.	Indicator light is damaged or has a connection error.	Send to authorized service center for repair.
Steam leakage during use.	Lid is not properly closed.	Open and ensure the lid is closed properly.
	Micro pressure valve incorrectly position or incomplete.	Stop the cooking (unplug the product) and check the valve is complete (2 parts locked together) and well positioned.
	Lid or micro pressure valve gasket is damaged.	Send to authorized service center for repair.
Rice undercooked or overcooked.	Too much or not enough water compared to rice quantity.	Refer to table for water quantity.
Automatic warm-keeping fails (product stay in cooking position, or no heating).		Send to the authorized service center for repair.
Lights under the “Start” and “Cancel” button light on at the same time (E1).	The sensor on the bottom open or short circuit.	Send to the authorized service center for repair.

- | | | | |
|----|------------------|----|----------------------|
| 1 | ถาดนั่ง | 12 | แผงควบคุม |
| 2 | ระดับน้ำ | a | ขาขวา |
| 3 | หม้อทรงกลมถอดได้ | b | ขาหลัง |
| 4 | ถวยตวง | c | ขาต้ม/ซุ๊ป |
| 5 | ทัพพีตักข้าว | d | หุงต้ม/นั่ง |
| 6 | ช้อนตักซุ๊ป | e | ตุ๋น/สตูว์ |
| 7 | สายไฟ | f | อุ่นอาหาร |
| 8 | ปุ่มเปิดฝาหม้อ | g | เริ่มต้น |
| 9 | ฝาหม้อ | h | อุ่นต่อเนื่อง/ยกเลิก |
| 10 | ช่องระบายไอน้ำ | 13 | เซ็นเซอร์ |
| 11 | วาล์วไอน้ำ | | |

การป้องกันความปลอดภัยที่สำคัญ
คำแนะนำด้านความปลอดภัย

อ่านและปฏิบัติตามคำแนะนำในการใช้งาน กรุณาเก็บไว้ในที่ปลอดภัย

- เครื่องใช้นี้ไม่ได้มีวัตถุประสงค์ในการใช้งานร่วมกับตัวจับเวลาภายนอก หรือระบบควบคุมระยะไกลแบบแยกต่างหาก
- เด็กอายุ 8 ปีขึ้นไปสามารถใช้งานเครื่องใช้นี้ได้หากได้รับการควบคุมดูแล หรือคำแนะนำเกี่ยวกับการใช้งานอย่างปลอดภัยและเข้าใจถึงอันตรายที่เกี่ยวข้อง ห้ามไม่ให้เด็กทำความสะอาดหรือบำรุงรักษาเพียงลำพัง เว้นแต่ว่าเด็กจะมีอายุมากกว่า 8 ปี และอยู่ภายใต้การควบคุมดูแล เก็บเครื่องใช้และสายไฟให้ห่างจากเด็กอายุต่ำกว่า 8 ปี
- บุคคลผู้มีความบกพร่องทางร่างกาย ประสาทสัมผัสหรือทางจิต หรือขาดประสบการณ์และความรู้ สามารถใช้งานเครื่องใช้นี้ได้หากได้รับการควบคุมดูแล หรือได้รับคำแนะนำเกี่ยวกับการใช้งานอย่างปลอดภัยและเข้าใจถึงอันตรายที่เกี่ยวข้อง

- ไม่ควรปล่อยให้เด็กนำเครื่องใช้ไปเล่น
- เครื่องใช้ไม่ได้มีวัตถุประสงค์ในการใช้งานโดยบุคคล (รวมถึงเด็ก) ผู้มีความบกพร่องทางร่างกาย ประสาทสัมผัสหรือทางจิต หรือขาดประสบการณ์และความรู้ เว้นแต่จะได้รับการควบคุมดูแลหรือได้รับคำแนะนำเกี่ยวกับการใช้งานอย่างปลอดภัยจากบุคคลผู้ทำหน้าที่ดูแลความปลอดภัยของบุคคลดังกล่าว
- ควรควบคุมดูแลไม่ให้เด็กนำเครื่องใช้ไปเล่น
- เครื่องนี้มีไว้สำหรับการใช้งานในครัวเรือนเท่านั้น ไม่ได้มีไว้เพื่อการใช้งานดังต่อไปนี้ ซึ่งอยู่นอกขอบเขตของการรับประกัน
 - พื้นที่ครัวสำหรับพนักงานในร้านค้า สำนักงาน และสภาพแวดล้อมการทำงานอื่น ๆ
 - โรงนา
 - ผู้เข้าพักในโรงแรม ที่พักข้างทาง และสภาพแวดล้อมการพักอาศัยอื่น ๆ
 - สภาพแวดล้อมแบบห้องพักร่วมอาหารเช้า
- หากเครื่องใช้มีสายไฟแบบถาวร: ____ หากสายไฟเสียหาย ต้องดำเนินการเปลี่ยนโดยผู้ผลิต แผนกบริการหลังการขายของผู้ผลิต หรือบุคคลที่มีคุณสมบัติคล้ายกัน เพื่อหลีกเลี่ยงอันตราย
- ห้ามนำเครื่องใช้ไปแช่น้ำหรือของเหลวอื่น ๆ
- ใช้ผ้าชุบน้ำหมาด ๆ หรือฟองน้ำพร้อมน้ำยาล้างจานในการทำทำความสะอาดอุปกรณ์เสริมและชิ้นส่วนที่สัมผัสกับอาหาร ล้างออกด้วยผ้าชุบน้ำหมาด ๆ หรือฟองน้ำ เช็ดให้แห้งด้วยความระมัดระวัง
- หากมีสัญลักษณ์  ปรากฏอยู่ที่เครื่องใช้ สัญลักษณ์นี้หมายความว่า "ระวัง: พื้นผิวอาจร้อนระหว่างใช้งาน"
- ระวัง: พื้นผิวของส่วนทำความร้อนอาจมีความร้อนหลงเหลืออยู่หลังการใช้งาน
- ระวัง: การใช้งานเครื่องใช้อย่างไม่เหมาะสมเสี่ยงต่อการบาดเจ็บ

- ระวัง: หากเครื่องใช้ที่มีสายไฟแบบถอดได้ ห้ามให้ของเหลวหกใส่ขั้วต่อ
- ถอดปลั๊กเครื่องใช้ทุกครั้ง
 - หลังการใช้งานทันที
 - เมื่อเคลื่อนย้ายเครื่องใช้
 - ก่อนการทำความสะอาดหรือการบำรุงรักษา
 - เมื่อฟังก์ชันทำงานอย่างผิดปกติ
- การสัมผัสพื้นผิวที่ร้อนของเครื่องใช้ ร้อน ไอน้ำ หรืออาหารที่ร้อน อาจทำให้เกิดแผลไหม้หรือแผลน้ำร้อนลวก
- เครื่องใช้จะมีความร้อนและมีไอน้ำพุ่งออกมาระหว่างการปรุงอาหาร ห้ามนำใบหน้าและมือเข้าใกล้
- ห้ามปิดกั้นช่องไอน้ำ
- หากมีปัญหาหรือข้อสงสัยประการใด กรุณาติดต่อฝ่ายลูกค้าสัมพันธ์หรือเข้าดูเว็บไซต์ของเรา
- เครื่องใช้นี้ใช้ได้ในพื้นที่ที่มีความสูงจากพื้นดินไม่เกิน 2,000 ม.
- เพื่อความปลอดภัยของคุณ เครื่องใช้นี้สอดคล้องกับข้อบังคับและระเบียบด้านความปลอดภัยที่มีผลบังคับใช้ ณ เวลาที่ผลิต (ข้อกำหนดระดับกำลังไฟฟ้า ความเข้ากันได้ทางแม่เหล็กไฟฟ้า ข้อบังคับวัสดุที่สัมผัสอาหาร สิ่งแวดล้อม...)
- ตรวจสอบว่าแรงดันไฟฟ้าของแหล่งจ่ายไฟสอดคล้องกับค่าแรงดันไฟฟ้าที่ปรากฏบนเครื่อง (ไฟฟ้ากระแสสลับ)
- เนื่องจากมีมาตรฐานต่าง ๆ ที่กำหนดให้ หากนำเครื่องไปใช้งานภายนอกประเทศที่ซื้อมา กรุณานำเครื่องไปตรวจสอบที่ศูนย์บริการที่ได้รับอนุญาต

การเชื่อมต่อกับแหล่งจ่ายไฟ

- ห้ามใช้เครื่องในกรณีต่อไปนี้
 - เครื่องหรือสายไฟเสียหาย
 - เครื่องตกลง หรือมีร่องรอยความเสียหายที่เห็นได้ชัด หรือทำงานไม่ปกติ
 - หากมีเหตุการณ์ดังกล่าวเกิดขึ้น กรุณาส่งเครื่องไปยังศูนย์บริการที่ได้รับอนุญาต ห้ามถอดชิ้นส่วนเครื่องด้วยตัวเอง
- ห้ามห้อยสายไฟ
- เสียบปลั๊กเครื่องในตำแหน่งที่ต่อสายดินทุกครั้ง
- ห้ามใช้ปลั๊กพ่วง หากคุณยินยอมรับผิดชอบจากการใช้งานดังกล่าว กรุณาใช้ปลั๊กพ่วงที่มีสภาพดี มีการต่อสายดิน และเหมาะสมกับกำลังไฟของเครื่องเท่านั้น
- ห้ามถอดปลั๊กเครื่องโดยดึงที่สายไฟ

การใช้งาน

- ใช้บนพื้นที่เรียบ มั่นคง และทนความร้อน โดยให้ห่างจากน้ำกระเด็น
- ห้ามให้ฐานของเครื่องใช้สัมผัสกับน้ำ
- ห้ามใช้งานเครื่องใช้ขณะที่มีมือวางเปล่าหรือไม่มีมือ
- ฟังก์ชัน/ลูกบิดการปรุงอาหารต้องใช้งานได้อย่างสิ้นไหล ห้ามยับยั้งหรือปิดกั้นฟังก์ชันจากการเปลี่ยนโดยอัตโนมัติเป็นฟังก์ชันอื่นต่อเนื่อง
- ห้ามถอดหม้อขณะใช้งานเครื่องใช้
- ห้ามวางเครื่องบนพื้นผิวที่ร้อนหรือแหล่งความร้อนอื่น ๆ หรือเปลวไฟโดยตรง เนื่องจากจะทำให้เกิดความขัดข้องหรืออันตราย
- หม้อและแผ่นทำความร้อนควรสัมผัสกันโดยตรง ตรวจสอบให้แน่ใจว่าไม่มีอาหารหรือของเหลวแทรกอยู่ระหว่างหม้อกับแผ่นทำความร้อน
- ห้ามวางเครื่องใช้ใกล้กับแหล่งความร้อนหรือในเตาอบที่ร้อน เพราะอาจเกิดความเสียหายร้ายแรงได้
- ห้ามใส่อาหารหรือน้ำลงในเครื่องจนกว่าหม้อจะอยู่ในตำแหน่งที่ถูกต่อ
- เพิ่มปริมาณวัตถุดิบตามที่ระบุในสูตรอาหาร
- หากชิ้นส่วนใด ๆ ของเครื่องเกิดเปลวไฟ พยายามอย่าใช้น้ำดับไฟ ใช้ผ้าทำครัวชุบน้ำหมาด ๆ เพื่อดับไฟ
- ในการเปลี่ยนอะไหล่ของแท้ ควรดำเนินการโดยศูนย์บริการเท่านั้น
- ถอดปลั๊กเครื่องใช้จากแหล่งจ่ายไฟทุกครั้งหากปล่อยเครื่องทิ้งไว้ รวมถึงก่อนการประกอบ ถอดชิ้นส่วน หรือทำความสะอาด

ปกป้องสิ่งแวดล้อม

เครื่องใช้นี้ออกแบบมาให้ใช้งานได้หลายปี อย่างไรก็ตาม หากคุณตัดสินใจที่จะเปลี่ยนเครื่องใช้นี้ ลองคิดว่าคุณจะมีส่วนร่วมในการปกป้องสิ่งแวดล้อมได้อย่างไร

ก่อนทิ้งเครื่องใช้ ควรถอดแบตเตอรี่ออกจากตัวจับเวลา และนำไปทิ้งที่ศูนย์เก็บรวบรวมขยะประจำเมืองในท้องถิ่น (ขึ้นอยู่กับรุ่น)

การปกป้องสิ่งแวดล้อมต้องมาก่อน!



เครื่องใช้ของคุณประกอบด้วยวัสดุมีค่า ซึ่งนำกลับมาใช้หรือรีไซเคิลได้



นำไปทิ้ง ณ จุดเก็บรวบรวมขยะในพื้นที่

ก่อนการใช้งานครั้งแรก

- เปิดฝาหม้อ โดยกดปุ่มเปิดที่ฝาด้านบน - ภาพที่ 1
- ถอดหม้อทรงกลมและทำความสะอาดหม้อด้วยฟองน้ำและน้ำยาล้างจาน - ภาพที่ 2
- เช็ดด้านนอกเครื่องด้วยผ้าชุบน้ำหมาด - ภาพที่ 3

การใช้หม้อหุงข้าว

ตรวจสอบส่วนผสม - ความจุสูงสุดของหม้อ

- ซีดแบ่งระดับภายในหม้อมีหน่วยเป็นถ้วย ใช้ในการตวงปริมาณน้ำเมื่อหุงข้าวและธัญพืชอื่น ๆ มีขีดระดับน้ำ 3 ประเภทสำหรับข้าว 3 ชนิด: ข้าวขาว ข้าวกล้อง ข้าวหอมมะลิ และขีดระดับน้ำหนึ่งขีดสำหรับข้าวต้มและโจ๊ก
- ปริมาณสูงสุดของน้ำ + ข้าวไม่ควรเกินกว่าขีดแบ่งระดับ 10 ถ้วยภายในหม้อ - ภาพที่ 4
- ถ้วยพลาสติกที่เตรียมไว้ให้ในเครื่อง มีไว้เพื่อตวงข้าวและธัญพืช
- ในการหุงข้าวขาว 1 ถ้วย (สำหรับ 2 ที่เล็ก หรือ 1 ที่ใหญ่) ใช้ข้าวขาว 1 ถ้วยตวง จากนั้นเติมน้ำหนึ่งถ้วยตวงครึ่ง ในการหุงข้าวขาวปริมาณอื่นให้อ้างอิงคู่มือหุงข้าวด้านล่างนี้

คำแนะนำในการหุง - ตัวอย่างโดยใช้ข้าวขาว

ถ้วยตวง ข้าวขาว	ระดับน้ำในหม้อ (+ ข้าว)	การเสิร์ฟต่อคน
2	ขีดระดับข้าวขาว 2 ถ้วย	3-4
4	ขีดระดับข้าวขาว 4 ถ้วย	5-6
6	ขีดระดับข้าวขาว 6 ถ้วย	8-10
8	ขีดระดับข้าวขาว 8 ถ้วย	11
10	ขีดระดับข้าวขาว 10 ถ้วย	13

หมายเหตุ: ใส่ข้าวก่อนเสมอ มิฉะนั้นจะมีน้ำมากเกินไป

โปรแกรมการปรุงอาหาร

- กดปุ่มชื่อโปรแกรมเพื่อเลือกโปรแกรมต่าง ๆ - ภาพที่ 5 ไฟของโปรแกรมที่เลือกจะสว่างขึ้นและไฟ "เริ่มต้น" จะกะพริบ กด "เริ่มต้น" เพื่อเริ่มต้นการปรุงอาหาร - ภาพที่ 6
- หลังจากหุงข้าวเสร็จแล้ว หม้อหุงข้าวจะเข้าสู่การอุ่นต่อเนื่องโดยอัตโนมัติ
- หากต้องการเปลี่ยนเมนูการปรุงอาหารที่เลือกไว้หรือเลือกการตั้งค่าผิด กดปุ่ม "อุ่นต่อเนื่อง/ยกเลิก" - ภาพที่ 7 และเลือกฟังก์ชันที่ต้องการ กดปุ่ม "อุ่นต่อเนื่อง/ยกเลิก" ภายใต้อาณัติสแตนด์บาย ไฟของปุ่ม "อุ่นต่อเนื่อง/ยกเลิก" จะสว่างขึ้น เครื่องจะเริ่มการอุ่นต่อเนื่อง

TH

โปรแกรม		เวลาการปรุงอาหาร	อุณหภูมิ	ตั้งเวลาล่วงหน้า	อุ่นต่อเนื่อง
1	ข้าวขาว	อัตโนมัติ	อัตโนมัติ	ไม่ระบุ	12 ชม.
2	ข้าวกล้อง	อัตโนมัติ	อัตโนมัติ	ไม่ระบุ	12 ชม.
3	ข้าวต้ม/ซูป	1 ชม. 30 นาที	อัตโนมัติ	ไม่ระบุ	12 ชม.
4	ตุ๋น	8 ชม.	95 °C	ไม่ระบุ	12 ชม.
5	นึ่ง	อัตโนมัติ	อัตโนมัติ	ไม่ระบุ	12 ชม.
6	หุงด่วน	อัตโนมัติ	อัตโนมัติ	ไม่ระบุ	12 ชม.
7	อุ่นอาหาร	25 นาที	อัตโนมัติ	ไม่ระบุ	12 ชม.
8	อุ่นต่อเนื่อง	12 ชม.	อัตโนมัติ	ไม่ระบุ	-

หมายเหตุ: การหุงข้าวขาว 4 ถ้วยใช้เวลาประมาณ 43 นาทีในสภาพปกติ และหากใช้ฟังก์ชันการปรุงอาหารแบบเร็ว เวลาจะลดประมาณ 9 นาที

หมายเหตุ

- ห้ามเปิดฝาท่อในระหว่างการหุงข้าว เพราะไอน้ำจะระเหยออกมา ซึ่งจะส่งผลต่อระยะเวลาในการหุงข้าวและรสชาติ
- เมื่อข้าวสุกและสัญญาณ "อุ่นต่อเนื่อง" สว่างขึ้น ให้คนข้าวและปล่อยให้ไอน้ำในหม้อหุงข้าวเป็นเวลาสองถึงสามนาที เพื่อให้ได้ข้าวที่สวยและไม่ติดกัน
- ห้ามสัมผัสส่วนทำความร้อนขณะเสียบปลั๊กเครื่อง
- เช็ดหม้อด้านนอกด้วยความระมัดระวัง (โดยเฉพาะส่วนฐาน) ตรวจสอบให้แน่ใจว่าไม่มีสิ่งตกค้างหรือของเหลวแปลกปลอมอยู่ใต้หม้อ และบนส่วนทำความร้อน
- ห้ามวางมือบนช่องระบายไอน้ำระหว่างการปรุงอาหาร เนื่องจากอาจเกิดอันตรายจากการลวก - ภาพที่ 8
- ให้หม้อชั้นในที่ใ้หมักกับเครื่องเท่านั้น
- ห้ามเทน้ำหรือใส่ส่วนผสมลงในเครื่องโดยไม่มีหม้ออยู่ด้านใน

การแก้ไขปัญหา

คำอธิบายเกี่ยวกับความผิดปกติของเครื่อง	สาเหตุ	วิธีแก้ไข
ไฟสัญญาณต่าง ๆ ไม่สว่างและไม่ทำงาน	ไม่ได้เสียบปลั๊กเครื่อง	ตรวจสอบว่าได้เสียบปลั๊กสายไฟในตำแหน่งที่ถูกต้อง และในไฟฟ้ากระแสหลัก
ไฟสัญญาณต่าง ๆ ไม่สว่างแต่มีเครื่องทำความร้อน	ไฟสัญญาณเสียหายหรือเกิดข้อผิดพลาดในการเชื่อมต่อ	ส่งให้ศูนย์บริการที่ได้รับอนุญาตเพื่อซ่อมแซม
มีไอน้ำรั่วระหว่างการใช้งาน	ปิดฝาท่อไม่ถูกต้อง	เปิดและตรวจสอบให้แน่ใจว่าปิดฝาท่ออย่างถูกต้อง
	วาล์วแรงดันไมโครอยู่ในตำแหน่งที่ไม่ถูกต้องหรือไม่สมบูรณ์	หยุดการปรุงอาหาร (ถอดปลั๊กเครื่อง) และตรวจสอบว่าวาล์วอยู่ในสภาพที่สมบูรณ์ (2 ส่วนล็อกเข้าด้วยกัน) และอยู่ในตำแหน่งที่ถูกต้อง
	วงแหวนของฝาท่อหรือวาล์วแรงดันไมโคร ได้รับความเสียหาย	ส่งให้ศูนย์บริการที่ได้รับอนุญาตเพื่อซ่อมแซม
ข้าวไม่สุกหรือสุกเกินไป	ปริมาณน้ำมากเกินไปหรือไม่เพียงพอ เมื่อเทียบกับปริมาณข้าว	ดูตารางแสดงปริมาณน้ำ
ฟังก์ชันเก็บความร้อนอัตโนมัติได้รับความเสียหาย (เครื่องอยู่ในสถานะปรุงอาหาร หรือไม่มีความร้อน)		ส่งให้ศูนย์บริการที่ได้รับอนุญาตเพื่อซ่อมแซม
ไฟได้นุ่ม "เริ่มต้น" และ "ยกเลิก" สว่างขึ้นพร้อมกัน (E1)	เซ็นเซอร์บนส่วนฐานไม่สัมผัสกับหรือลัดวงจร	ส่งให้ศูนย์บริการที่ได้รับอนุญาตเพื่อซ่อมแซม

EN

p. 4 – 12

TH

p. 13 – 21