

SAFETY

- For your safety, this appliance complies with the applicable standards and regulations (Low Voltage Directive, Electromagnetic Compatibility, Environmental...).
- The appliance's accessories become very hot during use. Do not manipulate the concentrator during use. Avoid contact with the skin. Make sure that the supply cord never comes into contact with the hot parts of the appliance.
- Check that the voltage of your electricity supply matches the voltage of your appliance. Any error when connecting the appliance can cause irreparable harm, not covered by the guarantee.
- For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask for installer for advice.
- The installation of the appliance and its use must however comply with the standards in force in your country.
- WARNING: do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.



- For other countries not subject to EU regulations: This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- For countries subject to EU regulations (**CE**): This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Stop using your appliance and contact an Authorised Service Centre if:
 - your appliance has fallen.
 - it does not work correctly.
- In case of overheating, the heat-sensitive safety device will stop the dryer automatically. Check and clean the inlet and outlet grills or contact the After-Sales Service.
- The appliance must be unplugged: before cleaning and maintenance procedures, if it is not working correctly, as soon as you have finished using it, if you leave the room, even momentarily.
- Do not use if the cord is damaged.
- Do not immerse or put under running water, even for cleaning purposes.
- Do not hold with damp hands.
- Do not hold the appliance by the casing, which is hot, but by the handle.
- Do not unplug by pulling on the cord, rather pull out by the plug.
- Do not use an electrical extension lead.
- Do not clean with abrasive or corrosive products.
- Do not use at temperatures below 0°C and above 35°C.

GUARANTEE

Your appliance is designed for use in the home only. It should not be used for professional purposes. Improper use will invalidate the guarantee.

USE

•Ionic technology*

- The hairdryer is equipped with an Ionic Technology function for shiny hair. This starts automatically as soon as the appliance is switched on.

Cleaning

- To maintain the performance of your appliance, we recommend that you clean the filter once a month using the brush provided.
- Ensure that you unplug your appliance from the mains electricity supply before cleaning your filter.

ENVIRONMENT PROTECTION FIRST!





- ① Your appliance contains valuable materials which can be recovered or recycled.
- ➔ Leave it at a local civic waste collection point.

These instructions are also available on our website www.tefal.com

KR

안전

- 본 제품은 안전을 위해 관련 표준 및 규정(저전압 지침, 전자파 적합성, 환경 등)을 준수합니다.
- 제품의 액세서리는 사용 중에 매우 뜨거워집니다. 사용 중에는 드라이기의 노즐을 조작하지 마십시오. 피부에 접촉하지 않도록 하십시오. 전원 코드가 제품의 뜨거운 부분에 닿지 않도록 하십시오.
- 전기 공급 장치의 전압이 제품의 전압과 일치하는지 확인하십시오. 제품을 연결할 때 오류가 발생하면 보증이 적용되지 않는 치명적인 손상을 입힐 수 있습니다.
- 추가 보호를 위해 욕실에 전기를 공급하는 전기 회로에 정격 감도 전류 30mA를 초과하지 않는 잔류 전류 장치(RCD)를 설치하는 것이 좋습니다. 설치를 할 때는 전문가의 조언을 구하십시오.
- 제품의 설치 및 사용은 반드시 해당 국가의 표준을 준수해야 합니다.
- 경고: 이 제품을 욕조, 샤워기, 세면대 또는 기타 물이 들어 있는 용기 근처에서 사용하지 마십시오.
- 제품을 욕실에 사용할 경우 제품을 꺼도 사용 후 물이 가까이 있으면 위험할 수 있으므로 사용 후 플러그를 뽑으십시오.
- EU 규정이 적용되지 않는 기타 국가 경우: 이 기기는 신체적, 감각적 또는 정신적 능력이 저하되었거나 경험과 지식이 부족한 사람(어린이를 포함)에게는 사용이 적합하지 않습니다. 다만, 이들의 안전에 책임이 있는 사람이 기기 사용 방법을 지도하거나 감독하는 경우에는 사용할 수 있습니다. 어린이가 이 제품을 가지고 놀지 못하도록 보호해 주시기 바랍니다.
- EU 규정(표시)이 적용되는 국가의 경우 (**CE**): 이 제품은 8세 이상의 어린이부터 사용할 수 있습니다. 또한 신체적, 감각적, 정신적 장애가 있는 사람, 경험과 지식이 부족한 사람은 안전한 제품 사용을 위한 감독/지시를 받고 위험을 이해한 경우 사용할 수 있습니다. 어린이가 제품을 가지고 놀아서는 안 됩니다. 아이들은 감독을 받지 않는 한 이 제품을 청소하거나 유지관리 해서는 안 됩니다.
- 전원 코드가 손상된 경우 위험을 방지하기 위해 반드시 공인된 당사 서비스센터를 통해 전원 코드를 교체하십시오.
- 다음과 같은 경우 제품 사용을 중단하고 공인 서비스 센터에 문의하십시오.
 - 제품이 바닥에 떨어진 경우
 - 제품이 제대로 작동하지 않는 경우
- 과열된 경우 열 감지 안전 장치가 자동으로 드라이어를 중단합니다. 입구 및 출구 그릴을 점검하고 청소하거나 A/S 서비스에 문의하십시오.

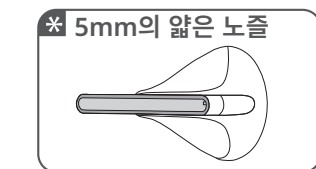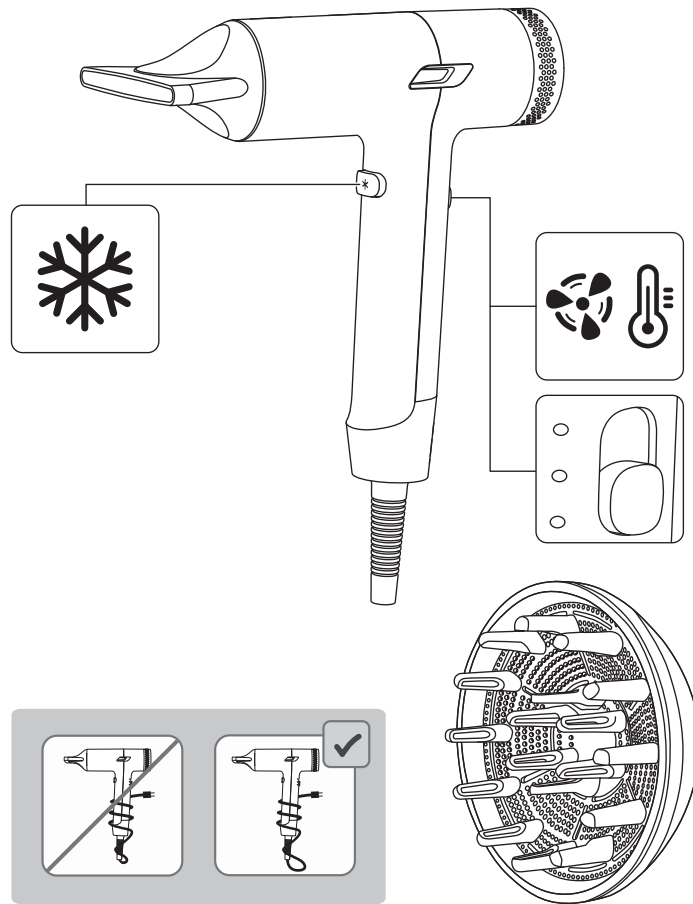


* 5mm의 얇은 노즐

이온 기능 탑재

EN • * depending on model
KR • * 모델에 따라

Tefal®

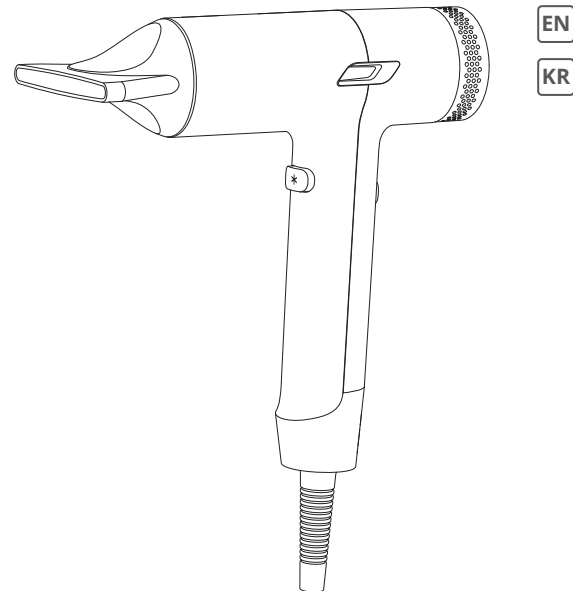


TINY

www.tefal.com

1820015793/02

청소 가이드

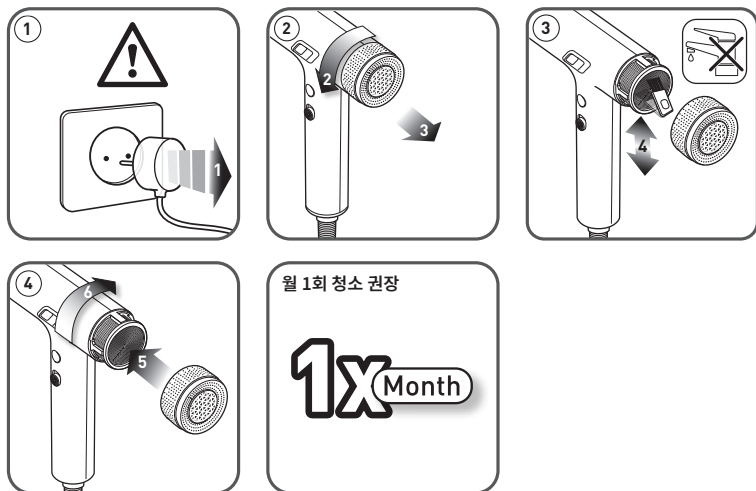

- 다음의 경우에는 반드시 제품의 플러그를 뽑으십시오.
 - 청소나 유지보수를 하기 전
 - 제품이 제대로 작동하지 않을 때
 - 사용을 마친 직후
 - 잠깐이라도 자리를 비울 때
- 코드가 손상된 경우 제품을 사용하지 마십시오.
- 청소를 위한 목적이라도 흐르는 물에 담그거나 적시지 마십시오.
- 젖은 손으로 잡지 마십시오.
- 뜨거워진 케이스로 제품을 잡지 말고 손잡이를 사용하여 잡으십시오.
- 코드를 당겨 분리하지 말고 플러그를 잡고 뽑으십시오.
- 전기 연장 케이블을 사용하지 마십시오.
- 마성 또는 부식성 제품으로 세척하지 마십시오.
- 0°C 이하 및 35°C 이상의 온도에서 사용하지 마십시오.

보증

본 제품은 가정에서만 사용하도록 제작되었습니다. 본 제품을 직업적인 용도로 사용하지 마십시오. 부적절하게 사용하면 보증이 무효화됩니다.

사용

- **이온 기술***
 - 헤어 드라이어에는 빛나는 머릿결을 위한 이온 기술이 적용되어 있습니다. 제품의 전원을 켜면 이 기능은 자동으로 작동합니다.
- **청소**
 - 제품의 성능을 유지하려면 한 달에 한 번 제공된 브러시로 필터를 청소하는 것이 좋습니다.
 - 필터를 청소하기 전에 반드시 제품의 전원 코드를 뽑으십시오.

환경 보호를 최우선으로!

- 
- ① 본 제품에는 재활용할 수 있는 소재들이 있습니다.
 - ➡ 해당 지역 분리 수거함에 배출하시기 바랍니다.

해당 내용은 공식 웹사이트 (www.tefal.com) 에서도
확인하실 수 있습니다.

