

Tefal®


TH

EN




Mechanical Rice Cooker

RK361/RK362







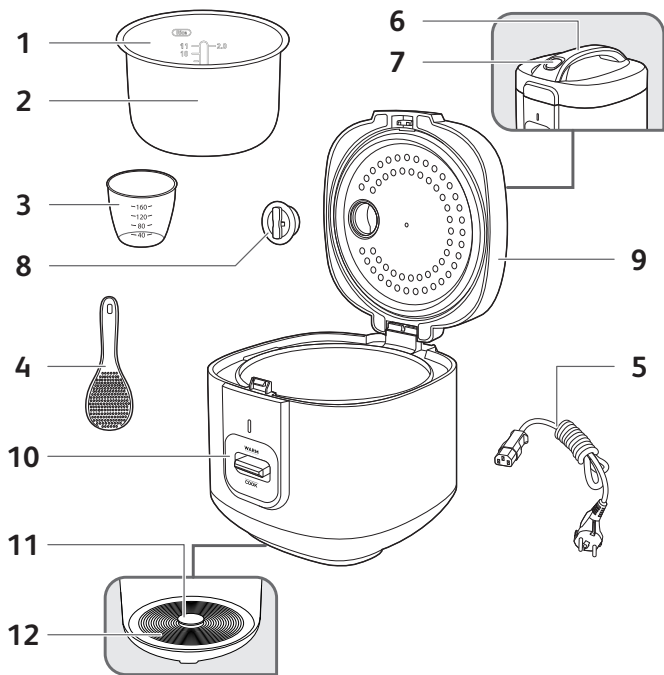


Control panel

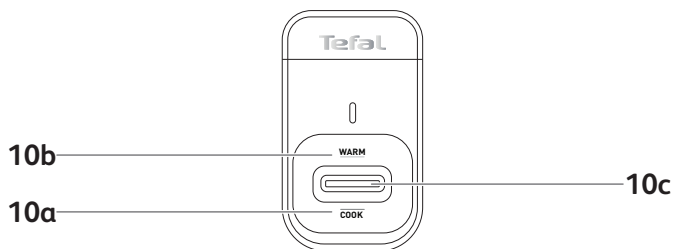

* ชนิดของปลั๊กจะเปลี่ยนแปลงตามข้อกำหนดของแต่ละประเทศ

* The plug type will be changed according to market requirement.

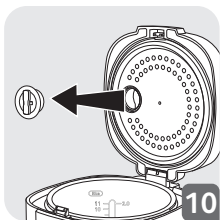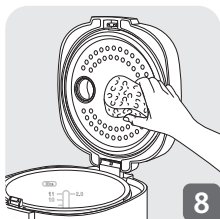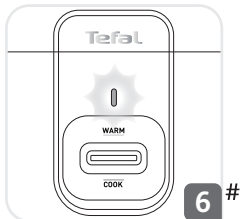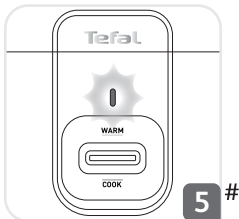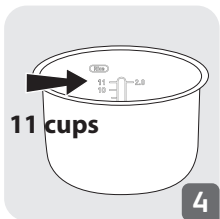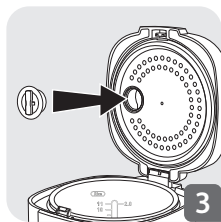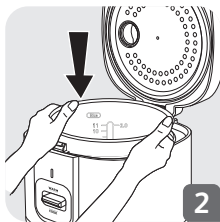

= ไฟสีแดง
= ไฟสีเขียว

= Red Light
= Green Light


คำอธิบาย

- | | | | |
|---|-------------------------------|----|--------------|
| 1 | ระดับน้ำและข้าว | 9 | ฝาปิด |
| 2 | หม้อเคลือบสารกันติด ถอดออกได้ | 10 | แผงควบคุม |
| 3 | ถ้วยตวง | a | หุง |
| 4 | ทัพพีตักข้าว | b | อุ่น |
| 5 | สายไฟ | c | สวิตช์ควบคุม |
| 6 | ที่จับฝา | 11 | เซ็นเซอร์ |
| 7 | ปุ่มเปิดฝา | 12 | แผ่นความร้อน |
| 8 | วาล์วไอน้ำ | | |

คำเตือนความปลอดภัย

อ่านและปฏิบัติตามคำแนะนำในการใช้งาน กรุณาเก็บไว้ในที่ปลอดภัย

- เครื่องใช้ไม่ได้มีวัตถุประสงค์ในการใช้งานร่วมกับตัวจับเวลาภายนอก หรือระบบควบคุมระยะไกลแบบแยกต่างหาก
- เด็กอายุ 8 ปีขึ้นไปสามารถใช้งานเครื่องใช้นี้ได้หากได้รับการควบคุมดูแล หรือคำแนะนำเกี่ยวกับการใช้งานอย่างปลอดภัยและเข้าใจถึงอันตรายที่เกี่ยวข้อง ห้ามไม่ให้เด็กทำความสะอาดหรือบำรุงรักษาเพียงลำพัง เว้นแต่ว่าเด็กจะมีอายุมากกว่า 8 ปี และอยู่ภายใต้การควบคุมดูแล เก็บเครื่องใช้และสายไฟให้ห่างจากเด็กอายุต่ำกว่า 8 ปี
- บุคคลผู้มีความบกพร่องทางร่างกาย ประสาทสัมผัสหรือทางจิต หรือขาดประสบการณ์และความรู้ สามารถใช้งานเครื่องใช้นี้ได้หากได้รับการควบคุมดูแล หรือได้รับคำแนะนำเกี่ยวกับการใช้งานอย่างปลอดภัยและเข้าใจถึงอันตรายที่เกี่ยวข้อง

- ไม่ควรปล่อยให้เด็กนำเครื่องใช้ไปเล่น
- เครื่องใช้ไม่ได้มีวัตถุประสงค์ในการใช้งานโดยบุคคล (รวมถึงเด็ก) ผู้มีความบกพร่องทางร่างกาย ประสาทสัมผัสหรือทางจิต หรือขาดประสบการณ์และความรู้ เว้นแต่จะได้รับการควบคุมดูแลหรือได้รับคำแนะนำเกี่ยวกับการใช้งานอย่างปลอดภัยจากบุคคลที่ทำหน้าที่ดูแลความปลอดภัยของบุคคลดังกล่าว
- ควรควบคุมดูแลไม่ให้เด็กนำเครื่องใช้ไปเล่น
- เนื่องจากเครื่องใช้นี้มีไว้สำหรับใช้งานในครัวเรือนเท่านั้น จึงไม่มีวัตถุประสงค์ในการใช้งานต่อไปนี้อยู่ นอกขอบเขตของการรับประกัน
 - พื้นที่ครัวสำหรับพนักงานในร้านค้า สำนักงาน และสภาพแวดล้อมการทำงานอื่น ๆ
 - โรงนา
 - ผู้เข้าพักในโรงแรม ที่พักชั่วคราว หรือสภาพแวดล้อมการพักอาศัยอื่น ๆ
 - ห้องพักร่วมอาหารเช้า
- **หากเครื่องใช้มีสายไฟแบบถอดได้:** หากสายไฟเสียหาย ต้องเปลี่ยนเป็นสายไฟหรือตัวเครื่องพิเศษซึ่งมีจำหน่ายที่ศูนย์บริการที่ได้รับอนุญาต
- **หากเครื่องใช้มีสายไฟแบบถาวร:** หากสายไฟเสียหาย ต้องดำเนินการเปลี่ยนโดยผู้ผลิต แผนกบริการหลังการขายของผู้ผลิต หรือบุคคลที่ได้รับการแต่งตั้งจากผู้ผลิต เพื่อหลีกเลี่ยงอันตราย
- ห้ามนำเครื่องใช้ไปแช่ในน้ำหรือของเหลวอื่น ๆ
- ใช้ผ้าชุบน้ำหมาด ๆ หรือฟองน้ำพร้อมน้ำยาล้างจานในการทำความสะอาด อุปกรณ์เสริมและชิ้นส่วนที่สัมผัสกับอาหาร ล้างออกด้วยผ้าชุบน้ำหมาด ๆ หรือฟองน้ำ ใช้ผ้าแห้งเช็ดอุปกรณ์เสริมและชิ้นส่วนที่สัมผัสกับอาหารให้แห้ง
- หากมีสัญลักษณ์  ปรากฏอยู่ที่เครื่องใช้ สัญลักษณ์นี้หมายความว่า “ระวัง: พื้นผิวอาจร้อนระหว่างใช้งาน “

- ระวัง: พื้นผิวของส่วนทำความร้อนอาจมีความร้อนหลงเหลืออยู่หลังการใช้งาน
- ระวัง: การใช้งานเครื่องใช้อย่างไม่เหมาะสมเสี่ยงต่อการบาดเจ็บ
- ระวัง: หากเครื่องใช้ไม่มีสายไฟแบบถอดได้ ห้ามให้ของเหลวหกใส่ขั้วต่อ
- ถอดปลั๊กเครื่องใช้ทุกครั้ง:
 - หลังการใช้งานทันที
 - เมื่อเคลื่อนย้ายเครื่องใช้
 - ก่อนการทำความสะอาดหรือการบำรุงรักษา
 - เมื่อฟังก์ชันทำงานอย่างผิดปกติ
- การสัมผัสพื้นผิวที่ร้อนของเครื่อง น้ำร้อน ไอน้ำ หรืออาหาร อาจทำให้เกิดแผลไหม้หรือแผลน้ำร้อนลวก
- เครื่องจะมีความร้อนและมีไอน้ำพุ่งออกมาระหว่างการทำอาหาร ห้ามนำใบหน้าและมือเข้าใกล้
- ควรจัดวางเครื่องทำอาหารในตำแหน่งที่มั่นคง โดยให้ด้ามจับ (หากมี) พร้อมใช้งานเพื่อหลีกเลี่ยงของเหลวร้อนหกถลักัน
- ห้ามนำใบหน้าและมือเข้าใกล้ช่องไอน้ำ ห้ามปิดกั้นช่องไอน้ำ
- หากมีปัญหาหรือข้อสงสัยประการใด กรุณาติดต่อฝ่ายลูกค้าสัมพันธ์หรือเข้าดูเว็บไซต์ของเรา
- เครื่องใช้นี้ใช้ได้ที่ระดับความสูงไม่เกิน 2,000 ม.
- เพื่อความปลอดภัยของคุณ เครื่องใช้นี้สอดคล้องกับข้อบังคับและระเบียบด้านความปลอดภัยที่มีผลบังคับใช้ ณ เวลาที่ผลิต (ข้อกำหนดระดับกำลังไฟฟ้า ความเข้ากันได้ทางแม่เหล็กไฟฟ้า ข้อบังคับวัสดุที่สัมผัสอาหาร สิ่งแวดล้อม...)
- ตรวจสอบว่าแรงดันไฟฟ้าของแหล่งจ่ายไฟสอดคล้องกับค่าแรงดันไฟฟ้าที่แสดงอยู่ในเครื่อง (ไฟฟ้ากระแสสลับ)
- เนื่องจากมีมาตรฐานต่าง ๆ ที่กำหนดใช้ หากนำเครื่องไปใช้งานภายนอกประเทศที่ซื้อมา กรุณานำเครื่องไปตรวจสอบที่ศูนย์บริการที่ได้รับอนุญาต

การเชื่อมต่อกับแหล่งจ่ายไฟ

- ห้ามใช้เครื่องในกรณีต่อไปนี้
 - เครื่องหรือสายไฟเสียหาย
 - เครื่องตกลง หรือมีร่องรอยความเสียหายที่เห็นได้ชัด หรือทำงานไม่ปกติ
 - หากมีเหตุการณ์ดังกล่าวเกิดขึ้น กรุณาส่งเครื่องไปยังศูนย์บริการที่ได้รับอนุญาต ห้ามถอดชิ้นส่วนของเครื่องด้วยตัวเอง
- ห้ามห้อยสายไฟ
- เสียบปลั๊กเครื่องใช้ในเต้าเสียบที่ต่อสายดินทุกครั้ง
- ห้ามใช้ปลั๊กพ่วง หากคุณยินยอมรับผิดชอบจากการใช้งานดังกล่าว กรุณาใช้เพียงปลั๊กพ่วงที่มีสภาพดี มีการต่อสายดิน และเหมาะสมกับกำลังการใช้งานของเครื่องเท่านั้น
- ห้ามถอดปลั๊กโดยดึงที่สายไฟ
- ถอดปลั๊กเครื่องจากแหล่งจ่ายไฟทุกครั้งหากปล่อยเครื่องทิ้งไว้ รวมถึงก่อนการประกอบ ถอดชิ้นส่วน หรือทำความสะอาด

การใช้งาน

- ใช้บนพื้นที่เรียบ มั่นคง และทนความร้อน โดยให้ห่างจากน้ำกระเด็น
- ห้ามให้ฐานของเครื่องสัมผัสกับน้ำ
- ห้ามใช้งานเครื่องขณะที่หม้อว่างเปล่าหรือไม่มีหม้อ
- ฟังก์ชันปุ่มในการทำอาหารต้องใช้งานได้เป็นอย่างดี ห้ามกีดกันหรือขัดขวางฟังก์ชันการเปลี่ยนเป็นฟังก์ชันอุ่นต่อเนื่องโดยอัตโนมัติ
- ห้ามถอดหม้อขณะใช้งานเครื่อง
- ห้ามวางเครื่องบนพื้นผิวที่ร้อนหรือแหล่งความร้อนอื่น ๆ หรือเปลวไฟโดยตรง เนื่องจากทำให้เกิดความขัดข้องหรืออันตราย
- หม้อและแผ่นทำความร้อนควรสัมผัสกันโดยตรง ตรวจสอบให้แน่ใจว่าไม่มีอาหารหรือของเหลวแทรกอยู่ระหว่างหม้อกับแผ่นทำความร้อน
- ห้ามวางเครื่องใกล้กับแหล่งความร้อนหรือในเตาอบที่ร้อน เพราะอาจเกิดความเสียหายร้ายแรงได้
- ห้ามใส่อาหารหรือน้ำลงในเครื่องจนกว่าหม้อจะอยู่ในตำแหน่งที่ถูกต้อง
- ใช้ตามปริมาณที่ระบุในสูตรอาหาร
- หากชิ้นส่วนใด ๆ ของเครื่องเกิดเปลวไฟ พยายามอย่าใช้น้ำดับไฟ ใช้ผ้าทำครัวชุบน้ำหมาด ๆ เพื่อดับไฟ
- ควรดำเนินการซ่อมแซมใด ๆ โดยศูนย์บริการเท่านั้น ด้วยอะไหล่ของแท้

ปกป้องสิ่งแวดล้อม

- เครื่องใช้ของคุณได้รับการออกแบบเพื่อให้ใช้งานได้หลายปี อย่างไรก็ตาม หากคุณตัดสินใจที่จะเปลี่ยนเครื่องใช้นี้ ลองคิดว่าคุณจะมีส่วนร่วมในการปกป้องสิ่งแวดล้อมได้อย่างไร
- ก่อนทิ้งเครื่องใช้ของคุณ ควรถอดแบตเตอรี่ออกจากตัวจับเวลา และนำไปทิ้งที่ศูนย์เก็บรวบรวมขยะในพื้นที่ (ขึ้นอยู่กับรุ่น)



การปกป้องสิ่งแวดล้อมต้องมาก่อน!

① เครื่องใช้ของคุณประกอบด้วยวัสดุมีค่า ซึ่งนำกลับมาใช้หรือรีไซเคิลได้

➔ นำไปทิ้ง ณ จุดเก็บรวบรวมขยะในพื้นที่

ก่อนการใช้งานครั้งแรก

- เปิดฝาโดยกดปุ่มเปิดบนฝา - ภาพที่ 1
- ถอดหม้อ - ภาพที่ 2 และวาล์วไอน้ำ - ภาพที่ 3
- ทำความสะอาดหม้อ วาล์ว และฝาชั้นในด้วยฟองน้ำและน้ำยาทำความสะอาด
- ใช้ผ้าชุบน้ำหมาด ๆ เช็ดด้านนอกของเครื่องและฝา
- เช็ดให้แห้งด้วยความระมัดระวัง
- ใส่ส่วนประกอบทุกชิ้นกลับเข้าที่ตำแหน่งเดิม เสียบสายแบบถอดได้ในช่องเสียบที่อยู่ตรงฐานหม้อหุงข้าว

การใช้หม้อหุงข้าว

ตรวจสอบผลสม - ความจุสูงสุดของหม้อ

- ซีตแบ่งระดับภายในหม้อมีหน่วยเป็นถ้วย ใช้ในการตรวจปริมาณน้ำเมื่อหุงข้าวและธัญพืชอื่น ๆ ปริมาณสูงสุดของน้ำ + ข้าวไม่ควรเกิน 11 ซีตระบุในถ้วย (สำหรับ RK362) หรือ 8 ซีตระบุในถ้วย (สำหรับ RK361) ภายในหม้อ - ภาพที่ 4
- ถ้วยพลาสติกที่นำมาในเครื่อง มีไว้เพื่อตรวจข้าว
- ในการหุงข้าวขาว 1 ถ้วย (สำหรับ 2 ที่เล็ก หรือ 1 ที่ใหญ่) ใช้ข้าวขาว 1 ถ้วยตวง จากนั้นเติมน้ำ 1 1/2 ถ้วย อ้างอิงคู่มือหุงข้าวด้านล่างนี้สำหรับการหุงข้าวปริมาณอื่น

คำแนะนำในการหุงข้าวขาว - 10 ถ้วย

ถ้วยตวงข้าวขาว	ปริมาณข้าวขาว	ระดับน้ำในหม้อ (+ ข้าว)	ปริมาณเสิร์ฟ
2	300 ก.	2 ชีตระบุในถ้วย	3 - 4 คน
4	600 ก.	4 ชีตระบุในถ้วย	5 - 6 คน
6	900 ก.	6 ชีตระบุในถ้วย	8 - 10 คน
8	1,200 ก.	8 ชีตระบุในถ้วย	13 - 14 คน
11	1,650 ก.	11 ชีตระบุในถ้วย	16 - 18 คน

หมายเหตุ: ใส่ข้าวก่อนเสมอ มิฉะนั้นจะมีน้ำมากเกินไป

โปรแกรมการหุง

หุงข้าว

- กดที่สวิตช์ควบคุม ไฟระบุการหุงจะเปลี่ยนเป็นสีแดง ซึ่งแสดงว่าเริ่มหุงข้าวแล้ว - ภาพที่ 5
- เมื่อหุงเสร็จ เครื่องจะเปลี่ยนเป็นอุ่นต่อเนื่องโดยอัตโนมัติ ไฟระบุการหุงจะเปลี่ยนเป็นสีเขียว - ภาพที่ 6
- กรุณาตรวจสอบสถานะ "อุ่นต่อเนื่อง" ไว้หลายนาทีก่อนเสิร์ฟ เพื่อรสชาติความอร่อยของข้าว

อุ่น

- เมื่อเสียบปลั๊กเครื่อง ไฟระบุจะสว่างขึ้นเป็นสีเขียว และเครื่องจะเริ่มอุ่นต่อเนื่องโดยอัตโนมัติ
- เมื่อหุงเสร็จ เครื่องจะเปลี่ยนเป็นอุ่นต่อเนื่องโดยอัตโนมัติ ไฟระบุการหุงจะเปลี่ยนเป็นสีเขียว
- สำหรับ RK361 เวลาอุ่นต่อเนื่องสูงสุดคือ 5 ชั่วโมง สำหรับ RK362 เวลาอุ่นต่อเนื่องสูงสุดคือ 24 ชั่วโมง

การทำความสะอาดและการบำรุงรักษา

- ตรวจสอบให้แน่ใจว่าถอดปลั๊กหม้อหุงข้าวและหม้อหุงข้าวเย็นสนิทแล้ว ก่อนทำความสะอาดและบำรุงรักษา - ภาพที่ 7
- แนะนำให้ทำความสะอาดเครื่องภายหลังการใช้งานในแต่ละครั้งด้วยฟองน้ำ - ภาพที่ 8, 9
- หม้อ ถ้วย และทัพพีตักข้าวใช้กับเครื่องล้างจานได้

หม้อ

- ไม่แนะนำให้ใช้ผงขัดและฟองน้ำที่มีใยขัด
- หากมีอาหารติดอยู่ที่ก้นหม้อ แนะนำให้เติมน้ำลงในหม้อเพื่อแช่ทิ้งไว้สักพักก่อนทำความสะอาด
- เช็ดหม้อให้แห้งด้วยความระมัดระวัง

การดูแลรักษาหม้อ

สำหรับหม้อ ปฏิบัติตามคำแนะนำด้านล่างนี้ด้วยความระมัดระวัง

- ไม่แนะนำให้นำอาหารในหม้อ เพื่อเป็นการรักษาคุณภาพของหม้อ
- ใช้ทัพพีพลาสติกที่นำมาพร้อมกับเครื่อง หรือทัพพีไม้ (หลีกเลี่ยงทัพพีโลหะ) เพื่อหลีกเลี่ยงความเสียหายต่อพื้นผิวหม้อ
- ห้ามเทน้ำส้มสายชูลงในหม้อ เพื่อหลีกเลี่ยงความเสี่ยงจากการกัดกร่อน

ทำความสะอาดวาล์วไอน้ำ

- ในการทำความสะอาดวาล์วไอน้ำ กรุณาถอดออกจากฝา - ภาพที่ 10 หลังจากทำความสะอาด กรุณาเช็ดให้แห้งแล้วใส่กลับไว้ที่ฝา

การทำความสะอาดและการดูแลรักษาส่วนประกอบอื่น ๆ ของเครื่อง

- ทำความสะอาดด้านนอกของหม้อหุงข้าว ด้านในของฝา และสายไฟด้วยผ้าชุบน้ำหมาด ๆ แล้วเช็ดให้แห้ง ห้ามใช้ผลิตภัณฑ์ขัดลอก
- ห้ามใช้น้ำทำความสะอาดภายในของตัวเครื่อง เนื่องจากอาจทำให้เซ็นเซอร์ตรวจจับความร้อนได้รับความเสียหาย

หมายเหตุ

- ห้ามเปิดฝามือในระหว่างการหุงข้าว เพราะไอน้ำจะระเหยออกมา ซึ่งจะส่งผลกระทบต่อระยะเวลาในการหุงข้าวและรสชาติ
- เมื่อหุงเสร็จแล้วและไฟเปลี่ยนเป็นสีเขียว คนข้าวแล้วทิ้งไว้ในหม้อหุงข้าวสักสองสามนาที เพื่อให้ได้ข้าวที่สุกพอดี โดยที่เมล็ดข้าวไม่ติดกัน
- ห้ามสัมผัสส่วนประกอบทำความร้อนขณะที่เครื่องทำงานอยู่
- เช็ดด้านนอกของหม้ออย่างระมัดระวัง (โดยเฉพาะกันหม้อ) ตรวจสอบให้แน่ใจว่าไม่มีสิ่งตกค้างหรือของเหลวแปลกปลอมอยู่ใต้หม้อ และบนส่วนประกอบทำความร้อน
- ห้ามวางหม้อบนช่องระบายไอน้ำระหว่างการหุง เนื่องจากอาจเกิดอันตรายจากการลวก
- ใช้หม้อชั้นในที่ให้มาพร้อมกับเครื่องเท่านั้น
- ห้ามเทน้ำหรือใส่ส่วนผสมลงในเครื่องโดยที่ไม่มีหม้ออยู่ด้านบน

คำอธิบายเกี่ยวกับความผิดปกติของเครื่อง	สาเหตุ	วิธีแก้ไข
ไฟเครื่องดับและเครื่องไม่ روشن	เสียบปลั๊กหม้อหุงข้าวแล้ว	ส่งให้ศูนย์บริการที่ได้รับอนุญาตเพื่อซ่อมแซม
	ไม่ได้เสียบปลั๊กหม้อหุงข้าว	ตรวจสอบให้แน่ใจว่าเสียบปลั๊กเครื่องอย่างถูกต้อง
ไฟสีเขียวสว่างและเครื่องไม่ได้หุงข้าวอยู่	ปัญหาเกี่ยวกับไฟ	ส่งให้ศูนย์บริการที่ได้รับอนุญาตเพื่อซ่อมแซม
	สวิตช์ควบคุมไม่ได้อยู่ที่ตำแหน่งการหุง	กดปุ่มควบคุมไปยังตำแหน่งการหุง
การรั่วซึมของไอน้ำระหว่างการใช้งาน	ปิดฝาไม่ถูกต้อง	เปิดและปิดฝาคีกรั้ง
	วาล์วไอน้ำไม่อยู่ในตำแหน่งที่ถูกต้อง หรือไม่สมบูรณ์	หยุดการหุง (ถอดปลั๊กเครื่อง) และตรวจสอบว่าวาล์วอยู่ในสภาพที่สมบูรณ์ และอยู่ในตำแหน่งที่ถูกต้อง
	ฝาหรือปะเก็นวาล์วไอน้ำเสียหาย	ส่งให้ศูนย์บริการที่ได้รับอนุญาตเพื่อซ่อมแซม
ข้าวกึ่งสุกกึ่งดิบหรือข้าวหุงสุกเกินไป	ปริมาณน้ำมากเกินไปหรือไม่เพียงพอ เมื่อเทียบกับปริมาณข้าว	โปรดดูตารางคู่มือการหุง (หน้า 10) สำหรับปริมาณน้ำ
อุ่นต่อเนื่องอัตโนมัติล้มเหลว (เครื่องคงอยู่ในการหุง ไม่ติดกลับ)		ส่งให้ศูนย์บริการที่ได้รับอนุญาตเพื่อซ่อมแซม

ข้อควรระวัง: หากหม้อขึ้นในเสียบรูปทรง ห้ามนำมาใช้งานให้นำไปเปลี่ยนที่ศูนย์บริการที่ได้รับอนุญาตสำหรับการซ่อม

DESCRIPTION

- 1 Graduation for water and rice
- 2 Removable nonstick bowl
- 3 Measuring cup
- 4 Rice spatula
- 5 Power cord
- 6 Lid handle
- 7 Lid opening button
- 8 Steam valve
- 9 Lid
- 10 Control panel
 - a Cook
 - b Warm
 - c Control switch
- 11 Sensor
- 12 Heating plate

SAFETY WARNINGS


Read and follow the instructions for use. Keep them safe.

- This appliance is not intended to be operated by means of an external timer or a separate remote-control system.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 years and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been

given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- Children shall not play with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is for household use only. It is not intended for even use in the following applications and the guarantee will not apply for:
 - Staff pantry areas in shops, offices and other working environments
 - Farm houses
 - By clients in hotels, motels and other such kind of residential type environments
 - Bed and breakfast type environments
- **If your appliance is fitted with fixed power cord:** if the power supply cord is damaged, it must be replaced by the manufacturer, the manufacturer's after-sales service department

or similarly qualified person in order to avoid any danger.

- The appliance must not be immersed in water or any other liquid.
- Use a damp cloth or sponge with washing up liquid to clean the accessories and parts in contact with food. Rinse with a damp cloth or sponge. Dry carefully.
- If the symbol  is marked on the appliance, this symbol means “ Caution: surfaces may become hot during use ”.
- Caution: the surface of heating element is subject to residual heat after use.
- Caution: risk of injury due to improper use of the appliance.
- Caution: if your appliance has a removable power cord, do not spill liquid on the connector.
- Always unplug the appliance:
 - immediately after use
 - when moving it
 - prior to any cleaning or maintenance
 - if it fails to function correctly
- Burns can occur by touching the hot surface of the appliance, the hot water, steam or the food.
- During cooking, the appliance gives out heat and steam. Keep face and hands away.

- Do not obstruct the steam outlet.
- For any problems or queries please contact our After Sales Care or consult our website.
- The appliance can be used up to an altitude of 2000 m.

- For your safety, this appliance complies with the safety regulations and directives in effect at the time of manufacture (Low-voltage Directive, Electromagnetic Compatibility, Food Contact Materials Regulations, Environment...).
- Check that the power supply voltage corresponds to that shown on the appliance (alternating current).
- Given the diverse standards in effect, if the appliance is used in a country other than that in which it is purchased, have it checked by an approved service centre.

CONNECTING TO THE POWER SUPPLY

- Do not use the appliance if:
 - the appliance or the cord is damaged.
 - the appliance has fallen or shows visible damage or does not work properly.
 - In the event of the above, the appliance must be sent to an approved service centre. Do not take the appliance apart yourself.
- Do not leave the cord hanging.
- Always plug the appliance into an earthed socket.
- Do not use an extension lead. If you accept liability for doing so, use only an extension lead which is in good condition, has an earthed plug and is suited to the power of the appliance.
- Do not unplug the appliance by pulling on the cord.

USING

- Use a flat, stable, heat-resistant work surface away from any water splashes.
- Do not allow the base of the appliance to come into contact with water.
- Never try to operate the appliance when the pot is empty or without the pot.
- The cooking function/knob must be allowed to operate freely. Do not prevent or obstruct the function from automatically changing to the keep warm function.
- Do not remove the pot while the appliance is working.
- Do not put the appliance directly onto a hot surface, or any other source of heat or flame, as it will cause a failure or danger.
- The pot and the heating plate should be in direct contact. Ensure that no food or liquid is inserted between the pot and heating plate.
- Do not place the appliance near a heat source or in a hot oven, as serious damage could result.
- Do not put any food or water into the appliance until the pot is in place.
- Respect the levels indicated in the recipes.
- Should any part of your appliance catch fire, do not attempt to put it out with water. To smother the flames use a damp tea towel.
- Any intervention should only be made by an approved or authorized service centre with original spare parts.
- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.

PROTECT THE ENVIRONMENT

- Your appliance has been designed to operate for many years. However, when you decide to replace it, remember to think about how you can contribute to protecting the environment.
- Before discarding your appliance you should remove the battery from the timer and dispose of it at a local civic waste collection centre (according to model).

Environment protection first!



① Your appliance contains valuable materials which can be recovered or recycled.

➡ Leave it at a local civic waste collection point.

BEFORE FIRST USE

- Open the lid by pressing the opening button on the lid. – Fig. 1
- Remove the pot – Fig.2, and the steam valve. – Fig.3
- Clean the pot, the valve and the inner lid with a sponge and washing up liquid.
- Wipe the outside of the appliance and the lid with a damp cloth.
- Dry off carefully.
- Put all the elements back in their original position. Install the detachable cord into the socket on the cooker base.

USING YOUR RICE COOKER

Measuring the ingredients - Max capacity of the bowl

- The graduated markings on the inside of the bowl are given in cups, these are used for measuring the amount of water when cooking rice and other cereals. The maximum quantity of water + rice should not exceed the 11 cups mark (for RK362) or 8 cups mark (for RK361) inside the bowl – Fig.4.
- The plastic cup provided with your appliance is for measuring rice.
- To cook 1 cup of white rice (serves 2 small or 1 large portion), use 1 measuring cup of white rice and then add 1 1/2 measuring cup of water. To cook other quantity of rice, refer to cooking guide below.

COOKING GUIDE FOR WHITE RICE -10 CUPS

Measuring cups of white rice	Weight of white rice	Water level in the bowl (+ the rice)	Serves
2	300 g	2 cup mark	3per.-4p er.
4	600 g	4 cup mark	5per.-6per.
6	900 g	6 cup mark	8per.-10per.
8	1200 g	8 cup mark	13per.-14per.
11	1650 g	11 cup mark	16per.-18per.

EN

Note: Always add the rice first otherwise you will have too much water.

COOKING PROGRAM

Rice

- Press downwards on the control switch, the cooking indicator light changes to red showing that the cooking has begun. – Fig. 5
- At the end of cooking, it will turn to keep warm automatically, the cooking indicator light changes to green. – Fig. 6
- Please maintain “Keep Warm” status for several minutes before serving for good taste of rice.

Warm

- When you plug in the appliance, the indicator light will light up in green and the appliance will start to keep warm automatically
- At the end of cooking, the appliance will turn to keep warm automatically, the cooking indicator light changes to green
- For RK361, the maximum keep warm time is 5 hours; For RK362, the maximum keep warm time is 24 hours.

CLEANING AND MAINTENANCE

- Please ensure the rice cooker is unplugged and completely cooled down before cleaning and maintenance. – Fig. 7
- It is strongly advised to clean the appliance after each use with a sponge. – Fig. 8, 9
- The pot, the cup and the rice spoon are dishwasher safe.

Pot

- Scouring powders and abrasive sponges are not recommended.
- If food has stuck to the bottom, you may put water in the pot to soak for a while before washing.
- Dry the pot carefully.

Taking care of the pot

For the pot, carefully follow the instructions below:

- To ensure the maintenance of pot quality, it is recommended not to cut food in it.
- Use the plastic spoon provided or a wooden spoon (avoid metal spoon), so as to avoid damaging the pot surface.
- To avoid any risk of corrosion, do not pour vinegar into the pot.

Cleaning the steam valve

- To clean the steam valve, please remove it from the lid. – Fig. 10
After cleaning, please wipe dry and put it back to the lid.

Cleaning and care of the other parts of the appliance

- Clean the outside of the Rice Cooker, the inside of the lid and the cord with a damp cloth and wipe dry. Do not use abrasive products.
- Do not use water to clean the interior of the appliance body as it could damage the heat sensor.

NOTE

- Do not open the lid during cooking as steam will escape and this will affect the cooking time and the taste.
- On completion of cooking, when the light changes to green, stir the rice and then leave it in the rice cooker for a few minutes longer in order to get perfect rice with separate grains.
- **Do not touch the heating element when the product is powered on.**
- **Carefully wipe the outside of the pot (especially the bottom). Make sure that there are no foreign residues or liquid underneath the pot and on the heating element**
- **Never place your hand on the steam vent during cooking, as there is a danger of burns.**

- **Only use the inner pot provided with the appliance.**
- **Do not pour water or put ingredients in the appliance without the pot inside.**

TROUBLESHOOTING

Malfunction description	Cause	Solution
Appliance light is off and appliance is not heating	Rice cooker is plugged in,	Send to authorised service center for repair.
	Rice cooker not plugged in.	Ensure the appliance is plugged in correctly.
The green light is on and appliance is not cooking rice	Problem with the light.	Send to authorised service center for repair.
	Control switch is not in the cooking position.	Turn the control dial to the cooking position.
Steam leakage during use	Lid is not closed correctly.	Open and close the lid.
	Steam valve not well positioned or incomplete.	Stop the cooking (unplug the product) and check the valve is complete and well positioned.
	Lid or steam valve gasket is damaged.	Send to authorised service center for repair.
Rice half cooked or overcooked	Too much or not enough water compared to rice quantity.	Refer to Cooking Guide Table (Page 10) for water quantity.
Automatic keep warm fails (appliance stays in cooking function).		Send to authorised service center for repair.

Caution: if inner bowl is deformed, do not use it anymore and get a replacement bowl from the authorised service center.

TH

p. 4 – 12

EN

p. 13 – 22