

Tefal[®]



TH

EN



INDUCTION COOKER

www.tefal.com

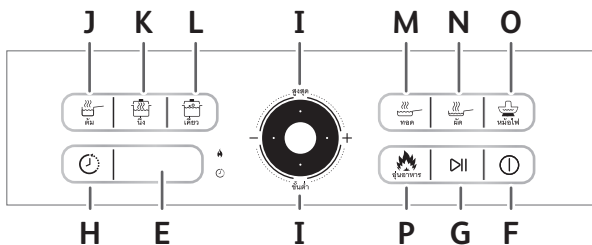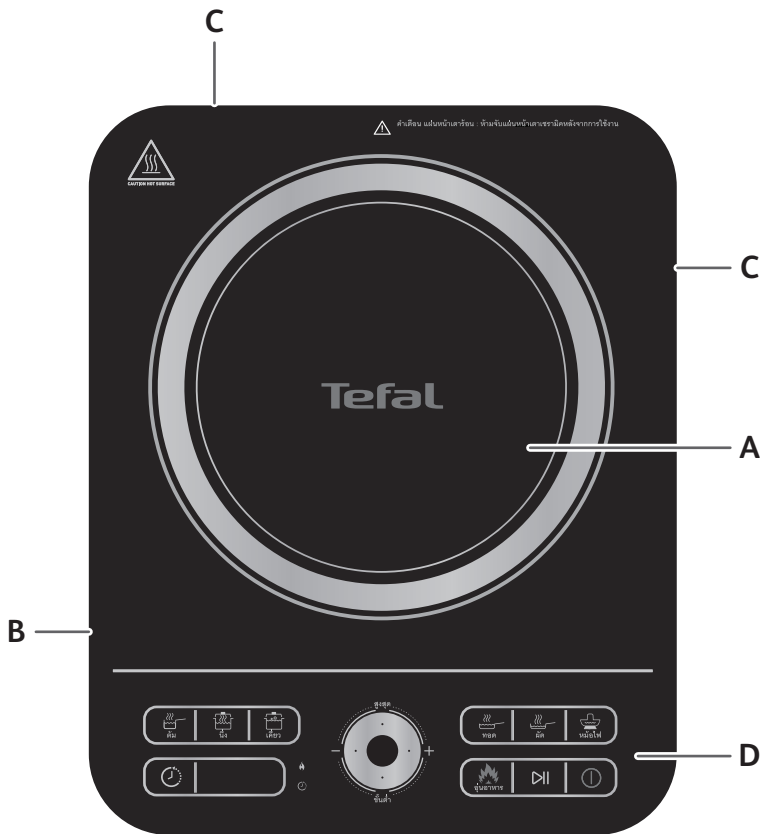

- อ่านคำแนะนำเพื่อการใช้งานนี้อย่างละเอียด ก่อนใช้อุปกรณ์ในครั้งแรก และเก็บไว้ในใกล้มือเพื่อการอ้างอิงในอนาคต
- อุปกรณ์นี้ไม่ได้ทำงานโดยใช้นาฬิกาตั้งเวลาภายนอก หรือระบบควบคุมระยะไกลแบบแยก
- อุปกรณ์นี้ไม่ได้มีไว้เพื่อใช้งานสำหรับบุคคล (รวมทั้งเด็ก) ที่มีความบกพร่องทางร่างกายทางประสาทสัมผัส หรือทางจิตใจ หรือขาดประสบการณ์และความรู้ เว้นแต่พวกเขาจะอยู่ในความควบคุมหรือการให้คำแนะนำเกี่ยวกับการใช้อุปกรณ์จากบุคคลที่รับผิดชอบด้านความปลอดภัยของพวกเขา
- เด็กๆ ต้องอยู่ภายใต้การควบคุมดูแล เพื่อให้แน่ใจว่าพวกเขาจะไม่เล่นกับอุปกรณ์
- อุปกรณ์นี้สามารถใช้งานโดยเด็กที่มีอายุตั้งแต่ 8 ปีขึ้นไป และบุคคลที่มีความบกพร่องทางร่างกายทางประสาทสัมผัส หรือทางจิตใจ หรือขาดประสบการณ์และความรู้ เว้นแต่พวกเขาจะอยู่ในความควบคุมหรือการให้คำแนะนำเกี่ยวกับการใช้อุปกรณ์ด้วยวิธีที่ปลอดภัย และเข้าใจในอันตรายที่เกี่ยวข้อง การทำความสะอาดหรือการบำรุงรักษาไม่ควรดำเนินการโดยเด็ก เว้นแต่เด็กนั้นจะมีอายุมากกว่า 8 ปีและอยู่ภายใต้การควบคุมดูแล
- เก็บอุปกรณ์และสายไฟให้ห่างจากเด็กอายุต่ำกว่า 8 ปี
- เนื่องจากอุปกรณ์นี้มีไว้เพื่อใช้งานภายในบ้านเท่านั้น และจะไม่มีกรับประกันสำหรับการใช้งานเพื่อ:
 - พื้นที่ครัวสวนพนักงานภายในร้านค้า, สำนักงาน

และสภาพการทำงานแบบอื่น

- บ้านไร่
- โดยลูกค้าในโรงแรม และสภาพแวดล้อมเพื่อการพักอาศัยแบบอื่น
- สภาพแวดล้อมแบบห้องพักร่วมบริการอาหารเช้า
- เพื่อความปลอดภัย หากสายไฟได้รับความเสียหาย มันต้องได้รับการเปลี่ยนโดยผู้ผลิต ศูนย์บริการที่ผ่านการรับรอง หรือบุคคลที่มีคุณสมบัติคล้ายกัน
- ค่าเตือน: หากพื้นผิวร้าว ปิดเตาเพื่อหลีกเลี่ยงการเกิดไฟฟ้าช็อต
- ไม่ควรวางวัตถุที่เป็นโลหะ เช่น มีด ส้อม ช้อน และ ฝาปิด บนเตาเพราะจะทำให้ร้อนได้
- อุปกรณ์นี้ได้รับการออกแบบมาเพื่อใช้งานภายในบ้านเท่านั้น ในกรณีของการใช้งานเพื่อประกอบอาชีพ การใช้งานที่ไม่เหมาะสม หรือการไม่ปฏิบัติตามคำแนะนำ ผู้ผลิตจะไม่รับผิดชอบ และการรับประกันจะไม่มีผลบังคับใช้
- เพื่อความปลอดภัยของคุณ อุปกรณ์นี้ตรงตามมาตรฐานและข้อบังคับที่กำหนด (คำสั่งในเรื่องแรงดันไฟฟ้าต่ำ การเข้ากันได้ของแม่เหล็กไฟฟ้า วัสดุที่สัมผัสกับอาหาร สภาพแวดล้อม ฯลฯ)
- อุปกรณ์นี้ได้รับการออกแบบมาเพื่อใช้งานกับไฟฟ้ากระแสสลับเท่านั้น ก่อนใช้งานอุปกรณ์ในครั้งแรก ให้ตรวจสอบว่าแรงดันไฟฟ้ากระแสหลักของคุณตรงกันกับแรงดันไฟฟ้าที่ระบุอยู่บนแผ่นแสดงข้อมูลบนอุปกรณ์
- ความผิดพลาดในการเชื่อมต่อ เป็นเหตุให้การรับประกันเป็นโมฆะ
- เสี่ยงปลั๊กอุปกรณ์เข้ากับเต้ารับเฉพาะที่มีสายดิน ห้ามใช้เต้ารับที่เป็นตัวปรับต่อ หรือห้ามเชื่อมต่ออุปกรณ์อื่นใดเข้ากับเต้ารับเดียวพร้อมๆ กัน เพื่อหลีกเลี่ยงกระแสไฟฟ้าเกินพิกัดและความเสี่ยงของเพลิงไหม้
- ห้ามจุ่มอุปกรณ์ หรือสายไฟลงในน้ำหรือของเหลวชนิดอื่น
- ด้วยมาตรฐานการใช้งานที่หลากหลาย หากอุปกรณ์ถูกนำไปใช้งานในประเทศอื่นนอกเหนือจากประเทศที่ซื้ออุปกรณ์ อุปกรณ์ควรได้รับการตรวจสอบโดยศูนย์บริการที่ผ่านการรับรอง
- ถอดบรรจุภัณฑ์ทั้งหมด สติกเกอร์ ตลอดจนอุปกรณ์เสริมจากด้านในและด้านนอกของอุปกรณ์
- วางและใช้อุปกรณ์บนพื้นผิวที่ราบเรียบ มั่นคง ทนความร้อน ซึ่งห่างจากการสาดกระเด็นของน้ำ
- ห้ามวางหรือใช้อุปกรณ์นี้ในสภาพแวดล้อมที่มีความชื้นสูง
- ห้ามวางหรือใช้แผ่นเหนียวบนพื้นผิวที่เป็นโลหะหรืออะลูมิเนียม

- รักษาระยะห่างอย่างน้อย 10 ซม. (4 นิ้ว) สำหรับทุกด้านของอุปกรณ์ เพื่อให้มีการระบายอากาศที่เพียงพอ
- ห้ามวางหรือใช้อุปกรณ์ ใกล้ผนัง หรือใต้ตู้ติดผนัง
- ห้ามวางหรือใช้อุปกรณ์ ใต้หรือใกล้กับวัตถุไวไฟ (เช่น ม่าน เป็นต้น)
- ห้ามวางหรือใช้อุปกรณ์ บนหรือใกล้กับตะแกรงบนเตาไฟ หรือแหล่งความร้อนอื่น
- ผู้ที่มีการติดตั้งเครื่องคุมจังหวะหัวใจไว้บนร่างกาย หรืออุปกรณ์ทางการแพทย์ที่คล้ายกัน ควรอยู่ห่างจากเตาแม่เหล็กไฟฟ้า เมื่อมันถูกเชื่อมต่อเข้ากับกระแสไฟฟ้า หากมีข้อสงสัย ให้ปรึกษาแพทย์ก่อนใช้ผลิตภัณฑ์นี้ เพื่อหลีกเลี่ยงอันตราย
- คลายสายไฟออกให้สุดสายก่อนใช้งาน
- ห้ามใช้ปลั๊กพ่วง หากคุณจำเป็นต้องใช้ ให้ใช้เฉพาะปลั๊กพ่วงซึ่งอยู่ในสภาพที่ดี มีปลั๊กพร้อมสายดิน และตรงกับกำลังไฟฟ้าของอุปกรณ์
- ห้ามปล่อยอุปกรณ์ขาดการดูแล ในขณะที่กำลังเชื่อมต่อเข้ากับกระแสไฟฟ้า แม้จะเป็นระยะเวลาไม่นาน โดยเฉพาะอย่างยิ่ง เมื่อมีเด็กอยู่ในบริเวณนั้นด้วย
- ห้ามแขวนสายไฟในบริเวณที่เด็กๆ อาจเอื้อมถึง
- สายไฟต้องไม่อยู่ใกล้กับ หรือสัมผัสกับส่วนที่ร้อนของอุปกรณ์ หรือไม่อยู่ใกล้กับแหล่งความร้อน หรือไม่วางบนของมีคม
- ใช้ความระมัดระวังทุกอย่างที่จำเป็น เพื่อป้องกันไม่ให้มีใครสะดุดสายปลั๊กพ่วง
- ปิดสวิตช์ และตัดการเชื่อมต่ออุปกรณ์จากกระแสไฟฟ้าเมื่อไม่ใช้งาน
- ห้ามถอดปลั๊ก โดยดึงสายไฟ
- ตรวจสอบอุปกรณ์และสายไฟเพื่อหาสัญญาณเตือนของการสึกหรอหรือความเสียหาย ก่อนที่จะเชื่อมต่อกับกระแสไฟฟ้า
- ห้ามใช้อุปกรณ์ หากอุปกรณ์ไม่ทำงานอย่างถูกต้องเหมาะสม หากอุปกรณ์ได้รับความเสียหาย หรือหากสายไฟหรือปลั๊กไฟได้รับความเสียหาย เพื่อความปลอดภัย ส่วนประกอบดังกล่าวต้องได้รับการเปลี่ยนโดยศูนย์บริการที่ผ่านการรับรอง
- การกระทำใดๆ นอกเหนือจากการทำความสะอาดและการบำรุงรักษาตามปกติโดยลูกค้า ต้องดำเนินการโดยศูนย์บริการที่ผ่านการรับรอง
- ห้ามสัมผัสพื้นผิวร้อนของอุปกรณ์ มันจะยังคงร้อนไปอีกชั่วคราวหลังจากใช้งาน
- ห้ามเคลื่อนย้ายอุปกรณ์ดราบบเท่าที่มันยังร้อน
- ปล่อยให้อุปกรณ์เย็นตัวลงอย่างสมบูรณ์ ก่อนทำความสะอาดและจัดเก็บ
- ดูแลเตาแม่เหล็กไฟฟ้าให้สะอาดอยู่เสมอ เพื่อหลีกเลี่ยงไม่ให้ฝุ่นเข้าไปในมอเตอร์พัดลม ซึ่งเป็นเหตุให้เครื่องทำงานผิดปกติ
- หากส่วนประกอบของอุปกรณ์ติดไฟ ห้ามดับเปลวไฟด้วยน้ำ ให้ตัดการเชื่อมต่อจากอุปกรณ์ และกลบเปลวไฟด้วยผ้าชุบน้ำหมาดๆ
- วางหม้อตรงกลางวงทำอาหาร

- อย่าปล่อยให้หม้อร้อนเกินไปหรืออุ่นหม้อเปล่าเป็นเวลานาน
- ห้ามอุ่นอาหารในกระป๋องหรือภาชนะอัดอากาศ เพื่อหลีกเลี่ยงการระเบิดจากการขยายตัวของอากาศ

เก็บคำแนะนำนี้ในสถานที่ปลอดภัย

อุปกรณ์นี้ได้รับการออกแบบมาเพื่อใช้งานภายในบ้านเท่านั้น การใช้งานเชิงพาณิชย์ การใช้งานที่ไม่เหมาะสม หรือการไม่ปฏิบัติตามคำแนะนำ ผู้ผลิตจะไม่รับผิดชอบ และการรับประกันจะไม่มีผลบังคับใช้

คุณสมบัติทางเทคนิค

รุ่น	กำลังไฟสูงสุด	ช่วงการปรับกำลังไฟ	รูปแบบการแสดงผลหน้าจอ	ช่วงการปรับอุณหภูมิ	แรงดันไฟฟ้า ~ ความถี่
IH7208	2100 วัตต์	100 วัตต์-2100 วัตต์	ดิจิทัล	60°C-240°C	220V-240V/ 50Hz

โครงสร้างของตัวเครื่อง


A ผิวหน้าเตาผลิตจากแผ่นเซรามิค
B ช่องอากาศเข้า
C ช่องอากาศออก
D แผงควบคุมการทำงาน
E หน้าจอดิจิทัล
F ปุ่มเปิด/ปิด
G ปุ่มหยุดชั่วคราว
H ฟังก์ชันตั้งเวลา

I ปุ่ม "สูงสุด"/"ต่ำสุด"/"+"/"-"
J ฟังก์ชันต้ม
K ฟังก์ชันนึ่ง
L ฟังก์ชันเคี่ยว
M ฟังก์ชันทอด
N ฟังก์ชันผัด
O ฟังก์ชันหม้อไฟ
P โหมดเพิ่มกำลังไฟ

หลักการทํางาน

หลักการทํางานของเตาแม่เหล็กไฟฟ้าที่ ทำให้เกิดความร้อน คือ เกิดจากกระแสแม่เหล็กไฟฟ้าเหนี่ยวนาหรือกระแสไหลวน (eddy current) ซึ่งกระแสดังกล่าวเกิดขึ้นเมื่อ มีการเคลื่อนที่ ผ่านไปมาระหว่างกันภาชนะประกอบอาหาร เหนี่ยวนานาแม่เหล็กได้กับสนามแม่เหล็ก

เมื่อกระแสไฟฟ้าผ่านไป ที่ ขดลวดเหนี่ยวนาจะก่อให้เกิดสนามแม่เหล็ก เมื่อเส้นแรงแม่เหล็กผ่านไป ที่กันภาชนะประกอบอาหาร จะเกิดกระแสแม่เหล็กไฟฟ้าเหนี่ยวนาไหลวนที่กันภาชนะเป็นจำนวนมาก ซึ่งจะทำให้กันภาชนะร้อนขึ้นอย่างรวดเร็ว

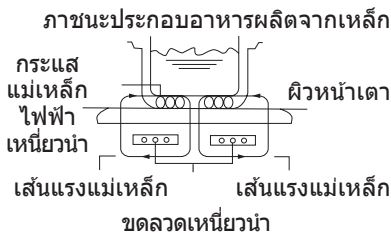

ลักษณะพิเศษของผลิตภัณฑ์

มีระบบรักษาความปลอดภัยหลายชั้น

- ระบบป้องกันแรงดันไฟฟ้าสูงและต่ำเกินกว่าที่ระบุ
- เหมาะกับภาชนะประกอบอาหารที่มีคุณสมบัติเหนี่ยวนาแม่เหล็กไฟฟ้าได้
- ซึ่งกันภาชนะมีเส้นผ่าศูนย์กลางไม่น้อยกว่า 12 ซม. และไม่เกิน 24 ซม.
- ระบบป้องกันการปิดเครื่องเองอัตโนมัติ (2 ชั่วโมง) สำหรับฟังก์ชัน "ทอด" "ผัด" และ "หม้อไฟ"
- ระบบปิดเครื่องเองอัตโนมัติภายใน 2 ชั่วโมง หากไม่ใช้งาน สำหรับฟังก์ชันใช้มือ ผัด และทอด

รักษาสีเงาแวววาว

- ไม่มีเปลวไฟและควันระหว่างประกอบอาหาร เพื่อสุขภาพที่ดีของคนในครอบครัว
- ปลอดภัยจากอันตรายที่ อาจเกิดจากการรั่ว การระเบิด และการลวกไหม้ของก๊าซหุงต้ม

ควบคุมด้วยไมโครคอมพิวเตอร์

- ปรับกำลังไฟได้หลายระดับ: จากกำลังไฟต่ำถึงกำลังไฟสูง เพื่อการทำอาหารที่ หลากหลายเมนู
- ปรับอุณหภูมิได้หลายระดับ: รักษาอุณหภูมิที่ เลือกไว้และควบคุมอุณหภูมิได้อย่างถูกต้องแม่นยำ
- ฟังก์ชันตั้งเวลา: สามารถตั้งเวลาในการทำอาหารได้
- มีเสียงเตือนอัตโนมัติ:
- หากไม่มีภาชนะประกอบอาหารวางบนเตาแม่เหล็กไฟฟ้าหรือใช้ภาชนะประกอบอาหารที่ไม่เหมาะสมสำหรับเตาแม่เหล็กไฟฟ้า.

ทำความสะดวกง่าย

- ผิวหน้าเตาผลิตจากแผ่นเซรามิคคุณภาพสูง ทนทาน ง่ายต่อการทำความสะอาดและบำรุงรักษา
- ในกรณี ที่มีน้ำล้นออกมาเลอะหน้าเตา ให้ยกภาชนะประกอบอาหารออก และเช็ดด้วยผ้าให้สะอาด

คำแนะนำการใช้

วิธีการใช้งาน

หมายเหตุ: ขณะที่ ท่านใช้ผลิตภัณฑ์นี้ มีข้อควรระวังนี้ :

- ฟังก์ชันตั้งอุณหภูมิล่วงหน้ามีในโหมด “ทอด” เท่านั้น
- การตั้งค่าอุณหภูมิ อุณหภูมิที่ แท้จริงอาจแตกต่างจากอุณหภูมิที่ ตั้งค่าไว้ เนื่องจากรูปทรงและวัสดุของภาชนะประกอบอาหารที่ ต่างกัน
- กำลังไฟจะลดลงและรักษาระดับไว้ที่ 1600 วัตต์หลังใช้งานที่กำลังไฟ สูงสุดนาน 8 นาที
- ในการเลือก/เปลี่ยนการใช้งานแต่ละฟังก์ชัน แนะนำให้ใช้งานเมื่อเตาแม่เหล็กไฟฟ้ายู่ในสภาพเย็นลงแล้ว มิฉะนั้นอาจมีผลต่อประสิทธิภาพการทำงาน

ขั้นตอนการใช้งาน

1. เสียบปลั๊กไฟ จะได้ยินเสียง “บี๊บ” หนึ่งครั้ง ไฟแสดงสถานะจะปรากฏทั้งหมดและดับลง จากนั้น เตาแม่เหล็กไฟฟ้าจะอยู่ในสถานะพร้อมใช้งาน โดยไฟแสดงสถานะ “เปิด/ปิด” จะกระพริบ
 - กดปุ่ม “เปิด/ปิด” จะได้ยินเสียง “บี๊บ” หนึ่งครั้ง ไฟแสดงสถานะ “เปิด/ปิด” จะติดค้าง หน้าจอแสดง Voltage ที่กำลังใช้งาน
2. การปรับระดับกำลังไฟ อุณหภูมิ และเวลา
 - วาดนิ้วตามเข็มนาฬิกาบนพื้นที่สวิตช์กำลังไฟรูปรวงกลมเพื่อเพิ่มระดับกำลังไฟ อุณหภูมิ หรือเวลา
 - วาดนิ้วทวนเข็มนาฬิกาบนพื้นที่สวิตช์กำลังไฟรูปรวงกลมเพื่อลดระดับกำลังไฟ อุณหภูมิ หรือเวลา
 - กดปุ่ม “สูงสุด” เพื่อเลือกระดับกำลังไฟที่ 2100 วัตต์ ขณะที่ปุ่ม “ต่ำสุด” สำหรับกำลังไฟ 600 วัตต์
 - กด “+” หรือ “-” เพื่อปรับระดับกำลังไฟ อุณหภูมิ หรือเวลา
3. เริ่มการใช้งาน
 - กดปุ่มฟังก์ชันใดๆ ภายใน 1 นาที หลังจากกดปุ่ม “เปิด/ปิด” ครั้งแรก เตาแม่เหล็กไฟฟ้าจะตรวจสอบอย่างอัตโนมัติว่ามีภาชนะประกอบอาหารวางอยู่ บนเตาหรือไม่ในกรณี ที่ ไม่มีการทำงานภายใน 1 นาที เครื่องจะปิดอัตโนมัติ
 - หากไม่มีหม้อ สัญลักษณ์เตือนจะทำงาน หากไม่วางภาชนะประกอบอาหารบนเตาภายใน 1 นาที เครื่องจะปิดอัตโนมัติ หากวางภายใน 1 นาที เครื่องจะเริ่มทำงาน
4. รายละเอียดฟังก์ชัน

ฟังก์ชันต้ม

- เปิดเตาและกด  เพื่อเริ่มฟังก์ชัน "ต้ม" เตาจะร้อนตามกำลังไฟที่กำหนด และหน้าจอ LED จะแสดง "00:10" ไฟสัญญาณเปิด/ปิดและไฟ "ต้ม" จะสว่างขึ้น
- ค่าเริ่มต้นเวลาการทำอาหารคือ 10 นาที กด  เพื่อปรับเวลา (รายละเอียดดูที่ฟังก์ชันตั้งเวลา)

ฟังก์ชันนึ่ง

- เปิดเตาและกด  เพื่อเริ่มฟังก์ชัน "นึ่ง" เตาจะร้อนตามกำลังไฟที่กำหนด และหน้าจอ LED จะแสดง "00:45" ไฟสัญญาณเปิด/ปิดและไฟ "นึ่ง" จะสว่างขึ้น
- ค่าเริ่มต้นเวลาการทำอาหารคือ 45 นาที กด  เพื่อปรับเวลา (รายละเอียดดูที่ฟังก์ชันตั้งเวลา)

ฟังก์ชันเคี่ยว

- เปิดเตาและกด  เพื่อเริ่มฟังก์ชัน "เคี่ยว" เตาจะร้อนตามกำลังไฟที่กำหนด และหน้าจอ LED จะแสดง "02:00" ไฟสัญญาณเปิด/ปิดและไฟ "เคี่ยว" จะสว่างขึ้น
- ค่าเริ่มต้นเวลาการทำอาหารคือ 120 นาที กด  เพื่อปรับเวลา (รายละเอียดดูที่ฟังก์ชันตั้งเวลา)

ฟังก์ชันทอด

- เปิดเตาและกด  เพื่อเริ่มฟังก์ชัน "ทอด" เตาจะร้อนตามอุณหภูมิที่กำหนด และหน้าจอ LED จะแสดง "200" ไฟสัญญาณเปิด/ปิดและไฟ "ทอด" จะสว่างขึ้น
- ค่าเริ่มต้นเวลาการทำอาหารคือ 10 นาที กด  เพื่อปรับเวลา (รายละเอียดดูที่ฟังก์ชันตั้งเวลา)
- ช่วงอุณหภูมิสำหรับฟังก์ชัน "ทอด" คือ 60°C - 240°C กด "+" หรือ "-" หรือวาล์วเพื่อปรับระดับอุณหภูมิ
- เตแม่เหล็กไฟฟ้ามีระดับอุณหภูมิ 9 ระดับ ได้แก่ 60°C, 80°C, 120°C, 140°C, 160°C, 180°C, 200°C, 220°C และ 240°C

ฟังก์ชันผัด

- เปิดเตาและกด  เพื่อเริ่มฟังก์ชัน "ผัด" เตาจะร้อนตามกำลังไฟที่กำหนด และหน้าจอ LED จะแสดง "P10" ไฟสัญญาณเปิด/ปิดและไฟ "ผัด" จะสว่างขึ้น
- ค่าเริ่มต้นเวลาการทำอาหารคือ 120 นาที กด  เพื่อปรับเวลา (รายละเอียดดูที่ฟังก์ชันตั้งเวลา)
- เตาแม่เหล็กไฟฟ้ามีระดับกำลังไฟ 10 ระดับ ได้แก่ 2100W, 1800W, 1600W, 1400W, 1200W, 1000W, 800W, 600W, 300W, 100W และรหัสแสดงที่สัมพันธ์กันคือ P10, P9, P8, P7, P6, P5, P4, P3, P2, P1
- ระหว่างการทำอาหารปุ่ม กด "+" หรือ "-" หรือกวาดนิ้วเพื่อปรับระดับกำลังไฟ

ฟังก์ชันหม้อไฟ

- เปิดเตาและกด  เพื่อเริ่มฟังก์ชัน "หม้อไฟ" เตาจะร้อนตามกำลังไฟที่กำหนด และหน้าจอ LED จะแสดง "P8" ไฟสัญญาณเปิด/ปิดและไฟ "หม้อไฟ" จะสว่างขึ้น
- ค่าเริ่มต้นเวลาการทำอาหารคือ 120 นาที กด  เพื่อปรับเวลา (รายละเอียดดูที่ฟังก์ชันตั้งเวลา)
- เตาแม่เหล็กไฟฟ้ามีระดับกำลังไฟ 10 ระดับ ได้แก่ 2100W, 1800W, 1600W, 1400W, 1200W, 1000W, 800W, 600W, 300W, 100W และรหัสแสดงที่สัมพันธ์กันคือ P10, P9, P8, P7, P6, P5, P4, P3, P2, P1
- ระหว่างการทำอาหารปุ่ม กด "+" หรือ "-" หรือกวาดนิ้วเพื่อปรับระดับกำลังไฟ

โหมดเพิ่มกำลังไฟ

- เปิดเตาและเลือกฟังก์ชันการทำอาหารที่ต้องการ (มีสำหรับ "ผัด" และ "ทอด" เท่านั้น) เตาจะร้อนตามกำลังไฟที่กำหนดและหน้าจอ LED จะแสดง "P10" สำหรับฟังก์ชัน "ผัด" และ "P8" สำหรับฟังก์ชันหม้อไฟ ไฟสัญญาณเปิด/ปิดและไฟฟังก์ชันการทำอาหารที่ต้องการจะสว่างขึ้น
- กด  เพื่อเริ่มโหมด "เพิ่มกำลังไฟ" และไฟสว่างขึ้น กำลังไฟจะเพิ่มขึ้นสูงสุดและจอแสดงผลจะแสดง "booS"
- ในการใช้งานโหมด "เพิ่มกำลังไฟ" ระดับกำลังไฟจะกลับสู่การตั้งค่าก่อนหน้านี้ภายใน 3 วินาทีด้านล่าง
 - กดปุ่ม "เพิ่มกำลังไฟ" อีกครั้ง
 - กดปุ่ม "-"
 - หลังจากทำงาน 3 นาที
- ระหว่างการทำอาหารปุ่ม กด "+" หรือ "-" หรือกวาดนิ้วเพื่อปรับระดับกำลังไฟ

ฟังก์ชันตั้งเวลา

- กด  เพื่อเข้าสู่ฟังก์ชันตั้งเวลา จากนั้นกด "+" หรือ "-" หรือกวาดนิ้ว เพื่อปรับเวลาการทำอาหาร
- หลังเข้าสู่การตั้งเวลา จะแสดงผลจะแสดง "88:88" และจำนวนนาฬิกาที่จะกะพริบ จากนั้นเลือกเวลาโดยใช้ "+" หรือ "-" กด  เพื่อยืนยันและเลือกจำนวนชั่วโมง เพื่อยืนยันการตั้งค่าเวลา กด  หนึ่งครั้ง หรือมิเช่นนั้นจะมีการตั้งค่าเวลา หากไม่มีการใช้งานใน 5 วินาที
- การตั้งค่าเวลา:
 - กดปุ่ม "+" "-" เพื่อปรับเวลาตามจำนวนนาฬิกาหรือชั่วโมง
 - กดปุ่ม "+" "-" และค้างไว้ 2 วินาที เวลาจะปรับอย่างรวดเร็วตามจำนวนนาฬิกาหรือชั่วโมง
 - กวาดนิ้วตามเข็มนาฬิกาหรือทวนเข็มนาฬิกาเพื่อปรับเวลาตามจำนวนนาฬิกาหรือชั่วโมง
- เวลาสูงสุด : 23 ชั่วโมง 59 นาที

ฟังก์ชันหยุดชั่วคราว

- กด  เพื่อหยุดขั้นตอนการทำอาหารได้ตลอดเวลา กด  อีกครั้งเพื่อทำอาหารต่อ
- ระยะเวลาหยุดชั่วคราวคือ 1 นาทีภายใต้สถานะกำลังทำงานและ 1 นาทีภายใต้สถานะไม่มีการทำงาน
- ฟังก์ชันหยุดชั่วคราวทำงานได้แม้มีข้อผิดพลาดหรือสถานการณ์ที่ไม่ปกติ

ระบบป้องกันเพื่อความปลอดภัย

คำอธิบายเกี่ยวกับความผิดปกติของอุปกรณ์	สาเหตุ	วิธีแก้ไข
E2	หลอดกำลังไฟหรือเซ็นเซอร์เป็นวงจรไม่สัมพันธ์กัน/ลัดวงจร	ปิดเตา
E3	แรงดันไฟฟ้าเกิน 265V-285V เตาแม่เหล็กไฟฟ้าจะตัดกำลังไฟขาเข้า	เครื่องจะกลับมาทำงานหลังแรงดันไฟฟ้ากลับมาสู่ระดับปกติ
E4	แรงดันไฟฟ้าต่ำกว่า 150V-170V เตาแม่เหล็กไฟฟ้าจะตัดกำลังไฟขาเข้า	เครื่องจะกลับมาทำงานหลังแรงดันไฟฟ้ากลับมาสู่ระดับปกติ
E5	เซ็นเซอร์เป็นวงจรไม่สัมพันธ์กัน	ปิดเตา
E6	เซ็นเซอร์ลัดวงจร	ปิดเตา
ระบบตรวจจับภายในจะส่งเสียงเตือน	หากตรวจจับแล้วไม่พบหม้อหรือพบหม้อที่ไม่เหมาะสมบนแผ่นเชรามิก	วางหม้อหรือเปลี่ยนเป็นหม้อที่เหมาะสม
จอแสดงผลไม่เปลี่ยนแปลง	- หลอดกำลังไฟร้อนเกินไป เตาแม่เหล็กไฟฟ้าจะปิดกำลังไฟขาเข้า - แผ่นเชรามิกร้อนเกินไปและเซ็นเซอร์อุณหภูมิลัดวงจร เตาจะปิดกำลังไฟขาเข้า	เมื่ออุณหภูมิลดลงจนถึงระดับที่กำหนด เตาแม่เหล็กไฟฟ้าจะเริ่มทำความร้อนใหม่อีกครั้ง
เตาจะปิดอัตโนมัติ	เมื่อเตาไม่ได้รับคำสั่งให้ทำงานเป็นเวลาสองชั่วโมงเพื่อหลีกเลี่ยงอุบัติเหตุขณะที่ผู้ใช้ไม่อยู่	
เตาไม่ทำงาน	- ไม่ได้เสียบปลั๊กเตาหรือปลั๊กเสียหาย - มีการใช้หม้อที่ไม่เหมาะสม	- ตรวจสอบว่าเสียบปลั๊กเครื่องในเตาไว้ และปลั๊กเสียหาย - ตรวจสอบขนาดหม้อ วางหม้อที่มีเส้นผ่านศูนย์กลางมากกว่า 12 ซม.
เตาหยุดทำความร้อนกะทันหันขณะใช้	- อุณหภูมิห้องสูงเกินไป - มีการใช้ระบบป้องกันเพื่อความปลอดภัย	- ตรวจสอบว่าอุณหภูมิห้องไม่สูงเกินไป - ตรวจสอบว่าเป็นเพราะระบบป้องกันเพื่อความปลอดภัยหรือไม่ในกรณีนี้ รอสัปดาห์แล้วจึงยืนยัน

คำอธิบายเกี่ยวกับความผิดปกติของอุปกรณ์	สาเหตุ	วิธีแก้ไข
เตาปิดเองหลังส่งสัญญาณเตือนต่อเนื่องและส่งเสียงเตือนฉุกเฉิน	การใช้หม้ออย่างไม่เหมาะสมหรือมีการใช้หม้อที่ไม่เหมาะสม	- ตรวจสอบว่าหม้อใช้กับเตาแม่เหล็กไฟฟ้าได้หรือไม่ - ตรวจสอบว่าวางหม้อตรงกลางแผ่นเซรามิกหรือไม่ - ตรวจสอบขนาดหม้อ มีการวางหม้อที่มียาวผ่านศูนย์กลางมากกว่า 12 ซม. หรือไม่

โปรดทราบ: ห้ามใช้งานเครื่องหากสายไฟเสียหาย เปลี่ยนสายไฟโดยศูนย์บริการที่ได้รับอนุญาตจาก Tefal เพื่อหลีกเลี่ยงอันตรายใด ๆ

การทำความสะอาด

ก่อนเริ่มทำความสะอาด ควรถอดปลั๊กไฟ และรอให้หน้าเตาแม่เหล็กไฟฟ้าเย็นลง จากนั้น ให้ปฏิบัติตามคำแนะนำ ดังนี้ :

- 1. ผิวหน้าเตาเซรามิก:** หากผิวหน้าเตาสกปรก ให้ทำความสะอาดด้วยผ้าเปียกหมาดหรือผสมน้ำยาทำความสะอาดคราบอาหารเช็ดให้สะอาด
- 2. ตัวเครื่องและแผงควบคุมการทำงาน:** ให้ทำความสะอาดด้วยผ้าเปียกหมาด หากมีคราบน้ำมันให้เช็ดด้วยน้ำผสมน้ำยาล้างจานและเช็ดด้วยผ้าเปียกหมาดอีกครั้ง
- 3. ช่องดูดอากาศ/ระบายอากาศ:** ให้ทำความสะอาดโดยใช้ไม้พินสาลีเช็ดฝุ่นออก หากมีคราบน้ำมันให้ทำความสะอาดโดยใช้น้ำผสมน้ำยาล้างจานและแปรงด้วยแปรงสีฟัน จากนั้นเช็ดให้สะอาด

ภาชนะประกอบอาหารสำหรับเตาแม่เหล็กไฟฟ้า

หม้อและภาชนะประกอบอาหารที่สามารถใช้ได้
กันภาชนะประกอบอาหารผลิตจากเหล็กหรือวัสดุที่ เหนียวนานแม่เหล็ก
กันภาชนะแบนเรียบและมีเส้นผ่าศูนย์กลางไม่น้อยกว่า 12 ซม. และไม่
มากกว่า 24 ซม.



กาต้มน้ำเหล็ก
อีนาเมล



หม้อเหล็ก
หล่อ



กระทะแบนหรือกระทะ
ก้นลึกที่ก้นมีวัสดุเหนียว
นานแม่เหล็ก 2 ชั้น



หม้อสองหูที่ก้นมีวัสดุ
เหนียว
นานแม่เหล็ก 2 ชั้น



หม้อสแตนเลสสตีล



แผ่นเหล็ก



หม้อโลหะผสม

รักษาสี งดแฉดล้อมเป็นอันดับแรก !



ช่วยกันรักษาสี งดแฉดล้อม!

- ① เครื่องใช้ของท่านทำจากวัสดุที่มีค่าซึ่งสามารถนำกลับมาใช้ประโยชน์ได้อีกและนำหมุนเวียนกลับมาใช้ใหม่
- ➡ ทิ้งไว้ ณ จุดทิ้งขยะในท้องถิ่น

รับประกันสินค้าระหว่างประเทศของผลิตภัณฑ์ TEFAL/T-FAL

🌐 : www.tefal.com

ผลิตภัณฑ์ของท่านสามารถรับการดูแลจากผู้ให้บริการ TEFAL/T-FAL ระหว่างและหลังสิ้นสุดระยะเวลาประกันตามเงื่อนไขที่กำหนด

การรับประกัน

ผลิตภัณฑ์ TEFAL/T-FAL มีรับประกันสินค้าในกรณีที่เกิดจากข้อบกพร่องใด ๆ ของวัสดุหรือการผลิตในช่วงระยะเวลาการรับประกันภายในประเทศเท่านั้น ***

ที่ระบุไว้ในรายชื่อประเทศในหน้าสุดท้ายของเอกสาร โดยการรับประกันเริ่มต้นนับจากวันที่ซื้อผลิตภัณฑ์หรือ วันที่จัดส่งสินค้า

การรับประกันสินค้าระหว่างประเทศ ครอบคลุมค่าใช้จ่ายทั้งหมดที่เกี่ยวข้องกับการเรียกคืนหรือซ่อมแซมผลิตภัณฑ์ที่บกพร่อง

ให้สามารถใช้งานได้ตามคุณสมบัติของสินค้า โดยอาจทำการซ่อมแซมหรือเปลี่ยนส่วนที่ชำรุด และค่าแรงงานที่จำเป็น โดย TEFAL/T-FAL ตัดสินใจ,

สินค้าทดแทนอาจจะให้แทน การซ่อมสินค้า โดย TEFAL/T-FAL มีสิทธิ์แต่เพียงผู้เดียวในการจัดการภายใต้การรับประกัน เช่น

ไปซ่อมแซมหรือเปลี่ยนผลิตภัณฑ์ดังกล่าว

เงื่อนไขและการยกเว้น

TEFAL/T-FAL ไม่จำเป็นต้องซ่อมหรือเปลี่ยนผลิตภัณฑ์ที่ไม่ได้มาพร้อมกับหลักฐานการซื้อหรือที่ถูกดัดแปลง

ผลิตภัณฑ์สามารถใช้งานได้โดยคนหรือต้องได้รับการบรรจุอย่างเหมาะสมและ มีการบันทึกการส่งคืน (หรือวิธีการเทียบท่าของไปรษณีย์) เพื่อส่งถึง

ศูนย์บริการที่ได้รับ การแต่งตั้งจาก TEFAL/T-FAL รายละเอียดของที่ตั้งศูนย์บริการที่ได้รับการแต่งตั้งจาก TEFAL/T-FAL ระบุไว้บนเว็บไซต์ของ TEFAL/T-FAL

หรือโทรศัพท์ติดต่อศูนย์บริการผู้บริโภค โลกที่กำหนดไว้ในรายชื่อของแต่ละประเทศ ที่แนบมาการรับประกันนี้ เพื่อที่จะเสนอที่ดีที่สุดที่เป็น

ไปได้บริการหลังการขายอย่างต่อเนื่องและเพิ่มความพึงพอใจของลูกค้า TEFAL/T-FAL

อาจส่งสว่านความพึงพอใจให้กับลูกค้าทุกคนที่มีผลิตภัณฑ์ของพวกเขาซ่อมแซมหรือการแลกเปลี่ยนจาก TEFAL/T-FAL ศูนย์บริการที่ได้รับอนุญาต

การรับประกันมีผลเฉพาะสำหรับผลิตภัณฑ์ที่ซื้อและใช้ในประเทศเท่านั้น และไม่ครอบคลุมถึงความเสียหายที่อาจเกิดขึ้นเป็นผลมาจากการใช้งานผิดประเภท,

การไม่เอาใจใส่, การไม่ปฏิบัติตามคำแนะนำของ TEFAL/T-FAL, ซ่อมแซมแก้ไขผลิตภัณฑ์ โดยไม่ได้รับอนุญาต, บรรจุภัณฑ์ที่ผิดพลาดโดยเจ้าของ หรือ

เสียหายจากการขนส่ง นอกจากนี้ยังใช้ไม่ครอบคลุมการสึกหรอตามปกติและ การเสียหายจากการใช้งาน, การซ่อมบำรุงและ การเปลี่ยนวัสดุสิ้นเปลือง หรือต่อไปนี้

- การใช้ผลิตภัณฑ์กับน้ำดื่มประเภท
- กลไกเกิดความเสียหายจากการใช้งานมากเกินไป
- ความเสียหายที่เกิดจากน้ำ ฝุ่น หรือแมลงเข้าไปภายในตัวผลิตภัณฑ์ (ยกเว้นผลิตภัณฑ์ที่ออกแบบเฉพาะ)
- ความเสียหายที่เกิดจากอุบัติเหตุ ภัยธรรมชาติ ดังว่า เช่น อัคคีภัย น้ำท่วม ไฟไหม้ ไฟกระชาก ไฟลัด เป็นต้น
- การใช้งานที่นอกเหนือการใช้งานภายในครัวเรือนหรือเป็นการใช้งานเชิงพาณิชย์
- ความเสียหายของอุปกรณ์ที่มาพร้อมกับผลิตภัณฑ์ เช่น เครื่องแก้วหรือกระเบื้อง
- ความเสียหายหรือผลร้ายเนื่องจากการเชื่อมต่อกับปลั๊กแรงดัน ไฟฟ้าหรือติดตั้งที่ระบุในผลิตภัณฑ์หรือข้อกำหนดของผลิตภัณฑ์
- การปรับแต่งอาคาร (การปรับแต่งอาคารใด ๆ จะต้องดำเนินการตามคำแนะนำสำหรับการใช้งาน)

สิทธิตามกฎหมายของผู้บริโภค

รับประกันระหว่างประเทศของ TEFAL/T-FAL ไม่ส่งผลกระทบต่อสิทธิตามกฎหมายของผู้บริโภค อาจจะมีหรือสิทธิที่ไม่สามารถถอนหรือ จำกัด

หรือสิทธิผู้บริโภคได้สิทธิที่ผู้บริโภคจากผลิตภัณฑ์ที่ซื้อ การรับประกันนี้จะช่วยให้ผู้บริโภคสิทธิตามกฎหมายที่ เฉพาะเจาะจงและผู้บริโภค

ยังอาจมีสิทธิตามกฎหมายอื่น ๆ ที่แตกต่างกันจากรัฐเพื่อให้รัฐหรือ ประเทศ ผู้บริโภคอาจยื่นข้อสิทธิดังกล่าว ขึ้นอยู่กับคุณสมบัติของผู้บริโภค



*** ระยะเวลาการรับประกันระหว่างประเทศของ TEFAL/T-FAL จะยึดตามประเทศที่ใช้งาน แม้ว่าผลิตภัณฑ์

ในประเทศที่ซื้อจะมีระยะเวลาการรับประกันที่แตกต่างกัน กระบวนการซ่อมแซมอาจต้องใช้เวลาในการหาสินค้าที่ไม่ได้ขายในพื้นที่โดย TEFAL/T-FAL

หากผลิตภัณฑ์ไม่ได้ซ่อมแซม ในประเทศที่มีการรับประกันระหว่างประเทศ TEFAL/T-FAL

อาจการเปลี่ยนโดยผลิตภัณฑ์ที่คล้ายกันหรือทางเลือกที่ต้นทุนเท่ากันเป็นไปได้

โปรดศึกษาเอกสารนี้สำหรับขั้นตอนการรับประกัน

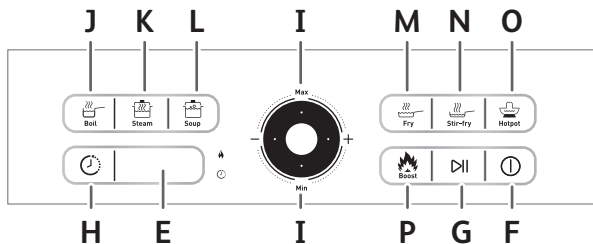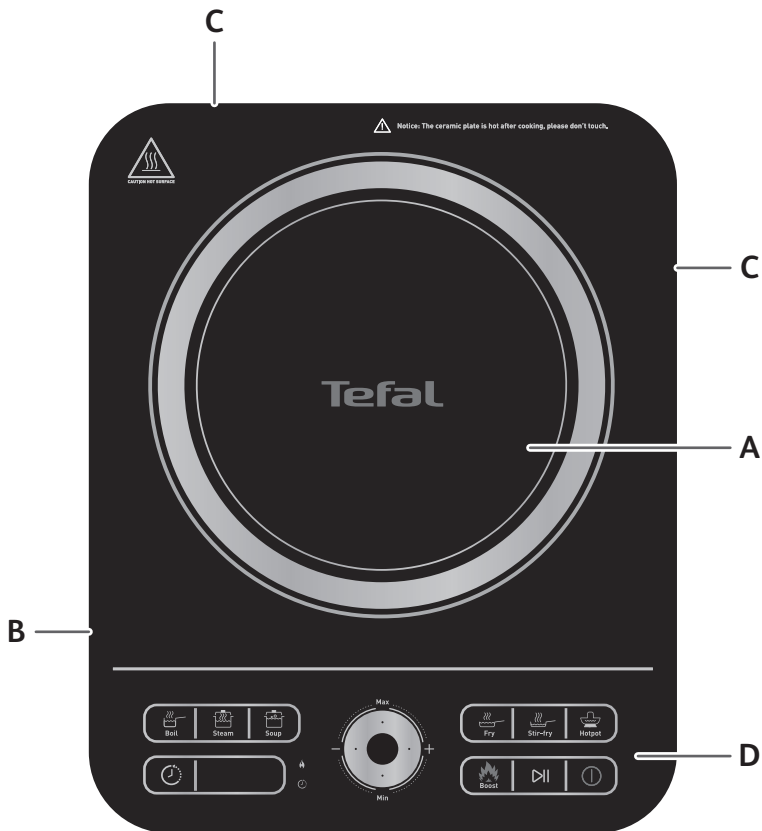

IMPORTANT SAFETY INSTRUCTIONS

EN

- **Read these instructions for use carefully before using your appliance for the first time and keep them to hand for future reference.**
- This appliance is not intended to function using an external time-switch or a separate remote control system.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children must be supervised to ensure that they do not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be carried out by children unless they are older than 8 years and supervised.
- Keep the appliance and its cord out of the reach of children less than 8 years.

- As this appliance is for household use only, it is not intended for use in and the guarantee will not apply for:
 - Staff kitchen areas in shops, offices and other working environments ;
 - Farm houses ;
 - By clients in hotels, motels and other residential type environments ;
 - Bed and breakfast type environments.
- To ensure safety, if the power cord is damaged, it must be replaced by either the manufacturer, its approved service centre or similarly qualified persons.
- **WARNING:** If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.
- Metallic objects such as knives, forks, spoons and lids should not be placed on the hotplate since they can get hot.
- This appliance is designed for indoor domestic household use only. In case of professional use, inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and the guarantee will not apply.
- For your safety, this appliance meets applicable standards and regulations (Directives on Low Voltage, Electromagnetic Compatibility, Materials in contact with food articles, Environment, etc.).
- This appliance is designed to function on AC current only. Before using it for the first time, check that your mains supply voltage matches that indicated on the appliance data plate.
- Any connection error will invalidate your guarantee.
- Always plug the appliance into a dedicated socket outlet with an earth connection. Do not use a socket adaptor or connect any other appliance into the same socket simultaneously, to avoid electrical overloading and risk of fire.

- Never immerse the appliance or its power cord in water or any other liquid.
- Given the diverse standards in effect, if the appliance is used in a country other than that in which it is purchased, have it checked by an Approved Service Centre.
- Remove all packaging materials, stickers and accessories from inside and outside of the appliance.
- The appliance must be placed and used on a flat, stable, heat-resistant work surface, away from water splashes.
- Do not place or use this appliance in high humidity environments.
- Do not place or use the induction plate on steel or aluminium surfaces.
- Maintain a gap of at least 10cm (4 inches) on all sides of the appliance to ensure adequate ventilation.
- Never place or use the appliance close to a wall or below a wall cupboard.
- Never place or use the appliance below or close to easily inflammable objects (e.g. curtains, etc.).
- Never place or use the appliance on or close to a cooking hob or other sources of heat.
- People fitted with cardiac pacemakers or similar medical devices should be kept away from the induction cooker when it is connected to the power supply. If in any doubt consult a medical practitioner before using this product to avoid any danger.
- Unwind the power cord fully before use.
- Do not use an extension lead. If you accept liability for doing so, only use an extension lead which is in good condition, has a plug with an earth connection and is suited to the power rating of the appliance.
- Never leave the appliance unattended whilst connected to the power supply, even if for a few moments, especially where children are present.
- Do not let the power cord hang where children may reach it.
- The power cord must never be close to or in contact with hot parts of the appliance, close to sources of heat or resting on sharp edges.
- Take all necessary precautions to prevent anyone tripping over an extension cord.
- Switch off and disconnect the appliance from the power supply when not in use.
- Never disconnect the plug by pulling on the power cord.
- Inspect the appliance and power cord for signs of wear or damage prior to connecting to the power supply.

- Do not use your appliance if it does not operate correctly, if it has been damaged or if the power cord or plug is damaged. To maintain safety, these parts must be replaced by an Approved Service Centre.
- Any intervention other than normal cleaning and maintenance by the customer must be performed by an Approved Service Centre.
- Never touch the hot surfaces of the appliance, they will remain hot for a while after use.
- Never move the appliance as long as it is hot.
- Allow the appliance to cool down completely before you clean and store it.
- Always keep the induction cooker clean to avoid dust entering the fan motor and causing a malfunction.
- If parts of the appliance should catch fire, never try to extinguish flames with water. Disconnect the appliance and smother the flames with a damp cloth.
- Place the pot at the centre of the cooking circle.
- Do not overheat pot or preheat while empty for long periods.
- Do not heat foodstuffs in tins or other airtight containers to avoid explosion caused by air expansion.

KEEP THESE INSTRUCTIONS IN A SAFE PLACE

This product has been designed for domestic use only. Any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and the guarantee will not apply.

SPECIFICATION

Model	Maximum Input Power	Power Adjustment Range	Display Type	Temperature Adjustment Range	Applicable Power Supply
IH7208	2100W	100W-2100W	Digital Display	60°C-240°C	220V-240V/ 50Hz

EN


DESCRIPTION

- | | |
|---------------------------------|---------------------------------------|
| A Ceramic plate | I "Max."/"Min."/"+"/"-" Button |
| B Air entry | J Boil Function |
| C Air exit | K Steam Function |
| D Control panel | L Soup Function |
| E Digital display screen | M Fry Function |
| F On/Off Button | N Stir-fry Function |
| G Pause Button | O Hotpot Function |
| H Timer Function | P Boost Mode |

PRINCIPLE AND CHARACTERISTICS

Working Principle

An induction hotplate works by heating a receptacle using the currents induced by a magnetic field. When an electric current passes through a coil, it generates a magnetic field. When the magnetic field pass through the bottom of iron pot, it will generate numerous eddy currents, which will rapidly heat up the pot and its contents.

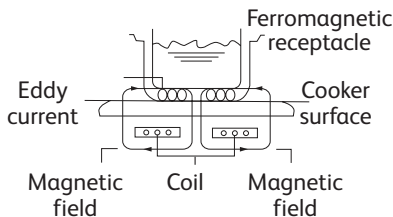

Characteristics

Multiple Safety Protections

- Over/under-voltage protection.
- Only suitable for pots made of ferromagnetic based materials with diameter of 12 cm to 24 cm.
- Protection against appliance overheating.
- Auto cut off protection (2 hours) for "Fry", "Stir-fry" and "Hotpot" functions.

Environmental Protection

- Induction does not generate any flames.
- Induction does not need any fuel and reduces the risk of domestic accidents linked to gas leaks or fire due to its numerous controls.

Microcomputer Control

- Multiple heating functions: Multiple heating modes from low power to high power to meet various cooking demands.
- Wide range temperature selection: maintains and regulates the cooking temperature.
- Flexible Timer function: wide range of presetting time.
- Automatic alarm function: if no pot or an unsuitable pot is sensed on the ceramic plate, the internal detection system will generate an alarm.

Convenient Cleaning

- High-grade ceramic plate is not easily worn out or darkened and is convenient for cleaning and maintenance.
- In case of spilling, move away the pot and clean with a soft damp cloth.

DIRECTION FOR USE

Operation Methods

Note: when using the appliance, please pay attention to the following:

- Temperature presetting function is only available under “Fry” function.
- Under temperature presetting mode, the actual temperature may be different from the selected temperature due to varying shape and material of receptacle.
- After 8 minutes >1600W, the power will decrease to 1600W.
- It is recommended to begin a cooking function when the appliance is cool, otherwise efficiency may be affected.

Operation Steps

- 1. Turning on the induction hob.** The appliance will beep once, the LED display and all lights will flash. The appliance will be in standby mode, and the “on/off” button will flash.
 - Press the “on/off” button, the appliance will beep once and the LED display will show the current voltage.
- 2. Power level, temperature and time adjustment**
 - Sweep clockwise on the “Max.”/”Min.”/”+”/”-” Button (I) to increase the power level, temperature or time
 - Sweep anti-clockwise on the “Max.”/”Min.”/”+”/”-” Button (I) to decrease the power level, temperature or time

- Press “Max” key to increase the power level to 2100W and the “Min” key to decrease the power level to 600W.
- Press “+” or “-” to adjust the power level, temperature or time.

3. Functional Startup

- Select a function within one minute of turning on the appliance, and it will automatically check if a pot is present. If no function is selected within one minute, the appliance will turn itself off.
- When there is no pot, an alarm will sound; if the appliance can not detect a pot present after one minute, the appliance will turn itself off. If a pot is placed on the cooker within one minute, the cooker will start heating automatically.

4. Introduction of Detailed Function

BOIL FUNCTION

- Turn on the cooker and press  to start “Boil” function. The cooker will heat at designated power and the LED display will show “00:10”. The on/off light and the “Boil” light are on.
- The default cooking time is 10 minutes, press  to adjust the time (refer to timer function).

STEAM FUNCTION

- Turn on the cooker and press  to start “Steam” function. The cooker will heat at designated power and the LED display will show “00:45”. The on/off light and the “Steam” light are on.
- The default cooking time is 45 minutes, press  to adjust the time (refer to timer function).

SOUP FUNCTION

- Turn on the cooker and press  to start “Soup” function. The cooker will heat at designated power and the LED display will show “02:00”. The on/off light and the “Soup” light are on.
- The default cooking time is 120 minutes, press  to adjust the time (refer to timer function).

FRY FUNCTION

- Turn on the cooker and press  to start “Fry” function. The cooker will heat at designated temperature and the LED display will show “200”. The on/off light and the “Fry” light are on.
- The default cooking time is 10 minutes, press  to adjust the time (refer to timer function).
- The temperature range for “Fry” function is 60°C - 240°C, press “+” or “-” or sweep to adjust the temperature level.
- There are 9 temperature levels for the induction hob, i.e. 60°C, 80°C, 120°C, 140°C, 160°C, 180°C, 200°C, 220°C and 240°C.

STIR-FRY FUNCTION

- Turn on the cooker and press  to start “Stir-fry” function. The cooker will heat at designated power and the LED display will show “P10”. The on/off light and the “Stir-fry” light are on.
- The default cooking time is 120 minutes, press  to adjust the time (refer to timer function).
- There are 10 power levels for the induction cooker, i.e. 2100W, 1800W, 1600W, 1400W, 1200W, 1000W, 800W, 600W, 300W, 100W and the corresponding displayed codes are P10, P9, P8, P7, P6, P5, P4, P3, P2, P1.
- During cooking, press “+” or “-” key or sweep to adjust the power level.

HOTPOT FUNCTION

- Turn on the cooker and press  to start “Hotpot” function. The cooker will heat at designated power and the LED display will show “P8”. The on/off light and the “Hotpot” light are on.
- The default cooking time is 120 minutes, press  to adjust the time (refer to timer function).
- There are 10 power levels for the induction cooker, i.e. 2100W, 1800W, 1600W, 1400W, 1200W, 1000W, 800W, 600W, 300W, 100W and the corresponding displayed codes are P10, P9, P8, P7, P6, P5, P4, P3, P2, P1.
- During cooking, press “+” or “-” key or sweep to adjust the power level.

BOOST MODE

- Turn on the cooker and select desired cooking function (only available for “Stir-fry” and “Hotpot” functions), the cooker will heat at designated power and the LED display will show “P10” for “Stir-fry” function and “P8” for “Hotpot” function. The on/off light and the desired cooking function light are on.
- Press  to start “Boost” mode and the light is on, it will go to maximum heating power and display will show “booS”.
- Under the “Boost” mode operation, the power level will be returned to previous setting under the below 3 conditions:
 - press “Boost” mode key again
 - press “-” key
 - operation after 3 minutes
- During cooking, press “+” or “-” key or sweep to adjust the power level.

TIMER FUNCTION

- Press  to enter the timer function, then press “+” or “-” or sweep to adjust the cooking time.
- After entering to timer, the screen displays “88:88” and minutes will flash, then select the time by using “+” or “-”, press  to confirm and select hours. To confirm the time setting, press  once or time will be set if no operation in 5 seconds.
- Timer setting:
 - a. Press “+” “-” key to adjust the time by minute or hour
 - b. Press “+” “-” key and hold for 2 seconds, the time will be adjusted quickly by minute or hour.
 - c. Sweep in clockwise or anti-clockwise to adjust the time by minute or hour.
- Maximum time : 23 hours 59 minutes

PAUSE FUNCTION

- Press  to stop the cooking process at any time; to resume cooking, press  again.
- Duration time of pause is 1 minute under operation status and 1 minute under no operation status.
- Pause function works even under malfunction or abnormal situation.

SAFEGUARDS

Malfunction description	Causes	Solutions
E2	Power tube or sensor is open circuit / short circuit	Turn off the cooker
E3	Voltage is over 265V-285V, the induction cooker will turn itself off.	Operation resumes after the voltage returns to normal
E4	Voltage is under 150V-170V, the induction cooker will turn itself off.	Operation resumes after the voltage returns to normal
E5	Sensor is open circuit	Turn off the cooker
E6	Sensor is short circuit	Turn off the cooker
Internal detection system generate an alarm	If no pot or an unsuitable pot is sensed on the ceramic plate	Place a suitable pot on the ceramic plate.
Display remains unchanged	- Power tube is overheating, the induction cooker will turn itself off. - Ceramic plate is overheated and the temperature sensor is short circuit, the cooker will turn itself off.	When the temperature drops to designated level, the induction cooker will start reheating.
Cooker turns off automatically	If it receives no operation instruction for a period of two hours to avoid any incident at the absence of the user	
Cooker not working.	- Cooker not plugged in or plug is damaged. - Unsuitable pot is used.	- Check the appliance is plugged in the socket, and the plug is damaged. - Check the pot size, place a pot with diameter more than 12cm.
Cooker suddenly stops heating during use	- Room temperature is too high. - Safety protections is on.	- Check if the room temperature is too high. - Check if it is due to safety protections. In this case, wait for several minutes and confirm

Malfunction description	Causes	Solutions
Cooker turns off after warning with continuous and urgent beeps	Improper use of the pot or unsuitable pot is used.	• Check if the pot is induction compatible. • Check if pot is placed in the centre of the ceramic plate. • Check the pot size, place a pot diameter more than 12cm.

Please note: If the power cord is damaged, do not use the appliance. Have it replaced by a Tefal Approved Service Centre to avoid any danger.

CLEANING

Please unplug the power cord, wait till the ceramic plate is cooled down and then follow the below directions to clean the cooker:

- 1. Ceramic plate:** If the ceramic plate is very dirty, please clean the ceramic plate using a damp soft cloth or a cleaning product which is designed for use on ceramic hobs when necessary.
- 2. Cooker body and control panel:** Use soft wet dishcloth to clean. In case of any oil stains that are not easily removed, wipe away the stains with neutral detergent and then clean with wet dishcloth.
- 3. Air entry/ air exit surface:** remove any dust with a cotton bud.

COOKING UTENSILS

Suitable cooking pots

Double bottom pots made of iron (enamel, cast iron or stainless steel) or magnetic induction materials with flat bottom diameter of over 12 cm and less than 24 cm.



Enameled iron
tea pot



Precision cast
iron pot



Magnetic induction
double-bottom frying
pan or wok



Magnetic induction
double-bottom
stockpot



Special stainless
steel pot



Iron Grill Plate



Dedicated pot made
of composite materials
suitable for use with an
induction hob

ENVIRONMENTAL PROTECTION



Help protect the environment!

- ① Your appliance contains a number of materials that may be recovered or recycled.
- ➔ Leave it at a local civic waste collection point.

TEFAL/T-FAL* INTERNATIONAL LIMITED GUARANTEE

🌐 : www.tefal.com

This product is repairable by TEFAL/T-FAL*, during and after the guarantee period.

Accessories, consumables and end-user replaceable parts can be purchased, if locally available, as described on the

TEFAL/T-FAL internet site www.tefal.com

The Guarantee:** TEFAL/T-FAL guarantees this product against any manufacturing defect in materials or workmanship during the guarantee period within those countries*** as stated in the attached country list, starting from the initial date of purchase or delivery date.

The international manufacturer's guarantee covers all costs related to restoring the proven defective product so that it conforms to its original specifications, through the repair or replacement of any defective part and the necessary labour. At TEFAL/T-FAL's choice, a replacement product may be provided instead of repairing a defective product. TEFAL/T-FAL's sole obligation and your exclusive resolution under this guarantee are limited to such repair or replacement.

Conditions & Exclusions: TEFAL/T-FAL shall not be obliged to repair or replace any product which is not accompanied by a valid proof of purchase. The product can be taken directly in person or must be adequately packaged and returned, by recorded delivery (or equivalent method of postage), to a TEFAL/T-FAL authorised service centre. Full address details for each country's authorised service centres are listed on TEFAL/T-FAL website (www.tefal.com) or by calling the appropriate consumer service centre set out in the attached country list. In order to offer the best possible after-sales service and constantly improve customer satisfaction, TEFAL/T-FAL may send a satisfaction survey to all customers who have had their product repaired or exchanged in a TEFAL/T-FAL authorised service centre.

This guarantee applies only for products purchased and used for domestic purposes and will not cover any damage which occurs as a result of misuse, negligence, failure to follow TEFAL/T-FAL instructions, or a modification or unauthorised repair of the product, faulty packaging by the owner or mishandling by any carrier. It also does not cover normal wear and tear, maintenance or replacement of consumable parts, or the following:

- damages or poor results specifically due to wrong voltage or frequency as stamped on the product ID or specification
- using the wrong type of water or consumable
- mechanical damages, overloading
- ingress of water, dust or insects into the product (excluding appliances with features specifically designed for insects)
- scaling (any de-scaling must be carried out according to the instructions for use)
- damage as a result of lightning or power surges
- damage to any glass or porcelain ware in the product
- accidents including fire, flood, etc
- professional or commercial use

Consumer Statutory Rights: This international TEFAL/T-FAL guarantee does not affect the Statutory Rights a consumer may have or those rights that cannot be excluded or limited, nor rights against the retailer from which the consumer purchased the product. This guarantee gives a consumer specific legal rights, and the consumer may also have other legal rights which vary from State to State or Country to Country. The consumer may assert any such rights at his sole discretion.

*****Where a product purchased in a listed country and then used in another listed country, the international TEFAL/T-FAL guarantee duration is the one in the country of usage, even if the product was purchased in a listed country with different guarantee duration. The repair process may require a longer time if the product is not locally sold by TEFAL/T-FAL. If the product is not repairable in the new country, the international TEFAL/T-FAL guarantee is limited to a replacement by a similar or alternative product at similar cost, where possible.**

*TEFAL household appliances appear under the T-FAL brand in some territories like America and Japan. TEFAL/T-FAL are registered trademarks of Groupe SEB.

Please keep this document for your reference should you wish to make a claim under the guarantee.

****For Australia only:** Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

****For India Only:** Your Tefal product is guaranteed for 2 years. The guarantee covers exclusively the repair of a defective product, but at TEFAL's choice, a replacement product may be provided instead of repairing a defective product. It is mandatory that the consumer, to have his product repaired, has to log a service request on the dedicated Smartphone application TEFAL SERVICE APP or by calling TEFAL Consumer Care Center at **1860-200-1232, Opening hours Mon-Sat 09 AM to 06 PM**. Products returned by Post will not be covered by the guarantee. As a proof of purchase consumer needs to provide both this stamped guarantee card and cash memo.

TH

p. 1 – 13

EN

p. 15 – 27