


SAFETY

- For your safety, this appliance complies with the applicable standards and regulations (Low Voltage Directive, Electromagnetic Compatibility, Environmental...).
- The appliance's accessories become very hot during use. Avoid contact with the skin. Make sure that the supply cord never comes into contact with the hot parts of the appliance.
- Check that the voltage of your electricity supply matches the voltage of your appliance. Any error when connecting the appliance can cause irreparable harm, not covered by the guarantee.

• For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask for installer for advice.

- The installation of the appliance and its use must however comply with the standards in force in your country.

• **WARNING: do not use this appliance near bathtubs, showers, basins or other vessels containing water.** 

• When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

• This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

• If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

- Stop using your appliance and contact an Authorised Service Centre if:
 - your appliance has fallen.
 - it does not work correctly.
- In case of overheating, the heat-sensitive safety device will stop the dryer automatically. Check and clean the inlet and outlet grills or contact the After-Sales Service.
- The appliance must be unplugged: before cleaning and maintenance procedures, if it is not working correctly, as soon as you have finished using it, if you leave the room, even momentarily.
- Do not use if the cord is damaged.
- Do not immerse or put under running water, even for cleaning purposes.
- Do not hold with damp hands.
- Do not hold the appliance by the casing, which is hot, but by the handle.
- Do not unplug by pulling on the cord, rather pull out by the plug.
- Do not use an electrical extension lead.
- Do not clean with abrasive or corrosive products.
- Do not use at temperatures below 0°C and above 35°C.

GUARANTEE




Your appliance is designed for use in the home only. It should not be used for professional purposes.
The guarantee becomes null and void in the case of improper usage.

ENVIRONMENT PROTECTION FIRST!



- ① Your appliance contains valuable materials which can be recovered or recycled.
- ➔ Leave it at a local civic waste collection point.

These instructions are also available on our website
www.tefal.com

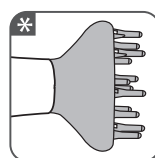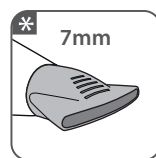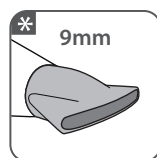


Tefal®



SIGNATURE PRO AC

www.tefal.com

1800146735

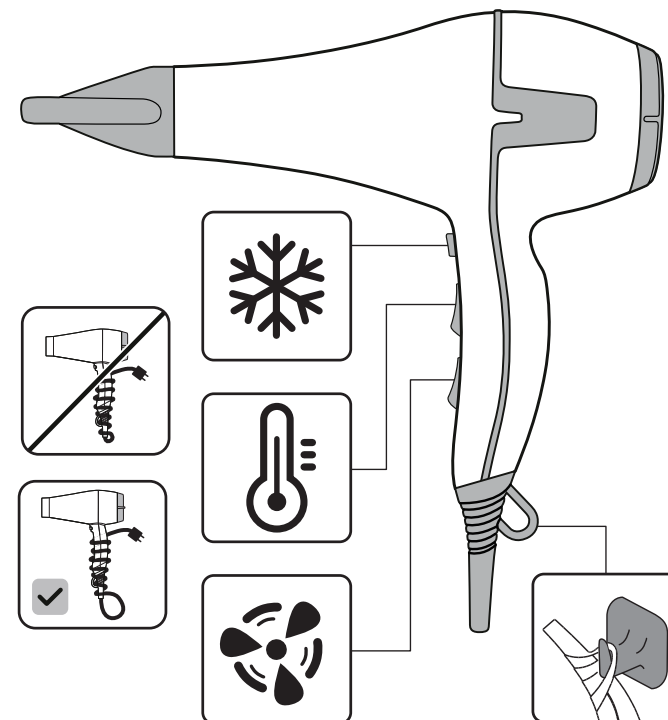

안전상 주의 사항

- 본 제품은 안전을 위해 현재 시행중인 기술 표준과 전기기기 관련 안전 규정(저전압 안전규격, 전자기적 적합여부, 사용 환경 등)에 맞추어 제작되었습니다.
- 이 기기는 고온이므로 화상에 주의하십시오. 전원 코드는 제품의 열판 가까이에 닿지 않도록 하십시오.
- 사용 전압이 제품에 표기된 전압과 일치하는지 확인하십시오. 표기되지 않은 전압 사용시 제품에 발생하는 문제는 매우 치명적이며 품질 보증 혜택을 받을 수 없습니다.

• 안전을 위하여 30mA 이하의 전기 차단기를 욕실 전원에 설치하실 것을 권장합니다. 보다 자세한 사항은 전기 전문가에게 문의하십시오.

• 본 제품의 설치와 사용법은 현재 국내법이 우선합니다

• 경고: 욕조 주변, 샤워기, 세면대 또는 물을 담은 용기 근처에서 이 기기를 사용하지 마십시오.



• 욕실에서 사용하신 후에는 반드시 전원 플러그를 뽑아 주십시오. 욕실에서는 제품의 전원이 꺼진 경우에도 물기가 주위에 있으면 위험할 수 있습니다.

• 신체적, 감각적, 정신적 능력에 장애가 있는 사람(아동 포함), 제품 사용 경험과 지식이 부족한 사람은 안전을 책임지는 사람이 기기의 사용을 감독하거나 지시하지 않는 한 이 기기를 사용하지 않아야 합니다. 아이들이 이 기기를 가지고 놀지 않도록 주의하여 주십시오.

• 8세 이상의 어린이나 신체, 지각 또는 정신능력에 장애가 있는 분 및 제품 사용에 대한 지식이나 경험이 부족한 분이 제품을 사용할 경우 안전한 사용을 위해 보호자의 감독하에 제품을 사용할 수 있도록 곁에서 도와 주시고 각별히 주의하여 주십시오. 어린이들이 제품을 가지고 장난치지 않도록 주의하여 주십시오. 어린이들이 보호자의 감독 없이 제품을 세척하거나 관리해서는 안됩니다.

• 전원 코드가 손상되었을 경우에는 위험을 방지하기 위해 반드시 공인된 당사 서비스 센터를 통해 전원 코드를 교체하십시오.

- 다음과 같은 경우 기기 사용을 중단하고 당사 서비스 센터에 문의하십시오.
- 기기를 떨어뜨린 경우
- 기기가 정상적으로 작동되지 않는 경우
- 기기 과열 시, 안전 장치에 의해 자동으로 전원이 차단될 수 있습니다. 공기 흡입 및 방출 부분을

- 청소하거나 당사 서비스 센터에 문의하십시오.
- 기기 전원은 항상 플러그에서 뽑아 두어야 합니다 : 기기가 정상적으로 작동하지 않는 경우, 청소/유지 보수 작업 전에 플러그를 뽑아주시고, 기기 사용 후 잠시라도 방을 비운다면 플러그를 뽑아 주시기 바랍니다.
- 전원 코드가 손상되었을 경우에는 제품을 사용하지 마십시오.
- 청소를 위해 기기를 물에 담그거나 흐르는 물에 넣지 마십시오.
- 젖은 손으로 기기를 잡지 마십시오.
- 공기 흡입 및 배출구 부분은 뜨거우므로 손으로 잡을 때는 손잡이 부분을 잡아 주십시오.
- 코드를 전원에서 뽑을 때는 코드가 아니라 플러그를 잡고 뽑아야 합니다.
- 전기 연장선을 사용하지 마십시오.
- 마모성/부식성이 있는 제품으로 기기를 청소하지 마십시오.
- 0°C 이하 또는 35°C 이상에서는 이 기기를 사용하지 마십시오.

보증

이 기기는 가정용으로만 사용하도록 설계되었습니다. 상업용 또는 부적절하게 사용 된 경우 당사의 품질 보증 혜택을 받으실 수 없습니다. 추가 / 전원 코드선은 제품 몸체에 감아서 보관 하시되, 코드선이 꺾이지 않도록 주의 하십시오.

환경보호 우선!



- ① 이 기기는 복구되거나 재활용될 수 있는 가치있는 자재를 포함하고 있습니다.
- ➡ 이 기기를 거주지의 폐기물 회수 장소에 놓아두십시오.

이 사용 설명서는 당사의 홈페이지에서도 찾아볼 수 있습니다. www.tefal.co.kr

Tefal®




EN

KO

SIGNATURE PRO AC

www.tefal.co.kr

1800146735

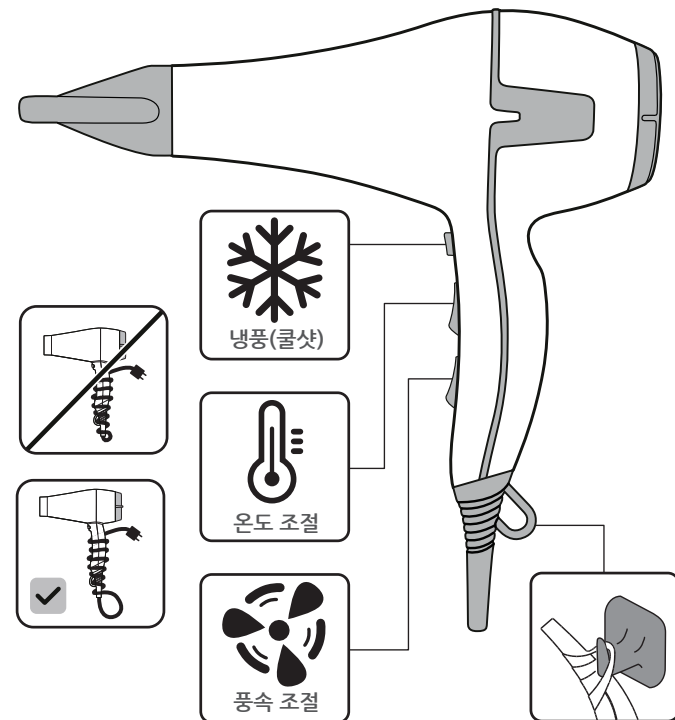

9mm	7mm		
이온 기능	세라믹 코팅	토르말린 코팅	케라틴 & 사인 코팅