

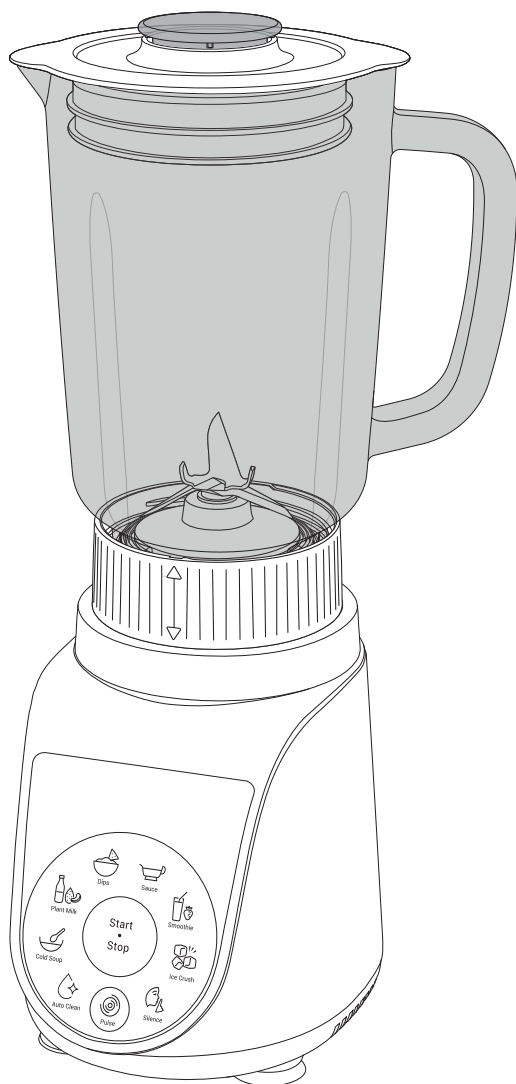
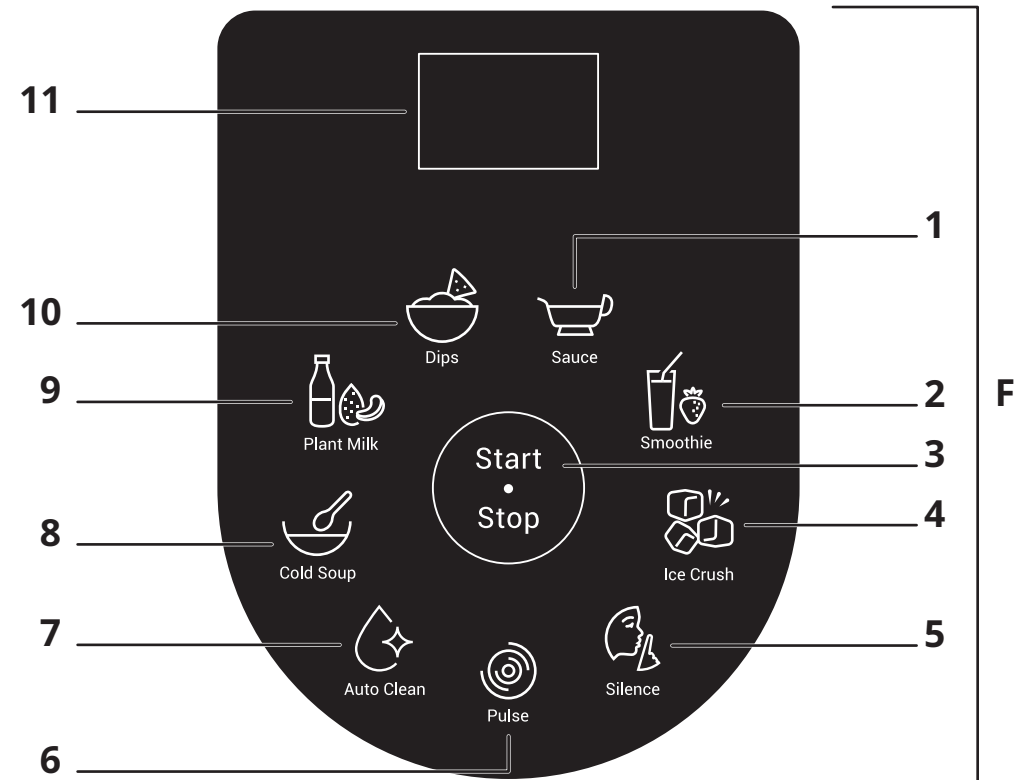











EN

KO

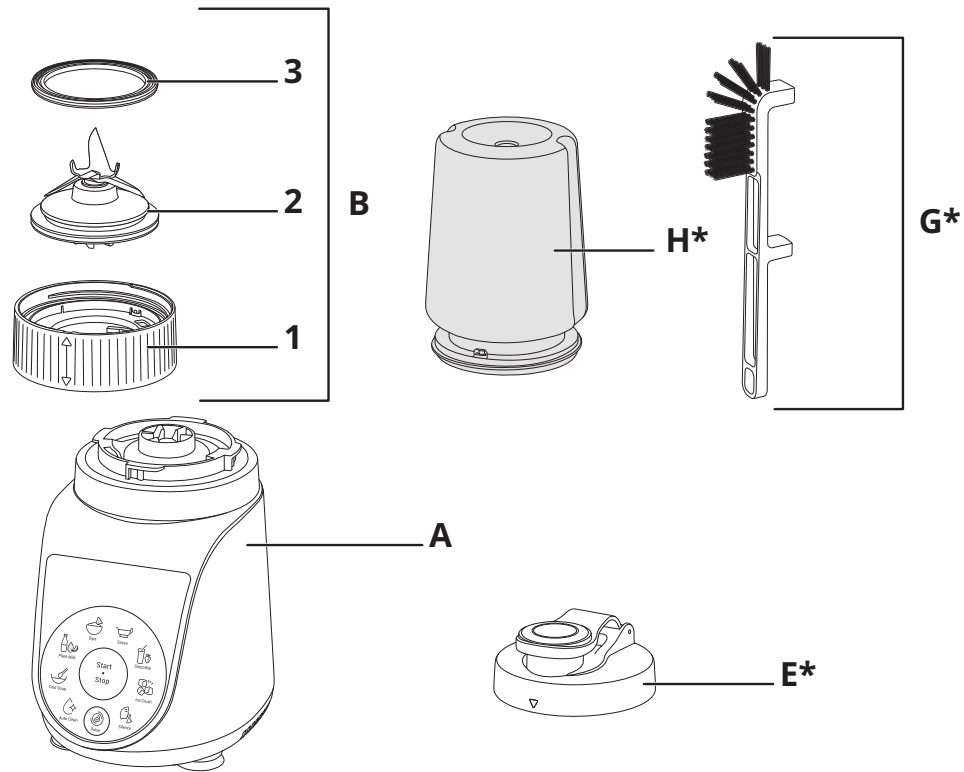

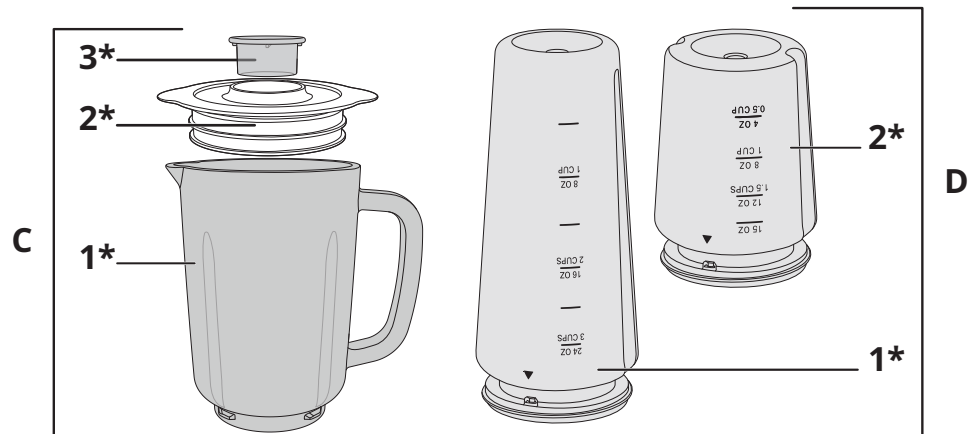

\* depending on model, 모델별 상이

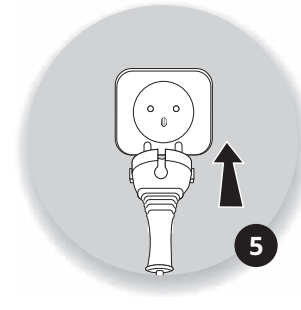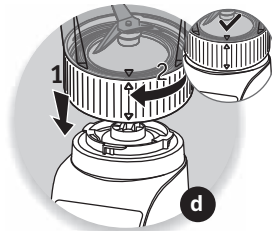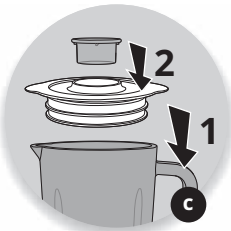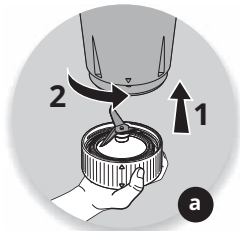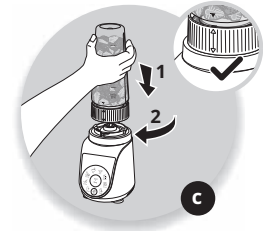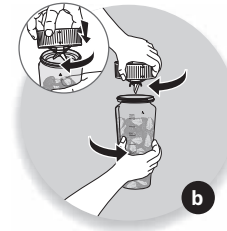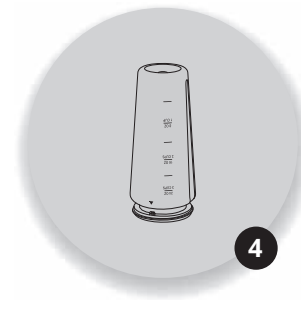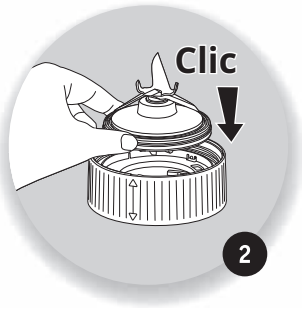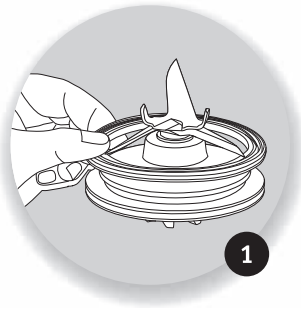

## DESCRIPTION

- A** Motor unit
- B** 1 Locking ring  
2 Powelix blades  
3 Seal
- C** 1\* Glass jar  
2\* Jar cover  
3\* Measuring cap
- D** 1\* On-the-Go bottle 700 ml  
2\* On-the-Go bottle 400 ml
- E\*** On-the-Go bottle lid 400 ml / 700 ml
- F** Screen  
1 Sauce function  
2 Smoothie function
- 3 On/Off button
- 4 Ice crush function
- 5 Silence function
- 6 Pulse function
- 7 Auto clean function
- 8 Cold soup function
- 9 Plant-based milk function
- 10 Dips function
- 11 Screen
- G\*** Cleaning brush
- H\*** Chopper accessory

## CAUTION

The safety instructions are part of the appliance. Read these instructions carefully before using your new appliance for the first time. Keep them in an accessible place so that you can refer to them later. The appliance can only operate if the bottle and the jar are correctly positioned on the motor unit (A).

## BEFORE USING YOUR APPLIANCE FOR THE FIRST TIME

Before using your appliance for the first time, wash parts that come into contact with food (bottle, etc.) with hot soapy water, then rinse.

**WARNING: Do not immerse the appliance in water (neither the motor unit nor the blades unit (A and B2)). Never put the motor unit (A) under running water. Clean the appliance with a damp cloth and dry it carefully. The blades are extremely sharp.**

Check that all parts of the packaging and labels have been removed before using the appliance.

## ASSEMBLING AND FITTING THE JAR OR ON-THE-GO-BOTTLE

Moisten the seal (B3) (even if already fitted on the blades unit by quickly running it under water. Be careful to correctly fit the seal (B3) back onto the Powelix blades (B2). (Fig 1 and 2)

When using the glass jar: assemble the blades unit with the glass jar, add the ingredients into the jar without exceeding the maximum level indicated: 700 ml for all recipes except with Cold plant milk program (maximum quantity of 500 ml).

Hold the jar and screw the locking ring with blades onto the motor unit.

When using an OTG bottle: add the ingredients into the bottle without exceeding the maximum level indicated:

700ml for the 700 ml bottle

400ml for the 400 ml bottle

Place the blade holder with its seal (B3+B2) on the locking ring (B1) (Fig 3d). Turn the bottle (D) upside down and screw the locking ring with blades onto the motor unit (Fig 4c)

**Warning: Do not pour boiling liquids (over 70°C/158°F) into the bottle.**

## USING YOUR APPLIANCE

Put the appliance on a flat, stable, heat-resistant surface away from heat sources or water.

Add your ingredients to the bottle, screw in the blades and place the bottle correctly on the motor unit. Plug in your appliance. Select your program (F) (Fig. 6) and press the Start/Stop button (F3) (Fig. 7).

You can refer to the program table below to help you choose the right program for your recipe.

The appliance starts. The duration of the program until the end of its execution is displayed on the screen (F11).

At the end of each automatic program, the appliance stops automatically and beeps 4 times. To stop your appliance before the automatic program ends, press the Start/Stop button (F3).







**Please note :** Your appliance has a Pulse function (F6). It can be used manually when no program is running. Press and hold the button to mix. Do not exceed 3 minutes of consecutive use.

**WARNING :** In case of overheating, your product is equipped with a thermal fuse that will automatically stop the appliance.

After 3 minutes without use, your appliance will beep twice and start a standby mode. To switch on your appliance again, press the Start/Stop button (F3).

**Please note:** Some coloured foods can stain the inside of the bottle (e.g. carrots). To remove stains, you can use a cloth and a little vegetable oil.

## AUTOMATIC PROGRAMS AVAILABLE

|                  | Automatic programs  | Time    | Sample recipe for the 700 ml bottle or glass jar  | Sample recipe for the 400 ml bottle*  |
|------------------|---|---------|---|---|
| Sauce            |    | 1 min   | <b>Pesto verde</b>  |   |
|                  |   |         | -   | 30 g basil<br>10 g garlic<br>20 g parmesan<br>120 ml olive oil  |
| Smoothie         |    | 1 min   | <b>Vitality blend</b>   |   |
|                  |   |         | 400 ml water<br>150 g carrots<br>75 g banana<br>75 g celeriac   | 220 ml water<br>90 g carrots<br>45 g banana<br>45 g celeriac  |
| Ice crush        |    | 30 secs | <b>Ice</b>  |   |
|                  |   |         | 5 ice cubes 2x2x2 cm (100 g)  | 5 ice cubes 2x2x2 cm (100 g)  |
| Cold soup        |  | 1 min   | <b>Gazpacho</b>   |   |
|                  |   |         | 250 g tomatoes<br>80 g red pepper<br>125 g cucumber<br>40 g onion<br>90 ml water<br>10 ml vinegar<br>10 g concentrated tomato paste | -   |
| Plant-based milk |  | 2 mins  | <b>Almond milk</b>  |   |
|                  |   |         | (max 500ml)<br>460ml water<br>40g almonds   | -   |
| Dips             |  | 1 min   | <b>Hummus</b>   |   |
|                  |   |         | -   | 265 g chickpeas<br>15 g tahini<br>10 g garlic (2 cloves)<br>40 g lemon juice<br>40 g olive oil<br>65 ml water |

OTHER PROGRAMS

|            | Automatic programs | Time        | Sample recipe for the 800ml bottle or glass jar | Sample recipe for the 400 ml bottle*       |
|------------|--------------------|-------------|---|--|
| Silence    |                    | 60 secs     | Banana milkshake                                |  |
|            |                    |             | 250 g banana + 450 ml milk                      | -  |
| Auto Clean |                    | 30 secs     | 700 ml bottle                                   | 400ml bottle                               |
|            |                    |             | 500 ml water + 1 drop of washing-up liquid      | 200 ml water + 1 drop of washing-up liquid |
| Pulse      |                    | 3 mins max. | Program allowing manual pulse mixing            |  |

**WARNING:** Hard foods may leave marks inside the bowl, but this does not affect the efficiency of the appliance.

ACCESSORY

|  | Time   |                       |                      |
|--|--------|-----------------------|----------------------|
|  | 3 secs | 150 g candied apricot | Pulse manual program |

AFTER USING YOUR APPLIANCE

Unplug the appliance.

Pour the mixture out of the bottle (as it is not designed to store food in the fridge or freezer), or screw the cap onto the bottle to take your mixture with you.

Use a damp cloth to clean the motor unit. Dry it carefully.

Never immerse the motor unit in water.

Wash removable parts with water and a few drops of washing-up liquid. For easier cleaning, you can use the "Auto Clean program" (F7). Pour the amount of water indicated in the program table above. You can add a drop of washingup liquid into the bottle but nothing else.

The On-the-Go bottle (D) and its lid (E) can be cleaned in the dishwasher, but the blades, seal and ring are not dishwasher safe. The motor unit must not be cleaned in the dishwasher or submerged in water.

|  | ✗ | ✗ | ✓ |
|--|---|---|---|
|  | ✓ | ✓ | ✓ |
|  | ✓ | ✓ | ✓ |
|  | ✓ | ✗ | ✓ |
|  | ✓ | ✗ | ✓ |
|  | ✓ | ✗ | ✓ |
|  | ✓ | ✓ | ✓ |

## TROUBLESHOOTING TABLE

| Problem   | Cause   | Solutions  |
|---|---|--|
| The appliance does not work                                       | The appliance is not properly plugged in. The bottle is not correctly locked onto the base. | Check that the appliance is plugged in correctly. Lock the bottle properly onto the appliance base.                                |
| Difficulty locking the bottle onto the blade holder               | There is some food in the seal  | Clean the seal   |
| The appliance stops when in use                                   | Motor overheating   | Unplug the appliance. Cooling time is variable and can take up to 30 minutes   |
| Excessive vibrations  | The appliance is not placed on a flat surface   | Place the appliance on a flat surface  |
|   | The volume of ingredients is too large  | Reduce the amount of ingredients in the appliance to the MAX level   |
| Mixture leaking at the base of the bottle                         | The seal or blades are not correctly positioned.  | Refer to the "Assembling and fitting the On-the-Go bottle" section   |
| The bottle surfaces that come into contact with food are stained. | Certain foods (carrots...) may stain parts it comes into contact with.                      | This is normal. All parts can be used safely and do not alter cooked foods. Using oil to clean the appliance will reduce staining. |
| The mixture overflows from the 700ml glass jar                    | The maximum of the jar is not respected   | Do not exceed 700ml on all recipes except with Cold plant milk program (max level of 500ml)  |

## 제품 설명

- A** 모터 본체
 **B**
 1 칼날 지지대
 2 파워엘릭스 칼날
 3 패킹
 **C**
 1\* 유리 용기
 2\* 유리 용기 뚜껑
 3\* 계량컵
 **D**
 1\* 휴대용 물병 700ml
 2\* 휴대용 물병 400ml
 **E\*** 휴대용 물병 뚜껑 400ml/700ml
 **F** 프로그램
 1 페스토/마요네즈(Sauce) 프로그램
 2 스무디(Smoothie) 프로그램

3 작동(Start/Stop) 버튼
 4 얼음 분쇄(Ice crush) 프로그램
 5 저소음(Silence) 프로그램
 6 순간 작동(Pulse) 프로그램
 7 자동 세척(Auto clean) 프로그램
 8 퓨레/콜드 수프(Cold soup) 프로그램
 9 두유(Plant-based milk) 프로그램
 10 후무스/디핑소스(Dips) 프로그램
 11 화면
 **G\*** 세척솔
 **H\*** 다지기 액세서리

## 주의사항

사용설명서는 제품 구성품 중 하나입니다. 제품을 처음 사용하기 전, 본 사용설명서를 주의 깊게 읽어 보시기 바랍니다. 또한 나중에 참조할 수 있도록 찾기 쉬운 곳에 잘 보관하십시오. 용기가 모터 본체(A)에 올바르게 장착되어야 제품이 작동합니다.

## 제품 첫 사용 전

제품을 처음 사용하기 전에 음식물과 접촉하는 부품(믹서 용기 등)을 따뜻한 비눗물로 세척한 후 행귀주세요.

**경고: 모터 본체(A) 및 칼날(B2)을 물에 담그지 마세요. 모터 본체(A)를 절대 흐르는 물에 씻지 마세요. 제품은 젖은 천으로 닦은 후 잘 말려주세요. 칼날은 매우 날카로우니 조심하십시오.**

제품을 작동시키기 전에 모든 포장재를 제거합니다.

## 믹서 용기 및 물병 장착 방법

패킹(B3)을 빠르게 물에 적셔 주세요 (이미 칼날 (B2)에 장착되어 있어도 동일하게 진행). 패킹(B3)을 칼날(B2)에 정확히 장착했는지 확인하세요. (그림 1 및 2 참고)

유리 용기 사용 시: 유리 용기에 칼날을 조립한 후, 최대 눈금선을 초과하지 않도록 재료를 용기에 넣어 주세요. 모든 레시피의 경우 최대 700ml, 두유(Plant milk) 프로그램의 경우 최대 500ml까지 가능합니다.

용기를 잡고 잠금 링과 칼날을 모터 유닛에 돌려 고정하세요.

휴대용 물병 사용 시: 병의 최대 눈금선을 초과하지 않도록 재료를 넣어 주세요.

700ml 병의 경우 최대 700ml

400ml 병의 경우 최대 400ml

패킹이 장착된 칼날 홀더(B3+B2)를 잠금 링(B1)에 놓습니다(그림 3d 참고). 물병(D)을 뒤집어 잠금 링과 칼날을 모터 유닛에 돌려 고정하세요(그림 4c 참고).

**경고: 병에 70°C(158°F) 이상의 뜨거운 액체를 붓지 마세요.**

## 블렌더 작동 시

제품은 열원으로부터 멀리 두고, 물기가 없고 평평한 내열 바닥 위에 두고 사용하십시오.

제품의 전원을 연결하고 프로그램 선택 버튼(F)을 눌러 원하는 프로그램을 선택한 후 작동(Start/Stop) 버튼(F3)을 누릅니다(그림 6 및 7 참고). 아래의 프로그램 표를 참고하여 레시피에 맞는 프로그램을 선택할 수 있습니다.

제품이 작동을 시작하면 프로그램 종료 시까지 남은 시간이 화면(F11)에 표시됩니다.

각 자동 프로그램이 끝나면 제품이 자동으로 멈추며 4번 알람음을 냅니다. 자동 프로그램이 끝나기 전에 제품을 멈추고 싶다면 작동(Start/Stop) 버튼(F3)을 눌러 주세요.







**참고:** 귀하의 기기에는 펄스 기능(F6)이 있습니다. 프로그램이 실행 중이 아닐 때 수동으로 사용할 수 있습니다. 버튼을 길게 눌러 혼합합니다. 연속 사용은 3분을 초과하지 마십시오.

**경고:** 과열 시, 귀하의 제품에는 기기를 자동으로 멈추는 열 퓨즈가 장착되어 있습니다.

3분 동안 사용하지 않으면 기기에서 두 번 울리고 대기 모드가 시작됩니다. 기기를 다시 켜려면 시작/정지 버튼(F3)을 누릅니다.

**참고:** 당근과 같은 색이 진한 식재료는 병 내부에 얼룩이 생길 수 있습니다. 얼룩 제거를 위해 천에 약간의 식물성 오일을 묻혀 닦아 주세요.

## 자동 프로그램


|                             | 자동 프로그램   | 시간  | 700ml 병 또는 유리 병용 샘플 레시피  | 400ml 물병 추천 레시피*   |
|-----------------------------|---|-----|--|--|
| 페스토/<br>마요네즈<br>(Sauce)     |    | 1분  | 바질 페스토   |  |
|                             |   |     | -  | 바질 30g<br>마늘 10g<br>파마산 20g<br>올리브 오일 120ml                            |
| 스무디<br>(Smoothie)           |    | 1분  | 활력 충전 스무디  |  |
|                             |   |     | 물 400ml<br>당근 150g<br>바나나 75g<br>셀러리 75g                                       | 물 220ml<br>당근 90g<br>바나나 45g<br>셀러리 45g                                |
| 얼음 분쇄<br>(Ice crush)        |    | 30초 | 얼음 분쇄(Ice crush)   |  |
|                             |   |     | 얼음 5개(100g)  | 얼음 5개(100g)  |
| 퓨레/콜드<br>수프<br>(Cold soup)  |  | 1분  | 가스파초   |  |
|                             |   |     | 토마토 250g<br>빨강 파프리카 80g<br>오이 125g<br>양파 40g<br>물 90g<br>식초 10ml<br>토마토 소스 10g | -  |
| 두유<br>(Plant-based<br>milk) |  | 2분  | 아몬드 우유   |  |
|                             |   |     | 최대 500ML<br>물 460ml<br>아몬드 40g   | -  |
| 후무스/<br>디핑소스<br>(Dips)      |  | 1분  | 후무스  |  |
|                             |   |     | -  | 병아리콩 265g<br>타히니 15g<br>마늘 10g(두 쪽)<br>레몬즙 40g<br>올리브 오일 40g<br>물 65ml |

## 수동 프로그램

|                          | 자동 프로그램   | 시간    | 700ml 병 또는 유리 병용 샘플 레시피   | 400ml 물병 추천 레시피*     |
|--------------------------|---|-------|---------------------------|----------------------|
| 저소음<br>(Silence)         |  | 60초   | 바나나 밀크셰이크                 |                      |
|                          |   |       | 바나나 250g + 우유 450ml       | -                    |
| 자동 세척<br>(Auto<br>clean) |  | 30초   | 700ml 물병                  | 400ml 물병             |
|                          |   |       | 물 500ml + 식기 세척액 1방울      | 물 200ml + 식기 세척액 1방울 |
| 순간 작동<br>(Pulse)         |  | 최대 3분 | 순간 작동(Pulse)과 혼용 가능한 프로그램 |                      |

**경고:** 단단한 식재료는 용기 내부에 자국을 남길 수 있으나, 이는 제품의 성능에 영향을 주지 않습니다.

## 액세서리

|  | 시간 |          |                   |
|--|----|----------|-------------------|
|  (H*) | 3초 | 건살구 150g | 순간 작동(Pulse) 프로그램 |

## 제품 사용 후

제품의 전원을 분리하세요.

믹서 용기는 냉장고나 냉동고에 보관하는 보관용기가 아닙니다. 사용 후 내용물을 모두 비워냅니다.

모터 본체는 젖은 천으로 닦은 후, 잘 말려 주세요.

모터 본체를 물에 담그지 마세요.

분리 가능한 부품은 물과 약간의 주방용 세제로 세척하세요. 더 쉽게 세척하려면 “자동 세척(Auto clean) 프로그램”(F7)을 사용할 수 있습니다. 위의 프로그램 표에 표시된 만큼의 물을 병에 붓고, 주방용 세제 한 방울을 추가한 후 다른 것은 넣지 마세요.

휴대용 물병(D)과 그 뚜껑(E)은 식기세척기로 세척할 수 있지만, 칼날, 패킹 및 잠금 링은 식기세척기에 안전하지 않습니다. 모터 본체는 식기세척기로 세척하거나 물에 담그면 안 됩니다.

|   |  |  |  |
|---|--|--|---|
|    | ×  | ×  | ✓   |
|    | ✓  | ✓  | ✓   |
|    | ✓  | ✓  | ✓   |
|    | ✓  | ×  | ✓   |
|   | ✓  | ×  | ✓   |
|  | ✓  | ×  | ✓   |
|  | ✓  | ✓  | ✓   |

## 제품이 정상적으로 작동하지 않을 경우

| 문제                              | 원인   | 해결 방법   |
|---------------------------------|--|---|
| 제품이 작동하지 않습니다                   | 전원 코드 가 연결되어 있지 않습니다. 믹서 용기가 정확하게 모터 본체에 장착되어 있지 않습니다. | 제품이 올바르게 전원에 연결되었는지 확인하세요. 믹서 용기를 모터 본체에 올바르게 잠그세요.                 |
| 믹서 용기와 칼날이 결합되지 않습니다.           | 패킹에 음식물이 끼어 있습니다.                                      | 패킹을 세척하세요.  |
| 제품이 사용 중에 정지되는 경우               | 모터 과열  | 제품의 전원을 완전히 끄고 전원코드를 뽑습니다.<br>냉각 시간은 상황에 따라 다르며 최대 30분이 소요될 수 있습니다. |
| 제품 작동 시 심한 진동이 있습니다.            | 제품이 평평한 표면에 놓이지 않았거나, 재료의 양이 너무 많습니다.                  | 제품을 평평한 표면 위에 놓으십시오.<br>재료의 양을 최대 눈금선까지 줄이세요.                       |
| 믹서 용기 바닥에서 음식물이 새어 나옵니다         | 패킹이나 칼날이 올바르게 장착되지 않았는지 확인해주세요.                        | “휴대용 물병 조립 및 장착” 섹션을 참고하세요.   |
| 음식과 접촉하는 병 표면에 얼룩이 생깁니다. (당근 등) | 당근 등 특정 식재료는 접촉하는 부분에 얼룩을 남길 수 있습니다.                   | 이는 정상이며, 모든 부품은 안전하게 사용할 수 있으며 조리된 음식에 영향을 미치지 않습니다.                |
| 내용물이 700ml 유리 용기에서 넘칠 경우        | 용기의 최대 용량을 초과함.  | 모든 레시피는 700ml를 초과하지 말고, 두유(Plant milk) 프로그램의 경우 최대 500ml를 초과하지 마세요. |



EN p. 6 - 10

KO p. 11 - 15