

Tefal®

OptiGrill 2in1 XL

en
ar



Instructions for use

دستور العمل استفاده- تعليمات الاستعمال


- en Please read the “Use & Safety instructions” booklet carefully before first use.
- ar يرجى قراءة كتيب ‘تعليمات الاستخدام والأمان’ بعناية قبل الاستخدام الأول

TABLE OF CONTENTS


• Product description	4
• Positions and interfaces	5
• Cooking level indicator	6
• Before first use	7
• 1. Grill position	8
a) Using an automatic program	8
b) Using the manual mode	11
c) Cooking guide	12
• 2. Barbecue position	13
• End of use	14
• Cleaning	15
• Troubleshooting guide	16

PRODUCT DESCRIPTION

- A. Control panel
- A1. On/Off button
- A2. Frozen food function
- A3. 12 automatic cooking programs
- A4. Manual mode with 4 temperatures
- A5. Confirm selection and start preheating
- A6. Cooking level indicator
- B. Release latch for barbecue position
- C. Side thermostat for barbecue position
- D. Indicator light for barbecue position
- E. Front drip tray
- F. Back drip tray
- G. Bottom plate
- H. Top plate
- I. Power cord

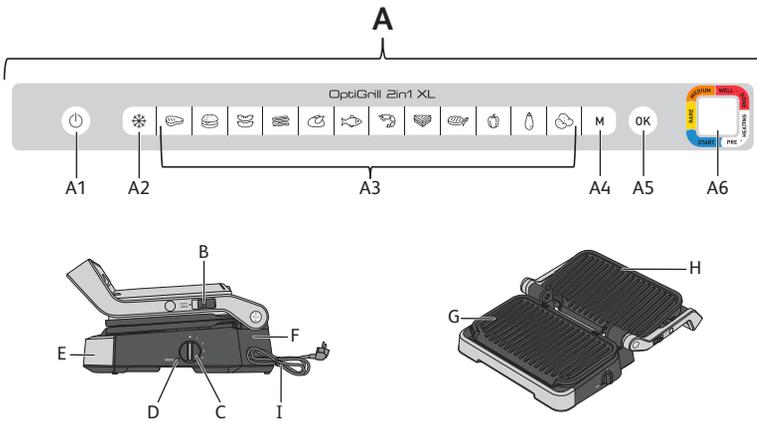

POSITIONS AND INTERFACE

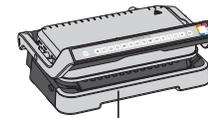



GRILL

Control with the panel on the handle



BARBECUE

Control with the side thermostat

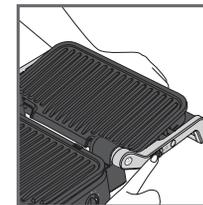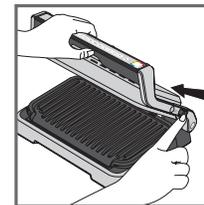

Change to barbecue position:

When opening the grill, hold the latch up and bring the handle to the 180° open barbecue position.

N.B.: Check that the thermostat on the side is on **•** before opening the grill in barbecue position. If the thermostat is not on **•**, the grill will start heating up and will notify you of this with a beep.

COOKING LEVEL INDICATOR

Preheating



Flashing white
coloured light:
preheating in
progress

Steady white
coloured light
and beeping:
ready to cook

Cooking



First
cooking
level in
progress

First
cooking
level
reached

Rare
level in
progress

Rare level
reached

Medium
level in
progress


Medium
level
reached

Well-
done
level in
progress

Well-
done level
reached

For each automatic program, Optigrill lets you know when your food has reached the desired cooking level. When a cooking level is reached, the grill beeps to notify you.


BEFORE FIRST USE

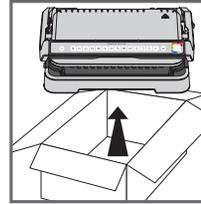



1




2

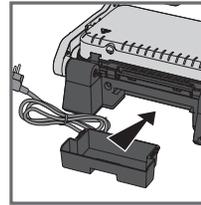

3

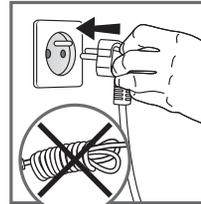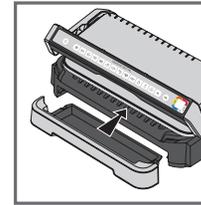

4

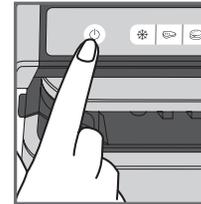

5

1. Remove all packaging materials, stickers and accessories from the inside and the outside of the appliance. Additional colour ring stickers are provided. You can stick your preferred language on the original colour ring.
2. Before using for the first time, thoroughly clean the plates with warm water and a little dishwashing liquid, rinse and dry thoroughly.
3. Position the removable drip trays at the front and at the back of the appliance.
4. Make sure that the upper and lower plates are correctly positioned in the product. Do not activate preheating without the plates. Connect the appliance to the mains supply (the cable must be completely unwound).
5. Press the on/off button.


Caution : Make sure there is no food between the plates

1. GRILL POSITION


A) USING AN AUTOMATIC PROGRAM

12 automatic programs:


red meat, burger, sausage, beef bacon, chicken, fish, seafood, sandwich, pepper, eggplant, potatoes, veggie steak

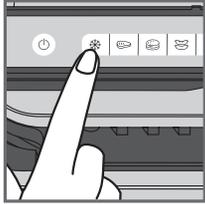


1

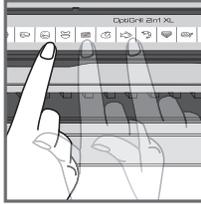

2

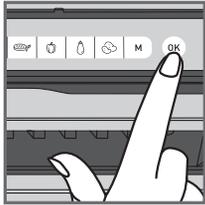

3

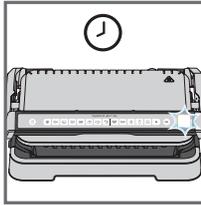

4



5

1. If the food you wish to cook is frozen, press the corresponding button. This function is only available when cooking with the automatic programs, not in manual mode.
2. Select the appropriate cooking program according to the type of food you wish to cook.

Tip, especially for meat: The cooking results on the automatic programs may vary depending on origin, cut and quality of the food being cooked, the programs have been set and tested for good quality food.

Similarly, the thickness of the meat must be taken into account during cooking; you should not cook foods with a thickness greater than 4 cm.

If you are uncertain about which cooking program to use, please refer to the cooking guide page 13.



3. Press the "OK" button: the appliance starts preheating and the cooking level indicator flashes white.

NB: If you have selected the wrong program, turn off the appliance and repeat the steps.



4. Wait for preheating to be complete.
5. When the level indicator stops flashing white and the grill beeps, the preheating is complete, the grill is ready to cook.

Comments: At the end of preheating, if the appliance remains closed, the safety system will turn off the appliance after a while.

1. GRILL POSITION

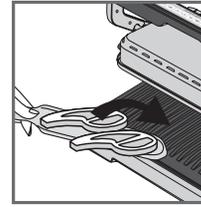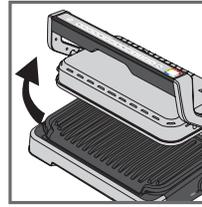

6

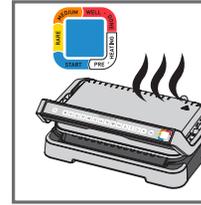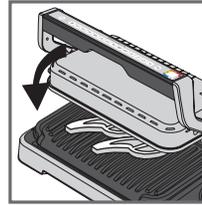

7



8

6. Open the grill and place the food on the cooking plate.

Comments: If the appliance remains open for too long, the safety system will turn off the appliance automatically after a while.

7. Close the appliance to start the cooking cycle. The cooking level indicator turns blue to indicate the cooking is in progress (for the best results, do not open or move your food during the cooking process). The appliance automatically adjusts the cooking cycle (time and temperature) according to the food thickness and quantity.


Note for very thin pieces of food: Close the appliance, the button OK will flash and the indicator will stay steady white until you press OK. Press OK to ensure the appliance recognizes the food and that the cooking cycle starts.

8. According to the level of cooking, the indicator light changes color. While cooking is in progress, a beep alerts you each time a cooking level is reached. When the indicator light is yellow with a beep, food is rare, orange with a beep, food is medium and red with a beep, food is well done.


N.B.: If you like your meat very rare, remove the meat when the cooking level indicator reaches steady blue.

Please note, especially on meat, it is normal that cooking results vary depending on type, quality and origin of food.

1. GRILL POSITION

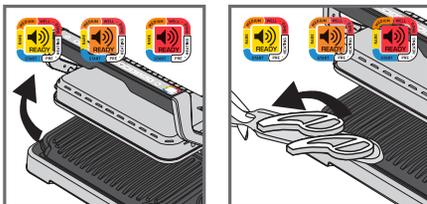

9

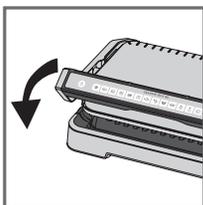

10

9. When the color corresponding to your desired cooking level becomes steady and the beep sounds, open the appliance and remove your food.

Note: If you want to cook food to different personal tastes, open the grill and remove the food when it has reached the desired level and then close the grill and continue cooking the other food. The program will continue its cooking cycle until it reaches the final level.

10. When finished cooking, remove food and close the appliance. The control panel will light up and set itself to 'choice of program' mode.

Comment: The security system will turn off automatically after a while if no program selection is made

Keep warm function

Once the red level is reached, the cooking is finished, the appliance automatically activates the keep warm function, the indicator light is red, and the device begins to beep every 20 seconds. If food is left on the grill, it will continue to cook while the cooking plates cool. You may deactivate the beep by pressing the button "OK".

Note: The security system will power off the appliance automatically after a while.

Cooking a second batch straight away:

Once your first batch of food has finished cooking:

- Make sure that the appliance is closed, and that no food is remaining inside.
- Select the cooking program (this step is necessary even if the program is the same as for the foods you have just finished cooking).
- Press the button "OK" to begin preheating. While preheating, the color level indicator will flash white.
- Once preheating is complete, the appliance will beep, and the indicator light will be steady white.
- The appliance is ready to be used once preheating is complete. Open the grill and place the food inside the appliance.

Important:

- Please note that preheating is required for each new batch. Before preheating, make sure that the appliance is closed, and that no food is remaining inside. Wait for preheating to finish before opening the grill and placing food inside.
- If the new preheating cycle is activated immediately after the end of the previous cycle, the preheating time will be reduced.

1. GRILL POSITION

B) USING THE MANUAL MODE




1



2




3

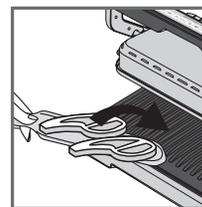

4



5

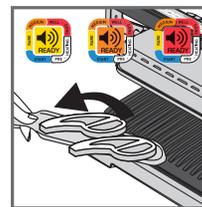

6

1. Select the manual mode and the cooking temperature by clicking on M several times until the colour matches your desired temperature:

	110-125°C
	180-195°C
	220-235°C
	265-285°C

- Press OK to start preheating. The cooking level indicator flashes with the selected colour : preheating in progress. Wait until preheating is finished.
- When the desired temperature is reached, the light stops flashing and the grill beeps: the grill is ready to cook.
- Add the food on the grill, the cooking process begins.
- You can adjust the temperature during cooking.
- Watch the food cook and remove it when you consider it cooked as desired.

1. GRILL POSITION

C) COOKING GUIDE


12 AUTOMATIC COOKING PROGRAMS

	COOKING LEVEL INDICATOR			
				
 BEEF	Very rare (Blue)	Rare	Medium	Well-done
 BURGER	-	Rare	Medium	Well-done
 SAUSAGE	-	-	-	Well-done
 BEEF BACON	-	-	-	Well-done
 CHICKEN	-	-	-	Well-done
 FISH	-	Medium	Medium well	Well-done
 SEAFOOD	-	Medium	Medium well	Well-done
 SANDWICH	-	Lightly cooked	Grilled	Crispy
 VEGGIE STEAK	-	-	-	Grilled
 PEPPER	-	-	Lightly grilled	Grilled
 EGGPLANT	-	-	-	Grilled
 POTATOES	-	-	-	Grilled


MANUAL MODE IN GRILL POSITION

	 from 180°C to 195°C	 from 220°C to 235°C	 from 265°C to 285°C
ZUCCHINI / SQUASH			
TOMATOES			
ASPARAGUS			
MUSHROOMS			
ONIONS			
BROCOLI			
BABY CARROTS			
FENNEL			
SWEET POTATOES			
APPLE SLICES			
PINEAPPLE			
PEACH			


2. BARBECUE POSITION

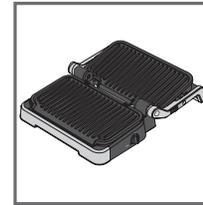


1

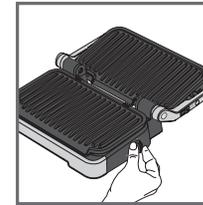


2

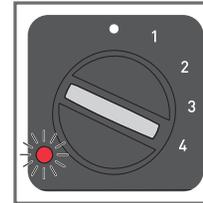


3

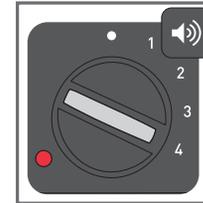


4

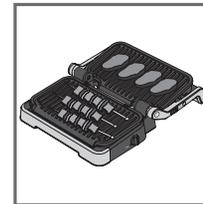

5

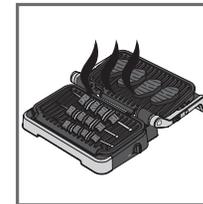

6

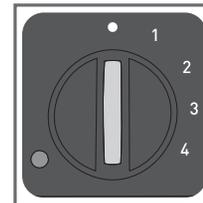

7

1. Open the grill in barbecue position. The cooking is managed with the side thermostat.
2. Select the desired temperature setting. The thermostat sets the same cooking temperature for both plates:


• thermostat off
1: 80-100°C
2: 130-160°C
3: 170-200°C
4: 185-225°C

3. The side light indicator flashes red during preheating.
4. When the light indicator becomes steady red and the grill beeps, the grill is ready to use.
5. Add food on the grill.
6. Watch the food cook and remove it once it is done.
7. Turn off the appliance by setting the thermostat to •.


Comments:

- You can change the temperature during cooking. If it is changed during cooking, the grill will adjust the temperature to the new setting.
- If you cook food on one plate only, use the top one.


END OF USE

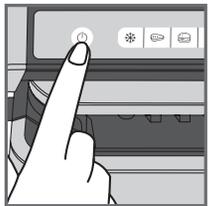


1

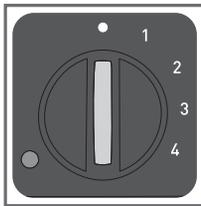

1. Turn off the appliance:
 - Press the on/off button on the handle in grill position.
 - Set the side thermostat to • in barbecue position.
2. Unplug the appliance from outlet.
3. Allow to cool for at least 2 hours. To avoid accidental burns, allow grill to cool thoroughly before cleaning.

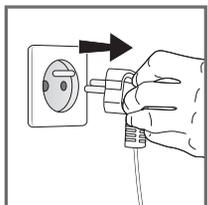


2

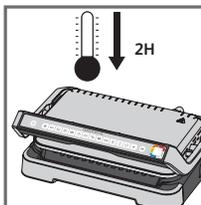


3


CLEANING

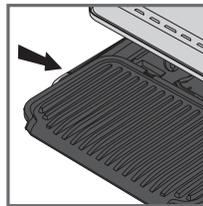


1

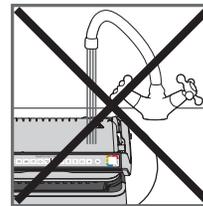


2

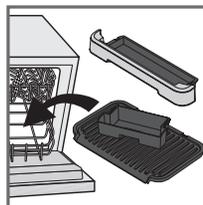


3

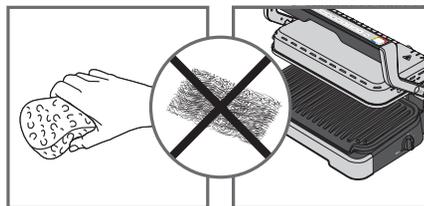

4

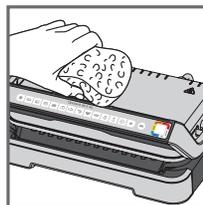

5

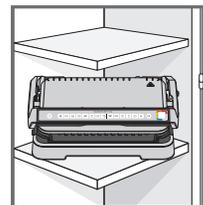

6

1. Before cleaning, unlock and remove the plates and drip trays to prevent damage to the cooking surface. Drain the drip trays and wash them in mild soapy water, then dry thoroughly with a paper towel.
2. Do not immerse the body of grill in water or any other liquid.
3. The appliance and its cord cannot be placed in the dishwasher. The heating elements, visible and accessible parts, should not be cleaned after removing the plates. If they are very dirty, wait until the appliance has completely cooled down and clean them with a dry cloth.
4. If you do not wish to wash the cooking plates and drip trays in the dishwasher, use hot water and a little washing up liquid to clean, then rinse thoroughly to remove any residue. Wipe them carefully with a paper towel.
Do not use metal scouring pads, steel wool or abrasive cleaners to clean any part of the grill, use only nylon or non-metallic cleaning pads.
5. To clean the grill cover, wipe with a warm, wet sponge and dry with a soft, dry cloth.
6. Always make sure the grill is clean and dry before storing.


Any repairs must be carried out by an approved service representative.

Troubleshooting guide


Problem	Cause	Solution
Button  blinking +  Indicator light solid blue + Button  blinking	<ul style="list-style-type: none"> Switching on the appliance or starting an automatic cooking cycle with food and without plates preheating (manual mode is automatically activated). 	<ul style="list-style-type: none"> 2 possible options: <ul style="list-style-type: none"> Choose the temperature setting by pressing the  button and then press OK. Allow to cook, but you must monitor the cooking (manual mode). stop the appliance, remove the food, close the appliance properly, re-program the appliance and wait until end of preheating.
The appliance stops during the cycle of pre-heating or cooking.	<ul style="list-style-type: none"> The appliance has been kept open for too long while cooking. The appliance has been idle too long after the end of warm up or keep warm. 	<ul style="list-style-type: none"> Disconnect the appliance from the outlet and leave for 2-3 mins., restart the process. The next time you use the appliance, make sure you open and close it quick for best cooking results. If the problem occurs again contact your local Tefal customer service.
 The indicator light will blink purple + Button  /  /  /  blinking + Intermittent beeping	<ul style="list-style-type: none"> Appliance failure. Appliance stored or used in a room that is too cold. 	<ul style="list-style-type: none"> Disconnect and reconnect your appliance and immediately restart a preheat cycle. If the problem persists, contact your Customer Service.
The device does not beep.		
 The indicator light will blink purple + Button  blinking + Continuous beeping	<ul style="list-style-type: none"> Appliance failure. 	<ul style="list-style-type: none"> Unplug the appliance and contact customer service.
After preheating, I placed the food inside and closed the appliance,  but the indicator light stays white and cooking does not begin.	<ul style="list-style-type: none"> The quantity of food inside the appliance is greater than 4 cm. The grill was not opened completely when placing the food inside. The appliance does not detect food inside The quantity of food is insufficient, "OK" is blinking. 	<ul style="list-style-type: none"> The quantity of food should not exceed 4 cm. Open the grill completely and close it again. Confirm cooking activation by pressing the button .
The appliance will activate in manual mode +  The indicator light will blink red. + button  temp control and  light fixed	<ul style="list-style-type: none"> Preheating time was cut short. 	<ul style="list-style-type: none"> Monitor the cooking periodically (for use in manual mode). Or Stop the grill, remove food, close the grill, select the new cooking programme you wish to use and wait for the preheating cycle to finish.

الحل	السبب	المشكلة
<ul style="list-style-type: none"> • خياران: - اختر درجة الحرارة عن طريق الضغط أولاً على M الزر ثم OK. اتركها للطهي مع مراقبة عملية الطهي (حيث يتم تشغيل الجهاز في الوضع اليدوي). - أطفئ الجهاز، أخرج المشويات من الجهاز، أغلق الجهاز بشكل صحيح، أعد ضبط البرنامج وانتظر حتى نهاية عملية التسخين. 	<ul style="list-style-type: none"> • تشغيل الجهاز أو بدء عملية الطهي الآلية مع الطعام المشوي بدون تسخين الأواني (يتم تفعيل الوضع اليدوي تلقائياً). 	<ul style="list-style-type: none"> الزر M يومض + المؤشر يضيء بشكل دائم باللون الأزرق + الزر OK يومض
<ul style="list-style-type: none"> • أفضل القابس من الكهرباء، انتظر لمدة 2 إلى 3 دقائق ثم أعد بدء العملية. في المرة القادمة التي تستخدم فيها الجهاز، تأكد من فتحه وإغلاقه بسرعة للحصول على أفضل نتائج طهي. إذا تكررت المشكلة، اتصل بخدمة عملاء المحللة. 	<ul style="list-style-type: none"> • كان الجهاز مفتوحاً لفترة طويلة أثناء الطهي. • لم يتم استخدام الجهاز لفترة طويلة بعد عملية التسخين أو عملية الحفاظ على الدفء. 	<ul style="list-style-type: none"> • الجهاز يتوقف تلقائياً خلال عملية التسخين أو الطهي.
<ul style="list-style-type: none"> • أفضل القابس من الكهرباء، قم بتوصيل الجهاز مرة أخرى فوراً وأبدأ عملية التسخين. إذا لم يتم حل المشكلة، يرجى الاتصال بخدمة العملاء المعتمدة. 	<ul style="list-style-type: none"> • تعطل الجهاز. • المنتج محظور أو مستخدم في بيئة باردة جداً. 	<ul style="list-style-type: none"> مؤشر يومض باللون البنفسجي + زر / / / يومض + نغمة بيب متقطعة. • الجهاز لم يعد يصدر أصوات تنبيهية
<ul style="list-style-type: none"> • أفضل سلك الجهاز واتصل بخدمة العملاء. 	<ul style="list-style-type: none"> • خطأ في الجهاز. 	<ul style="list-style-type: none"> المؤشر يومض باللون الأرجواني +الزر يومض +نغمة إشارة مستمرة
<ul style="list-style-type: none"> • يجب ألا يتجاوز سمك الطعام 4 سم. يتجاوز. 	<ul style="list-style-type: none"> • سمك طعامك أكثر من 4 سم. 	<ul style="list-style-type: none"> بعد التسخين، وضعت الطعام بالداخل وأغلقت الجهاز. تظل الشاشة بيضاء ولم تبدأ عملية الطهي.
<ul style="list-style-type: none"> • افتح الشواية بالكامل ثم ثم أغلقها مرة أخرى. 	<ul style="list-style-type: none"> • لم تفتح الشواية مفتوحة بالكامل، لوضع الشواية وضع الطعام فيها. 	
<ul style="list-style-type: none"> • قم بتأكيد بدء عملية الطهي، بالضغط على الزر OK. 	<ul style="list-style-type: none"> • الطعام غير معترف به الطعام رقيق جداً رقيقاً "OK" ومضات 	
<ul style="list-style-type: none"> • اتركه للطهي وراقب عملية الطهي (حيث يتم تشغيل الجهاز في الوضع اليدوي) أو • أطفئ الشواية، وأزلي الطعام من الشواية أغلق الشواية وحدد البرنامج المطلوب حدد البرنامج المطلوب مرة أخرى ونهاية عملية التسخين. 	<ul style="list-style-type: none"> • وقت التسخين لم ينته بعد. 	<ul style="list-style-type: none"> يتحول الجهاز إلى الوضع اليدوي. + الوضع تومض الشاشة باللون الأحمر + زر M التحكم بدرجة الحرارة OK يضيء بشكل دائم.


1. قم بفك القفل وإزالة الألواح وصواني التقطير قبل التنظيف لتجنب تلف سطح الطهي. أفرغ صواني التقطير، واغسلها بالماء ومنظف خفيف، ثم جففها جيداً بمنشفة ورقية.
 2. لا تغمر جزء الشواية بالماء أو أي سائل آخر.
 3. لا يمكن وضع الجهاز والكابل في غسالة الأطباق. يجب ألا تنظف العناصر الحرارية والأجزاء المرئية والمتاحة بعد إزالة الألواح. إذا كانت مستسخة جداً، انتظر حتى يبرد الجهاز تماماً، ثم نظف العناصر الحرارية بقطعة قماش جافة.
 4. إذا كنت لا ترغب في وضع الألواح الشوائية وصواني التقطير في غسالة الصحون، قم بتنظيفها بالماء الساخن والصابون. اشطفها جيداً بعد ذلك لإزالة البقايا. امسحها بعناية بمنشفة ورقية. لا تستخدم إسفنجة السلك المعدني أو الصوف الفولاذي أو منظفات التنظيف العدوانية لتنظيف أجزاء الشواية؛ استخدم فقط إسفنجة التنظيف المصنوع من النايلون أو أي مادة غير معدنية أخرى.
 5. لتنظيف غطاء الشواية، امسحه بإسفنجة دائمة ورطبة ثم جففه بقطعة قماش ناعمة وجافة.
 6. تأكد من أن الشواية نظيفة وجافة قبل تخزينها.
- جميع الإصلاحات يجب أن يتم إجراؤها من قبل ممثل خدمة العملاء المعتمد.

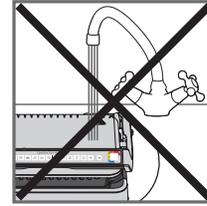



2

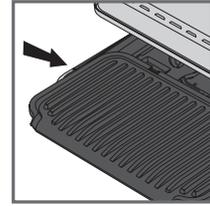


1

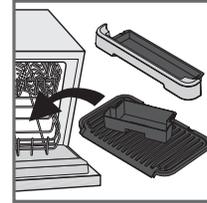

3

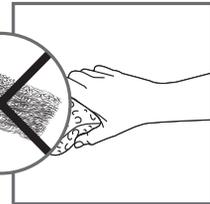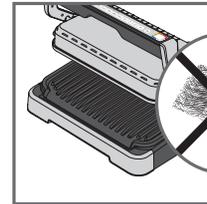

4




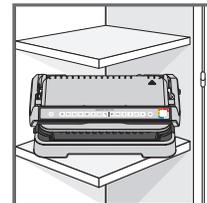


6



5

1. أطفئ الجهاز:
 - اضغط على زر التشغيل/الإيقاف الموجود على المقبض في وضعية الشواء.
 - ضع الترموستات الجانبي في وضعية الشواء على •.
2. أفضل قابس الطاقة للجهاز من القابيس.
3. اترك الجهاز يبرد لمدة ساعتين على الأقل. لتجنب الحروق العرضية، اترك الشواية تبرد تمامًا قبل تنظيفها.

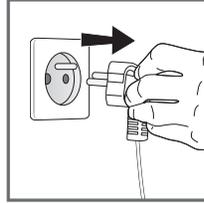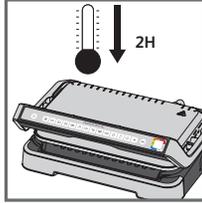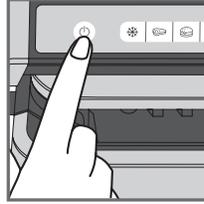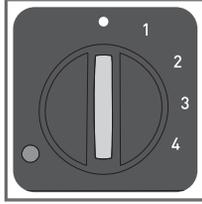

3

2

1. افتح الشواية في وضعية الشواء. يتم التحكم في عملية الطهي عبر الترموستات الجانبي.
2. اختر إعداد الحرارة المطلوب. يقوم الترموستات بضبط نفس درجة حرارة الطهي لكل الصفيحتين:

• إيقاف تشغيل الترموستات

1: 80-100°C

2: 130-160°C

3: 170-200°C

4: 185-225°C

3. المؤشر الضوئي الجانبي يومض باللون الأحمر أثناء التسخين المسبق.
4. عندما يضيء المؤشر الضوئي باللون الأحمر بشكل مستمر ويصدر الشواية أصوات تنبيه، يكون الشواية جاهزًا للاستخدام.
5. ضع الطعام على الشواية.
6. شاهد كيف يتم طهي الطعام، وأزله بمجرد أن يصبح جاهزًا.
7. قم بإيقاف تشغيل الجهاز عن طريق ضبط الترموستات على •.

ملاحظات:


- يمكنك تغيير درجة الحرارة أثناء عملية الطهي. إذا تم تغيير درجة الحرارة أثناء الطهي، يقوم الشواية بضبط درجة الحرارة على الإعداد الجديد.
- إذا كنت تقوم بإعداد الطعام على لوحة واحدة فقط، استخدم اللوحة العلوية.




2




1

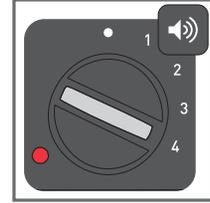

4

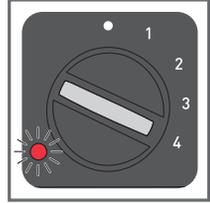


3

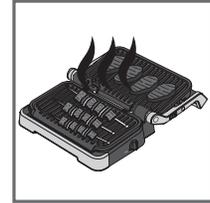

6




5

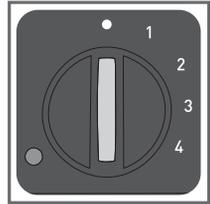

7

ب) في الوضع اليدوي

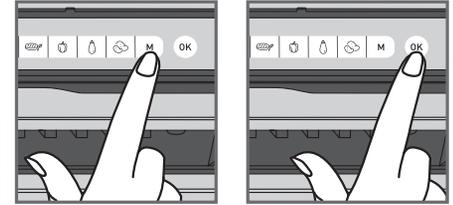


2


1




4

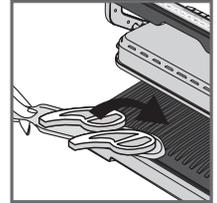

3

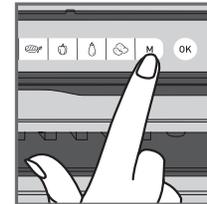

6

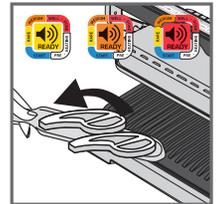

5

1. اختر الوضع اليدوي ودرجة حرارة الطهي بالنقر على 'M' عدة مرات حتى يتطابق لون العرض مع اللون المطلوب لدرجة الحرارة:

110-125°C	
180-195°C	
220-235°C	
265-285°C	

2. اضغط على 'OK' لبدء التسخين المسبق. مؤشر مستوى الطهي يومض باللون المختار: التسخين المسبق جاري. انتظر حتى نهاية عملية التسخين المسبق.
3. عندما تصل الشواية إلى درجة الحرارة المطلوبة، يتوقف المؤشر عن الوميض وتصدر الشواية إشارة صوتية: الشواية جاهزة الآن للطهي.
4. ضع الطعام على الشواية، وتبدأ عملية الطهي.
5. يمكنك تعديل درجة الحرارة أثناء الطهي.
6. راقب الطعام أثناء الطهي، وأزله بمجرد أن يصبح جاهزًا.


ج) دليل الضمان

12 برنامج طهي أوتوماتيكي

عرض مستوى الطهي				
مطهو جيدا	متوسط النضج	قليل النضج	غير نضج	لحم البقر
مطهو جيدا	متوسط النضج	قليل النضج	-	برجر
مطهو جيدا	-	-	-	النقانق
مطهو جيدا	-	-	-	لحم البقر المقدد
مطهو جيدا	-	-	-	دجاج
مطهو جيدا	أكثر طهيًا	متوسط	-	السمك
مطهو جيدا	أكثر طهيًا	متوسط	-	المأكولات البحرية
كرسبي	مشوي	قليل النضج	-	شطيرة
مشوي	-	-	-	شريحة لحم خضروات
مشوي	كرانشي	-	-	الفلفل الحلو
مشوي	-	-	-	الباذنجان
مشوي	-	-	-	بطاطا

الوضع اليدوي في وضع الشواء

من 265° ل 285°	من 220° ل 235°	من 180° ل 195°	
			كوريبيت
			الطماطم
			أسباراجوس
			فطر
			البصل
			البروكلي
			جزرة
			الشمر
			البطاطا الحلوة
			شرائح التفاح
			أناناس
			خوخ

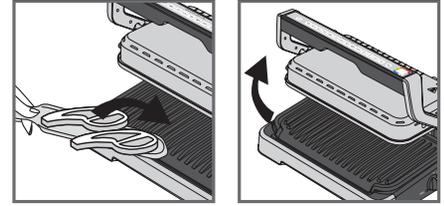

6. افتح الشواية وضع الطعام على لوحة الشواء.

ملاحظات: إذا بقي الجهاز مفتوحًا لفترة طويلة، سيقوم النظام الأمني بإيقاف تشغيل الجهاز تلقائيًا بعد فترة من الزمن.


7. أغلق الجهاز لبدء عملية الشواء. ستتحول شاشة عرض مستويات الشواء إلى اللون الأزرق لتشير إلى أن عملية الشواء قيد التشغيل (لا تفتح أو تحرك الطعام أثناء عملية الشواء لتحقيق أفضل النتائج).

يقوم الجهاز تلقائيًا بتعديل عملية الشواء (الوقت ودرجة الحرارة) تلقائيًا وفقًا لسماك وكمية كل نوع من أنواع الطعام. ملاحظة بشأن الأطعمة الرقيقة جدًا: أغلق الجهاز ستومض زر "OK"، وستظل الشاشة العرض مضاءة باللون الأبيض باستمرار حتى تضغط على "OK". اضغط على "OK" للتأكد من أن الجهاز يتعرف على الطعام

ويبدأ عملية الشواء.

8. تتغير العرضة للألوان بحسب درجة النضج. خلال عملية الطهي، يتم إصدار صوت إنذار ينبهك في كل مرة يتم فيها بلوغ درجة نضج معينة. إذا تحولت العرضة للون الأصفر وتتم إصدار صوت إنذار، فإن اللحم نيئ (نادر)، وإذا كانت تشع باللون البرتقالي، فهو متوسط، وإذا كانت تشع باللون الأحمر، فهو مطهو جيدًا.

ملاحظة: إذا كنت ترغب في أن يكون اللحم أكثر نداءً، أخرجه عندما تظل العرضة لدرجة النضج تشع بلون أزرق ثابت. يرجى ملاحظة أنه من الطبيعي أن تختلف نتائج الطهي اعتمادًا على نوع وجودة ومصدر المواد الغذائية.

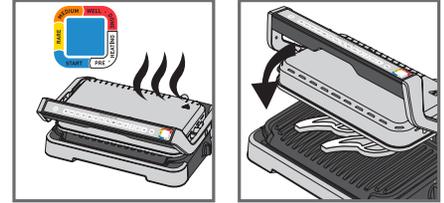


6


7



8

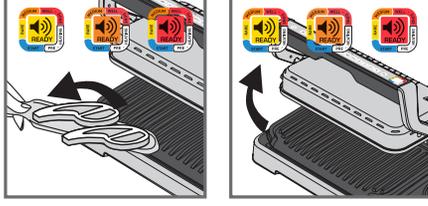

9

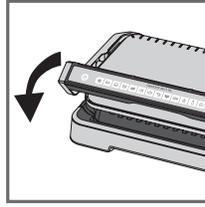

10

وظيفة الحفاظ على الدفء

عندما يتم الوصول إلى المرحلة الحمراء، يكون عملية الطهي قد اكتملت. ينشط الجهاز تلقائيًا وظيفة الحفاظ على الدفء، ويضيء المؤشر باللون الأحمر، ويصدر الجهاز نغمات تنبيه كل 20 ثانية. إذا كانت هناك أطعمة لا تزال على الشواية، تستمر عملية الطهي أثناء تبريد صفائح الشواء. يمكنك تعطيل النغمة التنبيهية بالضغط على زر "OK".

ملاحظة: يقوم نظام الأمان بإيقاف تشغيل الجهاز تلقائيًا بعد فترة.

لتحضير وجبة ثانية فورًا:

بمجرد الانتهاء من الوجبة الأولى:

أ) تأكد من أن الجهاز مغلق ولا يوجد طعام داخله.

ب) اختر برنامج الطهي (هذه الخطوة ضرورية حتى لو كان نفس البرنامج المستخدم للطعام الذي أعدته لتتو).

ج) اضغط على زر "OK" لبدء التسخين المسبق. أثناء التسخين المسبق، تومض مؤشر مستوى اللون بالأبيض.

د) بمجرد الانتهاء من التسخين المسبق، يصدر الجهاز إشارة صوتية، ويضيء المؤشر بشكل دائم باللون الأبيض.

هـ) الجهاز جاهز للاستخدام بمجرد الانتهاء من التسخين المسبق. افتح الشواية وضع الطعام في الجهاز

مهم:

- يرجى ملاحظة أنه من الضروري التسخين المسبق لكل حصة جديدة. تأكد قبل التسخين المسبق من أن الجهاز مغلق ولا توجد أي أطعمة داخل الجهاز ثم انتظر حتى يكتمل التسخين المسبق قبل فتح الشواية ووضع الأطعمة داخلها.
- إذا تم تفعيل دورة التسخين المسبق الجديدة مباشرة بعد انتهاء الدورة السابقة، فإن وقت التسخين المسبق سيقبل.

التسخين المسبق



مؤشر ضوئي وامض
باللون الأبيض: جاري
التسخين المسبق

عرض ثابت باللون
الأبيض ونغمته ثنائية:
جاهز للطهي

الطهي



مستوى هطهو
متمماتم
الوصول إليه

مستوى هطهو
جيداً قيد
التشغيل

تم الوصول
إلى مستوى
متوسط

مستوى
متوسط قيد
التشغيل

المستوى نادر
جداً تم الوصول
إليه

المستوى نادر
قيد التشغيل

المرحلة الأولى
من الطهي تم
الوصول إليها

المرحلة الأولى
من الطهي
جارية

يُعلمك OptiGrill في كل برنامج تلقائي، بمجرد أن تصل الأطعمة إلى درجة النضج المطلوبة. عندما تُحقق الأطعمة درجة النضج، تُضيء مؤشرات اللون بشكل دائم، ويُصدر الشواية إشارة صوتية.





الشواء

التحكم عبر لوحة التحكم الموجودة على المقبض



مشواة

التحكم بواسطة الترموستات الجانبي

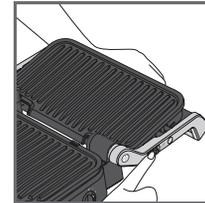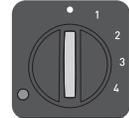

تحويل إلى وضعية الشواء:


عند فتح الشواية، احتفظ بالقلب مرفوعاً وضع المقبض في وضعية الشواء 180 درجة.

تنبيه: تأكد من أن الترموستات الجانبي مضبوط على • قبل فتح الشواية في وضعية الشواء. إذا لم يكن الترموستات على •، فإن الشواية تبدأ بالتسخين وتنهك بواسطة إشارة صوتية

وصف المنتج

جدول المحتويات

- A. لوحة التحكم
A1. زر التشغيل/الإيقاف
A2. وظيفة للأطعمة المجمدة
A3. برنامجًا تلقائيًا للطهي
A4. وضع يدوي مع 4 درجات حرارة
A5. تأكيد الاختيار وبدء التسخين المسبق
A6. مؤشر مستوى الطهي
B. فك قفل وضعية الشواء
- C. الترموستات الجانبي لوضعية الشواء
D. مؤشر ضوئي لوضعية الشواء
E. صينية التقطير الأمامية
F. صينية التقطير الخلفية
G. اللوحة السفلية
H. اللوحة العليا
I. كابل الطاقة

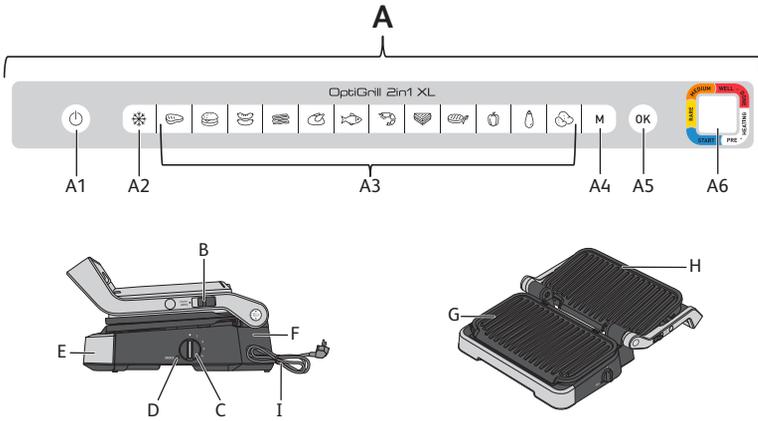

- وصف المنتج 29
- المواضيع والواجهات 28
- مؤشر مستوى الطهي 27
- قبل الاستخدام الأول 26
- 1. وضعية الشواية 25
- (أ) باستخدام برنامج تلقائي 25
- (ب) استخدام الوضع اليدوي 22
- (ج) دليل الطهي 21
- 2. وضعية الشواء 20
- نهاية الاستخدام 19
- التنظيف 18
- دليل استكشاف الأعطال وإصلاحها 17

en 3-16
ar 17-30