


EN

KO


Tefal®

POP RICE COOKER

www.tefal.com









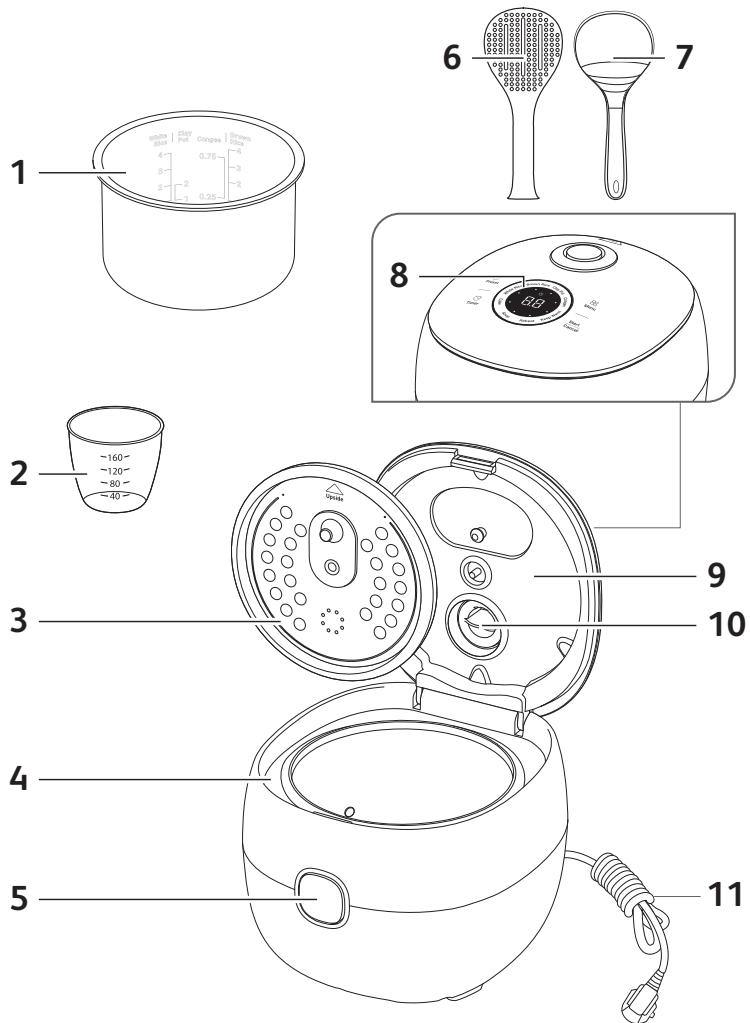


8

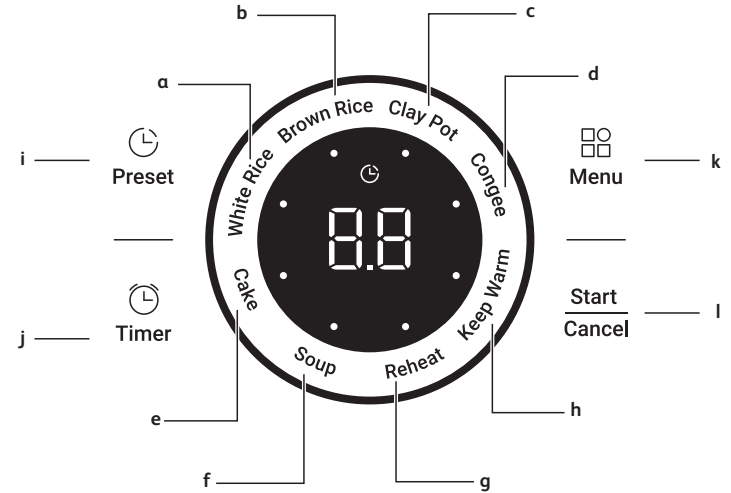

*The icons for "Preset", "Timer", and "Menu" have different designs in different regions. Please find the corresponding cooking program using the corresponding alphabet.

**예약(Preset), "시간(Timer)", "메뉴(Menu)" 아이콘은 지역별로 디자인이 다를 수 있습니다. 각 알파벳에 해당하는 조리 프로그램을 확인하여 사용해 주십시오.

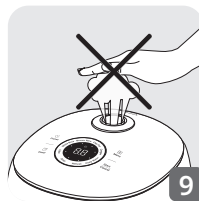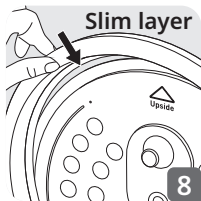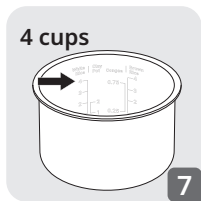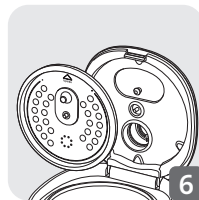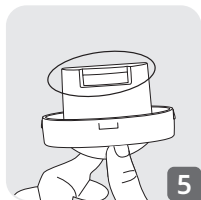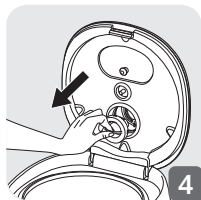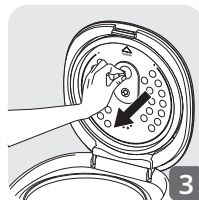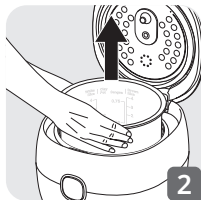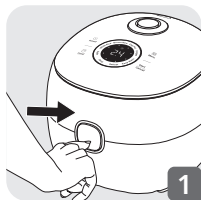

DESCRIPTION

- | | | | | |
|---|---------------------|------------|--------------|-------------|
| 1 | Cooking Pot | e. | Cake | |
| 2 | Measuring cup | f. | Soup | |
| 3 | Removable inner lid | g. | Reheat | |
| 4 | Housing | h. | Keep Warm | |
| 5 | Lid opening button | i. | Preset | |
| 6 | Rice spatula | j. | Timer | |
| 7 | Soup spoon | k. | Menu | |
| 8 | Control panel | l. | Start/Cancel | |
| | a. | White Rice | 9 | Lid |
| | b. | Brown Rice | 10 | Steam valve |
| | c. | Clay Pot | 11 | Power cord |
| | d. | Congee | | |

IMPORTANT SAFEGUARDS SAFETY INSTRUCTIONS

Read and follow the instructions for use. Keep them safe.

- This appliance is not intended to be operated by means of an external timer or a separate remote-control system.
- This appliance shall not be used by children from 0 year to 8 years.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 years and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.

*The icons for "Preset", "Timer", and "Manual" have different designs in different regions. Please find the corresponding cooking program using the corresponding number.

**"Preset"/"Timer"/"Manual" 아이콘은 지역에 따라 디자인이 다릅니다.

해당 숫자로 해당 조리 프로그램을 찾아 주세요.

- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- **WARNING:** Keep the appliance out of reach from young children, particularly during use and cool down.
- This appliance is for household use only. It is not intended for even use in the following applications and the guarantee will not apply for:
 - Staff pantry areas in shops, offices and other working environments
 - Farm houses
 - By clients in hotels, motels and other such kind of residential type environments
 - Bed and breakfast type environments

- **If your appliance is fitted with fixed power cord:** if the power supply cord is damage, it must be replaced by the manufacturer, the manufacturer's after-sales service department or similarly qualified person in order to avoid any danger.
- The appliance must not be immersed in water or any other liquid.
- Use a damp cloth or sponge with washing up liquid to clean the accessories and parts in contact with food. Rinse with a damp cloth or sponge. Dry carefully.
- If the symbol  is marked on the appliance, this symbol means " Caution: surfaces may become hot during use ".
- Caution: the surface of heating element is subject to residual heat after use.
- Caution: risk of injury due to improper use of the appliance.
- Caution: if your appliance has a removable power cord, do not spill liquid on the connector.
- Always unplug the appliance:
 - immediately after use
 - when moving it
 - prior to any cleaning or maintenance
 - if it fails to function correctly

- Burns can occur by touching the hot surface of the appliance, the hot water, steam or the food.
- During cooking, the appliance gives out heat and steam. Keep face and hands away.
- Do not obstruct the steam outlet.
- For any problems or queries please contact our After Sales Care or consult our website.
- The appliance can be used up to an altitude of 2000 m.

- For your safety, this appliance complies with the safety regulations and directives in effect at the time of manufacture (Low-voltage Directive, Electromagnetic Compatibility, Food Contact Materials Regulations, Environment...).
- Check that the power supply voltage corresponds to that shown on the appliance (alternating current).
- Given the diverse standards in effect, if the appliance is used in a country other than that in which it is purchased, have it checked by an approved service centre.

CONNECTING TO THE POWER SUPPLY

- Do not use the appliance if:
 - the appliance or the cord is damaged.
 - the appliance has fallen or shows visible damage or does not work properly.
 - In the event of the above, the appliance must be sent to an approved service centre. Do not take the appliance apart yourself.
- Do not leave the cord hanging.
- Always plug the appliance into an earthed socket.
- Do not use an extension lead. If you accept liability for doing so, use only an extension lead which is in good condition, has an earthed plug and is suited to the power of the appliance.
- Do not unplug the appliance by pulling on the cord.

USING

- Use a flat, stable, heat-resistant work surface away from any water splashes.
- Do not allow the base of the appliance to come into contact with water.
- Never try to operate the appliance when the pot is empty or without the pot.
- The cooking function/knob must be allowed to operate freely. Do not prevent or obstruct the function from automatically changing to the keep warm function.
- Do not remove the pot while the appliance is working.
- Do not put the appliance directly onto a hot surface, or any other source of heat or flame, as it will cause a failure or danger.
- The pot and the heating plate should be in direct contact. Ensure that no food or liquid is inserted between the pot and heating plate.
- Do not place the appliance near a heat source or in a hot oven, as serious damage could result.
- Do not put any food or water into the appliance until the pot is in place.
- Respect the levels indicated in the recipes.
- Should any part of your appliance catch fire, do not attempt to put it out with water. To smother the flames use a damp tea towel.
- Any intervention should only be made by an approved or authorized service centre with original spare parts.
- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.

PROTECT THE ENVIRONMENT

- Your appliance has been designed to operate for many years. However, when you decide to replace it, remember to think about how you can contribute to protecting the environment.
- Before discarding your appliance you should remove the battery from the timer and dispose of it at a local civic waste collection centre (according to model).

Environment protection first!



- ① Your appliance contains valuable materials which can be recovered or recycled.
- ➔ Leave it at a local civic waste collection point.

BEFORE FIRST USE

- Open the lid by pressing the opening button on the lid – Fig. 1.
- Remove the pot – Fig. 2.
- Remove the inner lid by pushing outwards with the knob – Fig. 3.
- Remove the steam valve by pushing outwards – Fig. 4.
- Clean them with a sponge and washing liquid.
- Put the valve back with the steam outlet up (Fig. 5) until it is well installed.
- Put the inner lid back to position with Upside mark in the front. – Fig. 6.
- Wipe the outside of the appliance and the lid with a damp cloth.
- Dry off carefully.

USING YOUR RICE COOKER

Measuring the ingredients - Max capacity of the bowl

- The graduated markings on the inside of the bowl are given in cups, these are used for measuring the amount of water when cooking rice and other cereals.
- To cook congee or soup, the maximum quantity of all ingredients including water should not exceed 0.75 cup mark inside the bowl.
- The maximum quantity of water + rice should not exceed the 4 cups mark inside the bowl – Fig. 7.
- The plastic cup provided with your appliance is for measuring rice and other cereals.

COOKING GUIDE - White Rice For Example

Measuring cups of white rice	Water level in the bowl (+ rice)	Serving person
1	1	1
2	2	2
3	3	3
4	4	4

Note: Add water following up the water level mark. Always add the rice first otherwise you will have too much water.

To cook 0.5cup of white rice, you may add 130ml of water depending on your preference.

COOKING PROGRAMS

All the programs

- Press “ Menu” to choose the programs. The light of the chosen program will be on.
- Then pressing the “Start/Cancel” button, a smiling face effect will appear on the display first, and then the cooking will begin.
- After cooking, it will enter keep warm automatically with “Warm” indicator on.

Note:

- Countdown logic for white rice, brown rice and clay pot: The countdown starts in the last 10 minutes, counting down in minutes.
- Countdown logic for congee, soup and cake: If the set time is greater than 1.5 hours, the countdown proceeds in hours; If the set time is 1.5 hours or less, the countdown proceeds in minutes.

Clay Pot

- Add rice, water and other ingredients in the pot, select “Clay Pot” and then press “Start/Cancel” button to start cooking.
- Press “Start/Cancel” button to resume cooking.

Tips: you may add some oil to get a more crispy result.

Cake

You may use “Cake” function to make homemade cakes with our rice cooker!

Here is an example of how to make a plain sponge cake.

Ingredient	Egg (pcs)	Sugar (g)	Milk (g)	Corn Oil (g)	Wheat Powder (g)	Default Baking Time (Min.)
Quantity	3	30	30	30	60	90

Steps:

1. Separate egg yolk and egg white.
2. Whisk egg white and add sugar in 3 times. Whisk until it gets foamy and fluffy. (You may add several drops of pure lemon juice or white vinegar to have a better foamy effect.)

3. Mix egg yolks, milk, corn oil and wheat powder until smoothy.
4. Add the step 2 mixture to the step 3 mixture. Be careful not to stir hard, so that the foams can be protected.
5. Pour the mixture to the rice cooker cooking pot
6. Select "Cake" function.
7. Press "Start/Cancel" to start baking.
8. When is time elapsed, it will turn into keep warm status automatically.
9. Enjoy your fluffy spongy cake~

You may add nuts, vanilla, berries or other ingredients to enrich the flavour.

Preset – Preset cooking finish time

You may set the cooking finish time in advance with "Preset" function.

- Choose the cooking programs. Note some programs do not have "Preset" function (see the chart below)
- Press to "Preset" button to set the finish time. For example, if you set "8.5", that means the rice/cooking will be ready in 8.5 hours.
- Press "Start/Cancel" button to complete the setting.
- You may enjoy your meal at the time you set!

Note:

- The minimum preset time should be longer than cooking time, otherwise the product will start cooking immediately.
- The unit is "h"
- When the Preset time is between 10h and 20h, the minimum adjustable unit is 1h; when the Preset time is less than 10h, the minimum adjustable unit is 0.5h.

Keep Warm

- Recommendation: in order to keep the quality of food taste, please limit the holding time within 6h.
- Press "Menu" to choose "Keep Warm". The light of the chosen program will be on.
- Press "Start/Cancel" to start or cancel "Keep Warm" program.

Timer

You may set the cooking time with "Timer" function.

- Choose the cooking programs. Note some programs do not have "Timer" function (see the chart below)
- Press to "Timer" button to set the cooking time. For example, if you set "1.0", that means the rice/cooking will be ready in 1 hour.
- Press "Start/Cancel" button to complete the setting.

Note:

- The unit is "h"
- The minimum adjustable unit is 0.5h.

NFC:

- Turn on the NFC function in the phone settings and enable internet connection.
- Bring the phone close to the NFC logo on the panel.
- The phone will pop up information about product-related recipes.

Note:

- Due to differences in phone models, the NFC signal may sometimes be insensitive. Try moving the phone slightly while scanning.

PROGRAMS

Cooking Programs		Cooking time		Temperature adjustment	Preset		Timer	MAX Capacity	Automatic keep warm
		Default	Range		Range	Step			
1	White Rice	Auto	NA	NA	Cooking time-24h	10-24h/1h <10h/0.5h	NA	4	YES
2	Brown Rice	Auto	NA	NA	Cooking time-24h		NA	4	YES
3	Congee	1.5h	1-4 h	NA	Cooking time-24h		<4h/0.5h	0.75	YES
4	Soup	1.5h	1-4 h	NA	Cooking time-24h			0.75	YES
5	Clay Pot	Auto	NA	NA	NA	NA	NA	2	YES
6	Cake	1.5h	NA	NA	NA	NA	NA	NA	YES
7	Reheat	Auto	NA	NA	NA	NA	NO	NA	YES
8	Keep Warm	12h	0-12h	NA	NA	NA	NA	NA	NA

CLEANING AND MAINTENANCE

- Please ensure the rice cooker is unplugged and completely cooled down before cleaning and maintenance.
- It is strongly advised to clean the appliance after each use with a sponge.
- The accessories (Spoon / Spatula / Measuring Cup) are dishwasher safe. The cooking pot can be washed in the dishwasher, however to ensure its durability, we recommend you to use hand washing with soapy water and soft sponge. (Some dishwasher detergents are very corrosive and the edge of your pot could slightly change its aspect over time. This does not affect the cooking performances but could damage its cosmetic.)

Taking care of the pot

For the pot, carefully follow the instructions below:

- To ensure the maintenance of pot quality, it is recommended not to cut food in it.
- Use the plastic spoon provided or a wooden spoon (avoid metal spoon) so as to avoid damaging the pot surface.
- To avoid any risk of corrosion, do not pour vinegar into the pot.

- Scouring powders and abrasive sponges are not recommended.
- If food has stuck to the bottom, you may put water in the pot to soak for a while before washing.
- Dry the pot carefully.

Cleaning the inner lid and valve

- Remove the inner lid by pushing outwards with the knob – Fig. 3. You may also remove the silicon ring of the inner lid for cleaning.
- Remove the steam valve by pushing outwards – Fig. 4.
- Clean them with a sponge and washing up liquid.
- Put the valve back with the steam outlet up (Fig. – 5) until it is well installed.
- Put the silicon ring back: insert the lid with Upside mark in the front to the slim layer(the back layer) of the silicon ring. Make sure the front side facing outside. – Fig 8.
- Put the inner lid back to position with Upside mark in the front. – Fig. 6.

Cleaning and care of the other parts of the appliance

- Clean the outside of the Rice Cooker, the inside of the lid and the cord with a damp cloth and wipe dry. Do not use abrasive products.
- Do not use water to clean the interior of the appliance body as it could damage the heat sensor.

NOTE

- Do not open the lid during cooking as steam will escape and this will affect the cooking time and the taste.
- On completion of cooking, when the “Keep Warm” indicate light is on, stir the rice and then leave it in the rice cooker for a few minutes longer in order to get perfect rice with separate grains.
- **Do not touch the heating element when the product is powered on.**
- **Carefully wipe the outside of the pot (especially the bottom). Make sure that there are no foreign residues or liquid underneath the pot and on the heating element.**
- **Never place your hand on the steam outlet during cooking, as there is a danger of burns– Fig. 9.**
- **Only use the inner pot provided with the appliance.**
- **Do not pour water or put ingredients in the appliance without the pot inside.**

TROUBLESHOOTING

Malfunction description	Cause	Solution
Any indicator light off and no heating.	Appliance not plugged in.	Appliance not plugged in. Check the power cord is plugged in the socket and on the mains.
Any indicator light off and no heating.	Circuit board damage or has a connection error E0/E1.	Send to authorized service center for repair.
Steam leakage during use.	Lid is not properly closed.	Open and ensure the lid is closed properly.
	Steam valve incorrectly position or incomplete	Stop the cooking (unplug the product) and check the valve is complete (2 parts locked together) and well positioned
	Silicon ring is not properly installed.	Refer to IFU to install silicon ring correctly.
	Lid or steam valve gasket is damaged	Send to the authorized service center for repair.
Overflow	Circuit board or sensor damage	
E0	The sensor on the lid open or short circuit.	
E1	The sensor on the bottom open or short circuit.	

설명

- | | |
|-------------|----------|
| 1 내솔 | e. 베이킹 |
| 2 계량컵 | f. 국물요리 |
| 3 분리형 내부 뚜껑 | g. 데우기 |
| 4 본체 | h. 보온 |
| 5 뚜껑 열림 버튼 | i. 예약 |
| 6 밥주걱 | j. 시간 |
| 7 국자 | k. 메뉴 |
| 8 조작부 | l. 시작/취소 |
| a. 백미 | 9 뚜껑 |
| b. 현미 | 10 스팀 밸브 |
| c. 솔밥 | 11 전원 코드 |
| d. 죽 | |

중요한 안전 조치 안전 지침

사용 설명서를 읽고 따르십시오. 안전하게 보관하십시오.

- 본 제품은 외부 타이머나 별도의 리모컨을 통해 외부 타이머스위치를 사용하여 작동하도록 고안된 제품이 아닙니다.
- 이 제품은 0세부터 8세까지의 어린이는 사용할 수 없습니다.
- 8세 이상의 어린이일지라도 감독하는 사람이 있거나 안전하게 제품을 사용하는 방법과 발생할 수 있는 위험을 인식하고 있을 경우에만 이 제품을 사용할 수 있습니다. 세척 및 유지관리는 주위에 감독하는 사람이 있는 경우에 한하여 8세 이상의 어린이가 진행할 수 있습니다. 제품과 전선은 8세 미만 어린이의 손이 닿지 않는 곳에 보관하십시오.

- 제한된 신체적, 감각적, 정신적 능력을 지녔거나 경험이나 지식이 부족한 사람일지라도 감독하는 사람이 있거나 안전하게 제품을 사용하는 방법과 발생할 수 있는 위험을 인식하고 있을 경우 이 제품을 사용할 수 있습니다.
- 어린이가 제품을 가지고 놀아서는 안 됩니다.
- 안전에 대한 책임을 질 수 있는 성인이 제품 사용을 감독하거나 지시하지 않는 한 신체적, 감각적, 정신적 능력이 제한되었거나 경험 및 지식이 부족한 사람(어린이 포함)은 이 제품을 사용할 수 없습니다.
- 어린이가 제품을 가지고 장난치지 않도록 철저히 감독하십시오.
- 경고: 제품을 사용 중이거나 제품이 아직 뜨거운 경우 어린이의 손이 닿지 않는 곳에 두십시오.
- 이 제품은 가정에서만 사용할 수 있습니다. 본 제품은 다음과 같은 용도로 사용하기 위해 설계되지 않았으며, 이러한 경우에는 품질 보증 혜택을 받을 수 없습니다.
 - 가게, 사무실 및 기타 영업장소 내 직원용 식료품 저장 공간
 - 농장 시설
 - 호텔, 모텔 및 이와 유사한 숙박시설 내에서 고객 접대용
 - 아침 식사를 제공하는 숙박시설
- **제품에 고정형 전원 코드가 장착된 경우:** 전원 코드가 손상된 경우 위험을 방지하기 위해 반드시 공인된 당사 서비스 센터를 통해 전원 코드를 교체하십시오.
- 제품을 물이나 기타 액체에 담그지 마십시오.

- 음식과 접촉하는 부속품과 부위는 주방 세제를 묻힌 젖은 천이나 스펀지로 닦아주십시오. 물에 적신 천이나 스펀지를 사용하여 행구십시오. 잘 건조시킵니다.
- 제품에 ▲ 표시가 있는 경우 “주의: 사용 중 표면이 뜨거워질 수 있음”을 의미합니다.
- 주의: 열원 표면은 사용 후 잔열이 남아있을 수 있습니다.
- 주의: 제품을 부적절하게 사용할 경우 부상의 위험이 있습니다.
- 주의: 제품에 분리형 전원 코드가 장착된 경우 커넥터에 액체를 흘리지 마십시오.
- 다음의 경우 제품 플러그를 항상 뽑으십시오.
 - 사용 직후
 - 제품을 이동할 때
 - 세척 또는 점검 전
 - 정상적으로 작동하지 않는 경우
- 제품의 뜨거운 표면, 뜨거운 물, 스팀 또는 음식을 만지면 화상을 입을 수 있습니다.
- 조리 중에는 제품에서 열과 스팀이 나옵니다. 얼굴과 손을 가까이 대지 마십시오.
- 스팀 배출구를 막지 마십시오.
- 문제 발생 시 또는 문의 사항이 있는 경우 서비스 센터에 연락하거나 당사 웹 사이트를 참조하십시오.
- 본 제품은 고도 2,000m 이하의 실내에서만 사용할 수 있습니다.

- 본 제품은 고객의 안전을 위해 제조 시 적용되는 안전 규정 및 지침(저전압 지침, 전자파 적합성, 식품 접촉 소재 규정, 환경 규정 등)을 준수합니다.
- 전원 공급 장치 전압이 제품에 표시된 전압(교류)과 일치하는지 확인하십시오.
- 국가마다 서로 다른 표준이 시행되고 있으므로, 이 제품을 구입한 곳이 아닌 다른 국가에서 사용할 때에는 반드시 공인 서비스 센터에서 확인을 받으십시오.

전원 공급 장치에 연결 중인 경우

- 다음과 같은 경우에는 제품을 사용하지 마십시오.
 - 제품 또는 전원 코드가 손상된 경우
 - 제품을 떨어뜨렸거나 눈에 보이는 손상이 있거나 제대로 작동하지 않는 경우
 - 위와 같은 상황이 발생한 경우, 반드시 공인 서비스 센터로 제품을 보내십시오. 제품을 직접 분해하지 마십시오.
- 전원 코드를 느슨하게 늘어뜨리지 마십시오.
- 접지 처리된 소켓에만 이 제품을 연결하십시오.
- 연장 케이블을 사용하지 마십시오. 사용에 따른 책임을 감수하는 경우에만, 상태가 양호하고 접지 플러그가 있으며 제품의 전력에 적합한 연장 케이블을 사용하십시오.
- 무리하게 코드를 잡아 당겨 뽑지 마십시오.

사용

- 물이 튀지 않는 평평하고 안정적인 내열성 작업대에서 사용하십시오.
- 제품 하단부가 물에 닿지 않도록 하십시오.
- 내솔이 비어 있거나 내솔이 없는 상태에서 제품을 작동시키지 마십시오.
- 조리 기능/조절 노브가 자유롭게 작동할 수 있어야 합니다. 보온 기능으로 자동 전환되는 것을 방해하거나 막지 마십시오.
- 제품이 작동 중일 때는 내솔을 분리하지 마십시오.
- 제품을 뜨거운 표면이나 기타 열원 또는 불꽃 위에 직접 올려놓지 마십시오. 고장 또는 위험이 발생할 수 있습니다.
- 내솔과 열판은 밀착되어 있어야 합니다. 내솔과 열판 사이에 음식물이나 액체가 들어가지 않도록 하십시오.
- 제품이 열원이나 뜨거운 오븐 근처에 두지 마십시오. 심각한 손상이 발생할 수 있습니다.
- 내솔이 제자리에 고정될 때까지 음식이나 물을 제품에 넣지 마십시오.
- 레시피에 표시된 분량을 반드시 지켜 주십시오.

- 제품의 일부에 불이 붙었을 경우, 물을 사용하여 진화하지 마십시오. 불꽃을 끄려면 플러그를 뽑은 후 젖은 행주를 사용하십시오.
- 모든 수리는 반드시 승인된 서비스 센터에서 정품 부품으로만 진행해야 합니다.
- 제품을 사용하지 않을 때, 조립, 분해 또는 청소하기 전에 반드시 제품을 전원에서 분리하십시오.

환경 보호

- 제품은 수년 동안 작동하도록 설계되었습니다. 그러나 제품을 교체하실 경우 환경 보호에 기여하기 위한 방법을 함께 고려해 주시기 바랍니다.
- 제품을 폐기하기 전에, 타이머에 장착된 배터리를 분리한 후 해당 지역의 폐기물 수거 장소에 폐기해 주시기 바랍니다(모델에 따라 다름).

환경을 보호하세요!



- ① 제품에는 복원하거나 재활용할 수 있는 값진 재료들이 들어 있습니다.
 ♻️ 해당 지역 분리수거함에 배출하시기 바랍니다.

처음 사용 전

- 열림 버튼을 눌러 뚜껑을 엽니다(그림 1).
- 내솔을 꺼냅니다(그림 2).
- 손잡이를 바깥쪽으로 당겨 내부 뚜껑을 분리합니다(그림 3).
- 스팀 배출구를 바깥쪽으로 당겨서 분리합니다(그림 4).
- 스펀지와 세제를 이용해 세척하십시오.
- 스팀 배출구가 위를 향하도록 밸브를 다시 끼운 후, 완전히 고정될 때까지 눌러 장착합니다(그림 5).
- 'Upside' 표시가 전면을 향하도록 내부 뚜껑을 제자리에 끼우세요. (그림 6).
- 젖은 천으로 제품 표면과 뚜껑을 닦아 줍니다.
- 잘 건조시킵니다.

밥솥 사용 시

재료 계량 - 내솔 최대 용량

- 내솔 안쪽에 표시된 눈금은 컵 단위로 되어 있으며, 이는 쌀이나 기타 곡류를 조리할 때 물의 양을 계량하는 데 사용됩니다.
- 죽 또는 수프를 조리하려면 물을 포함한 모든 재료의 최대 양이 용기 내부에 0.75컵 표시를 초과하지 않아야 합니다.

- 물과 쌀을 합한 최대 수량은 용기 내부의 4컵 표시선을 초과해서는 안 됩니다 (그림 7).
- 제품과 함께 제공되는 플라스틱 컵은 쌀 및 기타 곡류 측정에 사용됩니다.

조리 안내 - 백미 조리 예시		
백미 계량컵	내술의 물의 양 (쌀 포함)	제공 인원 수
1	1	1
2	2	2
3	3	3
4	4	4

참고: 물높이 표시선을 따라 물을 넣어 주십시오. 항상 쌀을 먼저 넣으십시오. 그렇지 않으면 물이 너무 많아질 수 있습니다.

백미 0.5컵을 조리할 때는 기호에 따라 물을 약 130ml 정도 넣을 수 있습니다.

요리 프로그램

모든 프로그램

- “메뉴”를 눌러 프로그램을 선택합니다. 선택한 프로그램의 표시등이 켜집니다.
- 그다음 “시작/취소” 버튼을 누르면 먼저 화면에 웃는 얼굴 이모티콘이 나타나며, 이후 조리가 시작됩니다.
- 조리 후 자동으로 보온 상태로 전환되며 “보온” 표시등이 켜집니다.

참고:

- 백미, 현미, 술밥 조리 시 시간 표시 방식: 마지막 10분부터 분 단위로 남은 시간이 표시됩니다.
- 죽, 수프 및 베이킹 조리 시 카운트다운 방식: 설정된 시간이 1.5시간 이상일 경우, 남은 시간은 시간 단위로 표시됩니다. 설정된 시간이 1.5 시간 이하일 경우, 남은 시간은 분 단위로 표시됩니다.

술밥

- 내술에 쌀, 물, 기타 재료를 넣은 후 “술밥” 모드를 선택하고, “시작/취소” 버튼을 눌러 조리를 시작하십시오.
 - “시작/취소” 버튼을 눌러 조리를 다시 시작하십시오.
- 팁: 기름을 약간 첨가하면 더 고슬고슬하게 만들 수 있습니다.

베이킹

“베이킹” 기능을 사용하여 밥솥으로 홈메이드 케이크를 만들 수 있습니다. 다음은 일반 스펀지 케이크를 만드는 방법의 예시입니다.

재료	달걀 (개)	설탕 (g)	우유 (g)	옥수수유 (g)	밀가루 (g)	기본 조리 시간 (분)
수량	3	30	30	30	60	90

단계:

1. 달걀노른자와 흰자를 분리합니다.
2. 달걀흰자를 휘핑하면서 설탕을 3번에 나누어 넣습니다. 거품이 풍성하고 부드럽게 올라올 때까지 휘핑하십시오. (레몬즙이나 흰 식초를 여러 방울 넣으면 거품을 더 잘 만들 수 있습니다.)
3. 달걀노른자, 우유, 옥수수 기름, 밀가루를 넣고 부드럽게 섞습니다.
4. 2단계에서 만든 흰자 거품을 3단계 반죽에 넣고 섞어줍니다. 거품이 꺼지지 않도록 세게 저어서는 안 됩니다.
5. 내술에 재료를 붓습니다.
6. 베이킹” 기능을 선택합니다.
7. “시작/취소”를 눌러 베이킹을 시작합니다.
8. 조리 시간이 완료되면 자동으로 보온 모드로 전환됩니다.
9. 폭신폭신했던 스펀지 케이크를 맛있게 즐기십시오.

견과류, 바닐라, 베리 또는 기타 재료를 첨가하여 풍부한 맛을 즐길 수 있습니다.

예약 - 조리 종료 시간 사전 설정

- “예약” 기능으로 조리 완료 시간을 미리 설정할 수 있습니다.
- 조리 프로그램 선택 일부 조리 프로그램에는 “예약” 기능이 제공되지 않을 수 있습니다. 자세한 내용은 아래 표를 참조하십시오.
 - 완료 시간을 설정하려면 “예약” 버튼을 누르십시오. 예를 들어 “8.5”를 설정하면 밥이나 조리가 8.5시간 후에 완료된다는 의미입니다.
 - “시작/취소” 버튼을 눌러 설정을 완료합니다.
 - 설정한 시간에 식사를 즐길 수 있습니다!

참고:

- 예약 시간은 반드시 조리 시간보다 길어야 합니다. 그렇지 않으면 즉시 조리가 시작됩니다.
- 단위는 “h”(시간)입니다.

-예약 시간이 10시간에서 20시간 사이인 경우, 최소 조정 단위는 1 시간입니다. 예약 시간이 10시간 미만인 경우, 최소 조정 단위는 0.5 시간입니다.

보온

- 권장 사항: 음식의 맛과 품질 유지하려면 보온 시간을 6시간 이내로 제한하십시오.
- “메뉴”를 눌러 “보온”을 선택합니다. 선택한 프로그램의 표시등이 켜집니다.
- “시작/취소”를 눌러 “보온” 프로그램을 시작하거나 취소합니다.

시간

- “시간” 기능으로 조리 시간을 설정할 수 있습니다.
- 조리 프로그램 선택 일부 조리 프로그램에는 “시간” 기능이 제공되지 않을 수 있습니다. 자세한 내용은 아래 표를 참조하십시오.
- “타이머” 버튼을 눌러 조리 시간을 설정합니다. 예를 들어 “1.0”을 설정하면 밥이나 조리가 1시간 후에 완료된다는 의미입니다.
- “시작/취소” 버튼을 눌러 설정을 완료합니다.

참고:

- 단위는 “h”(시간)입니다.
- 최소 조정 단위는 0.5시간입니다.

NFC:

- 휴대폰 설정에서 NFC 기능을 켜고, 인터넷 연결을 활성화하십시오.
- 패널의 NFC 로고 근처에 휴대폰을 가까이 대십시오.
- 제품 관련 레시피에 대한 정보가 휴대폰에 표시됩니다.

참고:

- 휴대폰 기종에 따라 NFC 신호가 잘 인식되지 않을 수 있습니다. 스캔하는 동안 휴대폰을 약간 움직여 보십시오.

프로그램

요리 프로그램	조리 시간		온도 조절	예약		타이머	최대 용량	자동 보온
	기본	범위		범위	단계			
1 백미	자동	해당 없음	해당 없음	조리 시간 - 24시간	10~24 시간/1 시간 10시간 미만/0.5 시간	해당 없음	4	예
2 현미	자동	해당 없음	해당 없음	조리 시간 - 24시간		해당 없음	4	예
3 죽	1.5시간	1~4 시간	해당 없음	조리 시간 - 24시간		4시간 미만/0.5 시간	0.75	예
4 국물요리	1.5시간	1~4 시간	해당 없음	조리 시간 - 24시간		4시간 미만/0.5 시간	0.75	예
5 술밥	자동	해당 없음	해당 없음	해당 없음	해당 없음	해당 없음	2	예
6 베이킹	1.5시간	해당 없음	해당 없음	해당 없음	해당 없음	해당 없음	해당 없음	예
7 재가열	자동	해당 없음	해당 없음	해당 없음	해당 없음	해당 없음	해당 없음	예
8 보온	12시간	0~12 시간	해당 없음	해당 없음	해당 없음	해당 없음	해당 없음	해당 없음

세척 및 관리

- 세척 및 관리 전에 전기 배설의 플러그를 뽑고 완전히 식었는지 확인하십시오.
- 사용 후에는 항상 스펀지로 제품을 세척하는 것을 권장합니다.
- 액세서리(스푼/주걱/계량컵)는 식기세척기에서 사용할 수 있습니다. 내솔은 식기세척기로 세척할 수 있지만, 내구성을 위해 비눗물과 부드러운 스펀지로 직접 세척해 사용하는 것이 좋습니다. (일부 식기세척기 세제는 부식성이 매우 강하며, 내솔 가장자리는 시간이 지남에 따라 변형될 수 있습니다. 조리 성능에는 영향을 주지 않지만 외관을 손상시킬 수 있습니다.)

내솔 관리

- 내솔에 대한 내용은 아래 지침을 주의 깊게 따르십시오.
- 내솔의 품질을 유지관리하기 위해, 내솔 내부에서 직접 음식을 자르지 마십시오.
- 내솔 표면 손상을 방지하기 위해, 제공된 플라스틱 손가락이나 나무 손가락을 사용하시고 금속 손가락은 사용하지 마십시오.
- 부식 위험을 방지하기 위해 식초를 내솔에 넣지 마십시오.
- 연마제와 거친 스펀지는 사용하지 마십시오.
- 음식물이 바닥에 늘어붙은 경우 세척 전에 내솔에 물을 넣어 잠시 동안 담가 둘 수 있습니다.
- 내솔을 충분히 건조하십시오.

내부 뚜껑과 밸브 세척

- 내부 뚜껑을 손잡이로 바깥쪽으로 당겨 분리합니다(그림 3). 내부 뚜껑의 실리콘 링을 분리하여 세척할 수도 있습니다.
- 스팀 배출구를 바깥쪽으로 당겨 분리합니다(그림 4).
- 스펀지와 주방용 세제를 사용해 세척하십시오.
- 스팀 배출구가 위를 향하도록 밸브를 다시 끼운 후, 제대로 고정될 때까지 눌러 주십시오(그림 5 참조).
- 실리콘 링을 다시 끼웁니다. ‘Upside’ 표시가 앞을 향하도록 뚜껑을 실리콘 링의 얇은 층(뒤쪽 층)에 끼우세요. 앞면이 바깥쪽을 향하는지 확인합니다(그림 8).
- ‘Upside’ 표시가 전면을 향하도록 내부 뚜껑을 제자리에 끼우세요. (그림 6).

제품의 기타 부품 세척 및 관리

- 밥솥의 외부, 뚜껑 안쪽, 전원 코드는 젖은 천으로 닦은 후 마른 천으로 물기를 제거하십시오. 연마성 제품을 사용하지 마십시오.
- 열 센서가 손상될 수 있으므로 제품 본체 내부를 물을 사용하여 세척하지 마십시오.

참고

- 조리 중에는 뚜껑을 열지 마십시오. 증기가 새어 나와 조리 시간과 맛에 영향을 줄 수 있습니다.
- 조리가 완료되어 “보온” 표시등이 켜지면, 밥을 한 번 저어준 뒤 밥솥 안에 몇 분간 더 두면 고슬고슬한 밥을 지을 수 있습니다.
- **제품의 전원이 켜져 있을 때 열판 등 가열 부위를 절대 만지지 마십시오.**
- **내술 바깥쪽(특히 바닥면)을 조심스럽게 닦아줍니다. 내술 바닥과 열판 위에 이물질이나 액체가 없는지 확인하십시오.**
- **조리 중에는 스팀 배출구에 손을 올리지 마십시오. 화상의 위험이 있습니다(그림 9).**
- **제품과 함께 제공된 내술만 사용하십시오.**
- **내술 없이 본체에 직접 물을 붓거나 재료를 넣지 마십시오.**

문제 해결

오작동 설명	원인	해결 방법
모든 표시등이 꺼져 있고 가열도 되지 않습니다.	제품이 전원에 연결되지 있지 않습니다.	제품이 전원에 연결되지 있지 않습니다. 전원 코드가 소켓과 전원에 연결되어 있는지 확인하십시오.
모든 표시등이 꺼져 있고 가열도 되지 않습니다.	회로 기판이 손상되거나 연결 오류 E0/E1이 발생합니다.	공인 서비스 센터로 보내십시오.
사용 중 스팀이 누출됩니다.	뚜껑이 제대로 닫히지 않았습니다.	뚜껑을 열고 제대로 닫혔는지 확인하십시오.
	스팀 밸브의 위치가 잘못되었거나 완전히 장착되지 않음	취사 중지(제품의 전원을 분리)하고 밸브가 완전히(2개 부품이 서로 잠겨 있음) 제대로 배치되었는지 확인하십시오.
	실리콘 링이 제대로 설치되지 않습니다.	실리콘 링을 올바르게 설치하려면 사용설명서를 참조하십시오.
	뚜껑 또는 스팀 밸브 개스킷이 손상되었습니다.	공인 서비스 센터에서 점검이 필요합니다.
내용물 넘침	회로 기판 또는 센서 손상	
E0	뚜껑의 센서가 단선 또는 합선되었습니다.	
E1	바닥의 센서가 단선 또는 합선되었습니다.	

EN

p. 5 - 16

KO

p. 17 - 27